MAY 20 1982

830-A-14

NAS1.26:3552

NASA Contractor Report 3552

ORIGINAL

COMPLETED

An Electronic Control for an Electrohydraulic Active Control Landing Gear for the F-4 Aircraft

Irving Ross and Ralph Edson

CONTRACT NAS1-16420
APRIL 1982

NASA

156

NASA Contractor Report 3552

An Electronic Control for an Electrohydraulic Active Control Landing Gear for the F-4 Aircraft

Irving Ross and Ralph Edson
Hydraulic Research Textron, Inc.
Valencia, California

Prepared for
Langley Research Center
under Contract NAS1-16420

NASA
National Aeronautics
and Space Administration

Scientific and Technical
Information Branch

1982

Blank Page

CONTENTS

		Page
1.0	SUMMARY	1
2.0	INTRODUCTION	1
3.0	DYNAMIC ANALYSIS OF F-4 ACTIVE CONTROL LANDING GEAR	2
3.1	PREFACE	2
3.2	SYMBOLS	2
3.3	DYNAMIC SIMULATION MATH MODELS	8
3.3.1	Linear Model	8
3.3.2	Nonlinear Model	8
3.4	CORRELATION OF LINEAR AND NONLINEAR MODELS	9
3.5	LOOP COMPENSATION	15
3.6	VERTICAL DROP ANALYTICAL RESULTS	28
3.6.1	Vertical Drop, Case I	28
3.6.2	Vertical Drop, Case 2	38
3.6.3	Rollout Over Repaired Bomb Crater	47
4.0	HARDWARE	57
5.0	SOFTWARE	59
6.0	CONCLUSION	59
7.0	RECOMMENDATIONS	59
8.0	REFERENCE	86

CONTENTS (Continued)

Page

APPENDIX

A DIGITAL SCALING..... 61

B MICROPORCESSOR PROGRAM..... 68

FIGURES

3-1 Illustration of Variables in Nonlinear Simulation of Simplified Vertical Drop Case..... 10

3-2 F-4 Landing Gear Metering Pin Area Versus Strut Stroke..... 11

3-3 Open-Loop, No Compensation Frequency Response..... 12

3-4 F-4 Gear, Open-Loop, No Compensation Frequency Response..... 13

3-5 F-4 Gear, Open-Loop, No Compensation Frequency Response..... 14

3-6 Open-Loop Linear Model Without Compensation..... 16

3-7 Open-Loop Nonlinear Model, ±200 LBF Input..... 17

3-8 Compensation..... 18

3-9 Compensation..... 19

3-10 Nyquist Plot-Compensation..... 20

3-11 No Compensation..... 21

3-12 90 Hz Notch..... 22

CONTENTS (Continued)

		Page
3-13	90 Hz Notch and Lead/Lag.....	23
3-14	Totally Compensated Loop.....	24
3-15	Case 2 Comp: Notch at 90 Hz.....	25
3-16	Compensation-Notch @ 90 Hz + Lead/Lag @ 617, 6170 rad/sec.....	26
3-17	Totally Compensated Loop.....	27
3-18	Block Diagram of Linear Math Model.....	29
3-19	Case 1.....	30
3-20	Case 1.....	31
3-21	Case 1 Passive Gear.....	32
3-22	Case 1 Active Gear.....	33
3-23	Case 1 Passive Gear.....	34
3-24	Case 1 Active Gear.....	35
3-25	Case 1 Active Gear.....	36
3-26	Case 1 Active Gear.....	37
3-27	Case 2.....	39
3-28	Case 2.....	40
3-29	Case 2 Passive Gear.....	41
3-30	Case 2 Active Gear.....	42
3-31	Case 2 Passive Gear.....	43
3-32	Case 2 Active Gear.....	44

CONTENTS (Concluded)

		Page
3-33	Case 2 Active Gear.....	45
3-34	Case 2 Active Gear.....	46
3-35	Bomb Crater Profile.....	48
3-36	Bomb Crater Landing.....	49
3-37	Bomb Crater Landing.....	50
3-38	Bomb Crater Landing Passive Gear.....	51
3-39	Bomb Crater Landing Active Gear.....	52
3-40	Bomb Crater Landing Passive Gear.....	53
3-41	Bomb Crater Landing Active Gear.....	54
3-42	Bomb Crater Landing Active Gear.....	55
3-43	Bomb Crater Landing Active Gear.....	56
5-1	Software Flow Chart.....	60

1.0 SUMMARY

The electronic controller described in this report is a modification of the controller which was designed under NASA Contract NAS1-14459 and fully documented in Reference 1.

As in the original design, the controller continuously compares the kinetic energy of the aircraft with the work potential of the gear until the work potential exceeds the kinetic energy. The wing/gear interface force present at this condition becomes the command force to a servo loop which maintains the wing/gear interface force at this level by providing a signal to an electrohydraulic servovalve to port flow into or out of the landing gear.

Analytical results indicate that the controller provides significant reductions in forces sustained by the aircraft during vertical drops and radical reductions in forces during rollout over repaired bomb craters.

2.0 INTRODUCTION

Hydraulic Research Textron (HRT) was retained under NASA Contract NAS1-16420 to design a controller for an active control landing gear (ACLG) to be used on the F-4 aircraft. The design was a modification of the controller originally designed for a 2948 kg. (6,500 lb) aircraft and described in detail in Reference 1.

The design was to be based on a digital computer simulation using a linear model of the aircraft and landing gear. However, it became apparent early in the program that the linear model was not adequate by itself to predict performance under certain phases of landing where nonlinear relationships prevail. Therefore extensive use was made of the HRT nonlinear model as well as the linear model to achieve the final design. The parameters of the aircraft/landing gear system were supplied by NASA.

The problem was similar to that encountered in the original design. However, the aircraft is heavier and the stroke of the strut is greater so that new scaling requirements are imposed. These are discussed in Appendix A.

3.0 DYNAMIC ANALYSIS OF F-4 ACTIVE CONTROL LANDING GEAR

3.1 PREFACE

This section presents the dynamic analyses that were performed for the development of an electrohydraulic active control system for the F-4 landing gear. The main objective of these analyses was to develop a loop compensation network for the active control landing gear concept applied to the F-4 aircraft and to evaluate the performance of the active control gear with respect to the passive (conventional) F-4 landing gear. Section 3.2 contains a list of symbols and section 3.3 describes the analytical tools used in these studies, which are the linear and nonlinear vertical drop dynamic simulation models of the landing gear, without aircraft equations of motion included. Section 3.4 presents the correlation between the linear and nonlinear simulations. Section 3.5 presents the development of the loop compensation network. Section 3.6 presents analytical results for specific landing impact cases and cases of rollout over "repaired bomb craters", using the nonlinear vertical drop model, for both the passive gear and the active control gear.

3.2 SYMBOLS

A_o area of orifice in shock strut orifice plate, see Figure 3-1.

A_p landing gear metering pin area, see Figure 3-2.

A_1 shock strut hydraulic area (piston area), 0.01024 m^2 (15.87 in^2)

A_2 shock strut pneumatic area (cylinder area), 0.01494 m^2 (23.16 in^2)

A_3 annular area in shock strut between piston and cylinder walls, 0.00761 m^2 (1.179 in^2)

ATIRE constant in tire deflection force equation, 1.20

C_d discharge coefficient for active control servovalve orifice, 0.62

C_{do} discharge coefficient for shock strut orifice, 0.60

C_o orifice coefficient for shock strut orifice

$$= C_{do}A_o \sqrt{2g_c/\rho}, \ m^4 sec^{-1} \cdot N^{1/2} \ (in^3/sec/psi^{1/2})$$

2

CP Linearized orifice coefficient for active control servovalve

$$= -\frac{\partial Qsv}{\partial P_1}\ 3.16 \times 10^{-11} m^5 \cdot N^{-1} \cdot sec^{-1} (0.01334\ in^3/sec/psi)$$

CP_o linearized orifice coefficient for shock strut orifice

$$= \frac{\partial Qo}{\partial P_1} = C_o/(2\sqrt{P_1 - P_2}),\ 1.901 \times 10^{-9} m^5 \cdot N^{-1} \cdot sec^{-1} (0.8\ in^3/sec/psi)$$

CQ linearized orifice coefficient for active control servovalve:

$$= \frac{\partial Qsv}{\partial Xsv} = C_{sv}\sqrt{(P_S + P_R)/2},\ 8.61 m^2/sec (13{,}340\ in^3/sec/in)$$

C_{sv} orifice coefficient for active control servovalve:

$$= C_d W_{sv}\sqrt{2g_c/\rho},\ 0.00268 m^3 \cdot sec^{-1} \cdot N^{-1/2} (344.4\ in^3/(in\ lbf^{1/2}))$$

f coulomb friction between shock strut piston and cylinder, 222.N (50.1bf)

F_a vertical force exerted on shock strut by the runway surface, N (lbf)

F_{li} impact phase limit force, N (lbf)

F_{lim} limit force, N (lbf)

F_s shock strut force, N (lbf)

F_{wg} wing-gear interface force, N (lbf)

g acceleration due to gravity, $9.81 m/sec^2 (386.in/sec^2)$

g_c gravitational acceleration constant

$1\ kg \cdot m \cdot N^{-1} \cdot sec^{-2} (12\ slug \cdot in \cdot lbf^{-1} \cdot sec^{-2})$

i_1 input signal to electronic compensation networks, A

i_2 output signal from electronic compensation networks, or input signal to active control servovalve, (±0.040 A maximum)

K_a amplifier gain in active control loop, 0.000020 A/V

K_f position feedback gain in strut position control loop, 563 V/m (14.29V/in)

K_{FDGE} fraction of total strut stroke assumed available when computing impact phase force, 1.0

K_{sv} position gain of servovalve in active control loop, 0.0635 m/A (2.50 in/A)

KTIRE constant in tire deflection force equation 1727.1 kN/m (9862 lbf/in)

K_x gain in strut position control loop, 1.0 m/m (1.0 in/in)

L total lift force, N (lbf)

M mass of airplane per gear, 8345 kg (18398 lbm)

M_c mass of upper portion of landing gear (cylinder plus orifice plate attachment, kg (slugs)

M_L mass of lower portion of landing gear (piston plus tire), 204. kg (13.99 slugs = 1.166 lbf . sec ^{2}/in = 450. lbm)

M_U upper mass, 8143. kg (558. slugs = 46.5 lbf. sec^2/in = 17948. lbm)

PE_t potential energy stored in tire due to compression, N . m (ft . lbf)

P_S hydraulic supply pressure, 2.07 x 10^7 N/m^2 (3000 . psi)

P_R hydraulic return pressure, 0.0 N/m^2 (0.0 psi)

P_1 hydraulic pressure in shock strut piston, N/m^2 (psi)

P_2 pneumatic pressure in shock strut cylinder, N/m^2 (psi)

P_3 pressure in volume betweeen walls of shock strut piston and cylinder, N/m^2 (psi)

Q_o flow rate through shock strut orifice from piston to cylinder, m^3/sec (in^3/sec)

Q_{sv} flow rate from active control servovalve to shock strut piston, linear model, m^3/sec (in^3/sec)

Q_{sv1} flow rate through active control servovalve from supply pressure to the shock strut piston, m^3/sec (in^3/sec)

Q_{sv2} flowrate through active control servovalve from shock strut piston to return pressure, m^3/sec (in^3/sec)

R_s the slope of the limit force with respect to time during transition phase, 444800. N/sec (100000. lbf/sec)

s LaPlace operator, sec^{-1}

t time, sec

V velocity, m/sec (in/sec)

V_s sink rate, m/sec (in/sec)

V_1 hydraulic volume in shock strut piston and lines up to the active control servovalve, 0.00497 m^3 (303.in^3)

V_2 pneumatic volume, 0.00742 m^3 (453. in^3) for fully extended strut

V_3 volume between shock strut piston and cylinder, 0.0 m^3 (0.0 in^3) for fully extended strut

W_{sv} window width of orifices on third stage spool of active control servovalve, 0.0884 m (3.48 in)

X_a displacement of lower mass of shock strut or axle, m (in)

X_c commanded position of shock strut, 0.216 m (8.50 in)

X_g ground level displacement, m (in)

X_s shock strut stroke, m(in) X_s = 0 fully extended, X_s = 0.403 m (15.88 in) fully compressed

x_{wg} displacement of wing gear interface, m (in)

β bulk modulus of hydraulic fluid, 6.89 x 10^8 N/m^2 (1 x 10^5 psi)

ν ratio of specific heat of gas at constant pressure to that at constant volume, 1.06

ρ	mass density of hydraulic fluid, 838 kg/m^3 (0.000941 slugs/in^3 = 0.0303 lbm/in^3)
τ_f	time constant in strut position feedback loop, 0.10 sec
τ_1	time constant in compensation, 0.001621 sec
τ_2	time constant in compensation, 0.0001621 sec
τ_3	time constant in compensation, 6.464×10^{-4} sec
τ_4	time constant in compensation, 6.464×10^{-5} sec
ω_c	corner frequency in active control servovalve transfer function, 1263 sec^{-1}
ω_{sv}	natural frequency in active control servovalve transfer function, 655.5 sec^{-1}
ω_1	natural frequency of notch network, 565 sec^{-1}
ζ_{sv}	damping coefficient in active control servovalve transfer function, 0.436
ζ_1	damping coefficient in denominator of notch network, 5.1
ζ_2	damping coefficient in numerator of notch network, 0.1

Subscripts:

i	initial conditions before impact
im	impact phase
L	lower mass
max	maximum value
min	minimum value
r	rollout phase
s	shock strut relative motion of lower mass (piston) with respect to the upper mass (cylinder)
sv	servovalve
tr	transition phase
U	upper mass

Miscellaneous:

d( ) indicates the differential of a variable

Δ( ) indicates difference or change in a variable

(.), (..), (...) dots indicate differentiation with respect to time

3.3 DYNAMIC SIMULATION MATH MODELS

The main analytical tools used in these studies are the linear (s-domain) and nonlinear (time domain) vertical drop dynamic simulation models of the landing gear. These models simulate motion in the vertical axis only. Aircraft equations of motion are not included, and aircraft mass (per gear) is simulated as a lumped mass resting on top of the landing gear.

3.3.1 Linear Model

The linear model simulated the dynamics of the active control landing gear system in the frequency domain for small perturbations about the condition where the airplane mass (per gear) is resting on top of the gear with the gear always in contact with the ground and with the lower cylinder hydraulic pressure at a value halfway between the hydraulic supply and return pressures. The input disturbance variable is command limit force. Airplane lift and ground level are assumed constant. The linear model is a valuable tool since it allows rapid evaluation of system modifications or the effect of variation in system parameters in the areas of system stability and frequency response. A detailed description of the linear model, including equations, is presented in Reference 1, and will not be repeated here. The values of the constants used in the simulations for this study are given in Section 3.2 of this report.

3.3.2. Nonlinear Model

The nonlinear model is developed from the time-dependent algebraic and differential equations of the system. The response of the system to input disturbances is obtained by integrating the differential equations with respect to time. Controller laws (including switching logic) and all other identifiable nonlinear attributes of the system of significance are simulated. Thus, the nonlinear model represents a more accurate simulation of the actual physical case than the linear model. This however, comes at the expense of considerably longer computational times. The nonlinear model accepts input variations in airplane lift, ground level, and command limit force (for vertical drop impact transients, however, the controller automatically sets the command limit force subsequent to initiation of active control). A detailed description of the nonlinear model, including equations, is presented in Reference 1. The nonlinear model used herein is identical to that described in Reference 1 except the values of the system constants are different and the linear spring tire force assumption was modified to a nonlinear spring, according to the relationship:

$$F_a = \begin{cases} KTIRE(XA - XG)^{ATIRE} & \text{for } XA > XG \\ 0 & \text{for } XA < XG \end{cases}$$

where KTIRE and ATIRE are constants. This equation replaces the expression for F_a in Equation 4 of Reference 1.

The values of the constants used in the linear and nonlinear simulations for this study are given in Section 3.2.

The important variables are shown in Figure 3-1.

3.4 CORRELATION OF LINEAR AND NONLINEAR MODELS

Since both the linear and nonlinear models were utilized in the development of the loop compensation, the first task was to correlate the linear model with the more precise nonlinear model to ensure that it would give at least reasonably credible results. Figures 3-3, 3-4, and 3-5 show frequency response results obtained from the linear and nonlinear models, without compensation. The loop is opened at the point of wing/gear force feedback, and the strut position feedback loop is not included. The input is command limit force and the output is the wing/gear force response. The nonlinear runs were made with zero lift and for command amplitudes of ±890 N (±200 pounds), and the amplitude and phase angle at each frequency were computed from a Fourier analysis of the resultant input and output waveforms. The linear model results were obtained using a linearized orifice coefficient for the shock strut orifice (CP_o) of 0.8 in^3/sec/psi. This value seemed to give the best overall correlation between the linear and nonlinear models. Note that the agreement is reasonably good out to a frequency of about 150 Hertz. At higher frequencies, the nonlinear model shows considerably more phase lead and less amplitude response than the linear model. Figures 3-6 and 3-7 show open loop Nyquist diagrams for these same results, for the linear and nonlinear models, respectively. Again, reasonably good correlation is indicated.

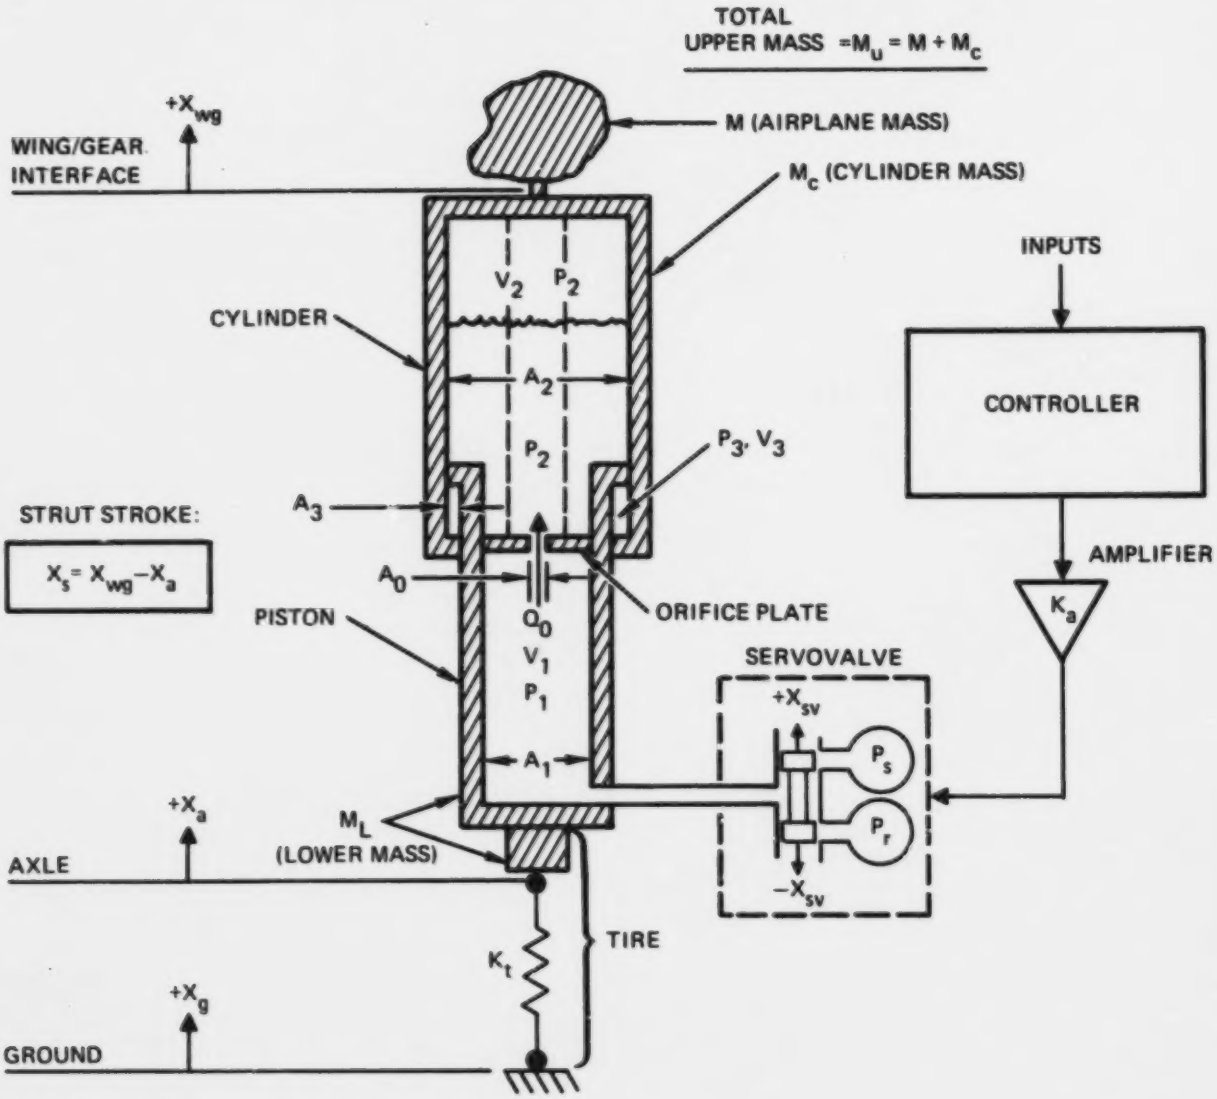

FIGURE 3-1 ILLUSTRATION OF VARIABLES USED IN NONLINEAR SIMULATION OF SIMPLIFIED VERTICAL DROP CASE

REPRODUCED FROM
BEST AVAILABLE COPY

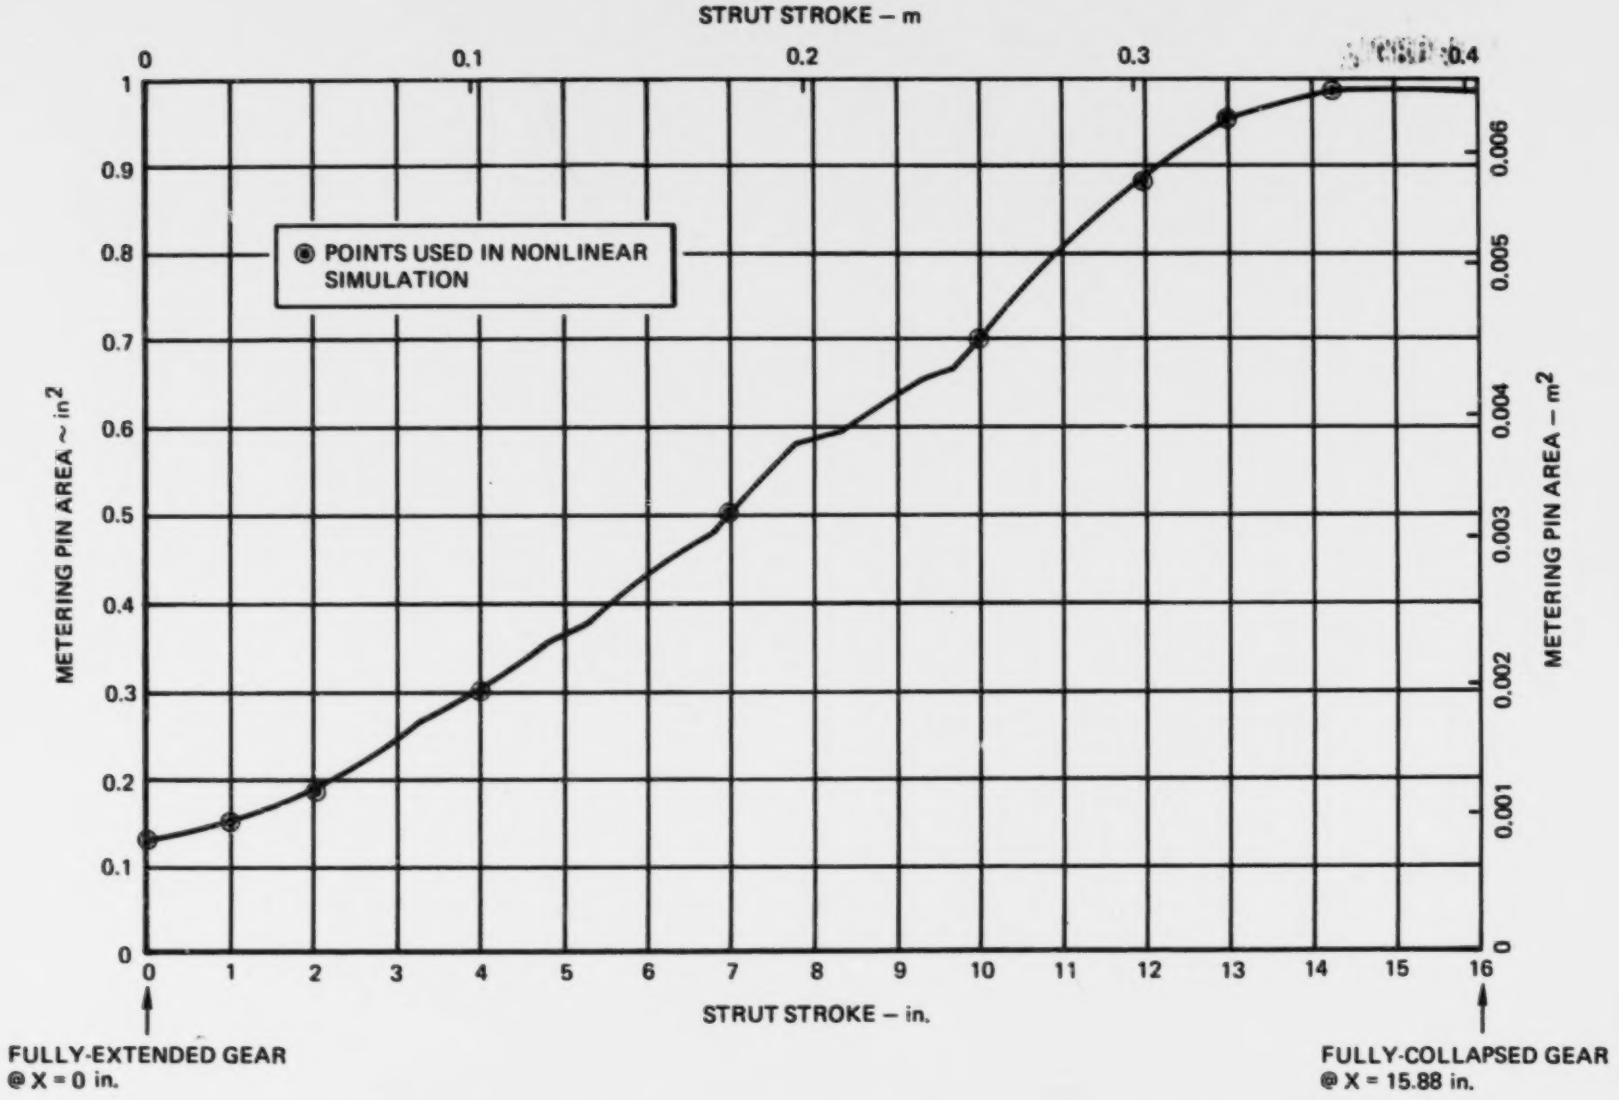

FIGURE 3-2. F-4 LANDING GEAR METERING PIN AREA VERSUS STRUT STROKE

MICROFILMED FROM
AVAILABLE COPY

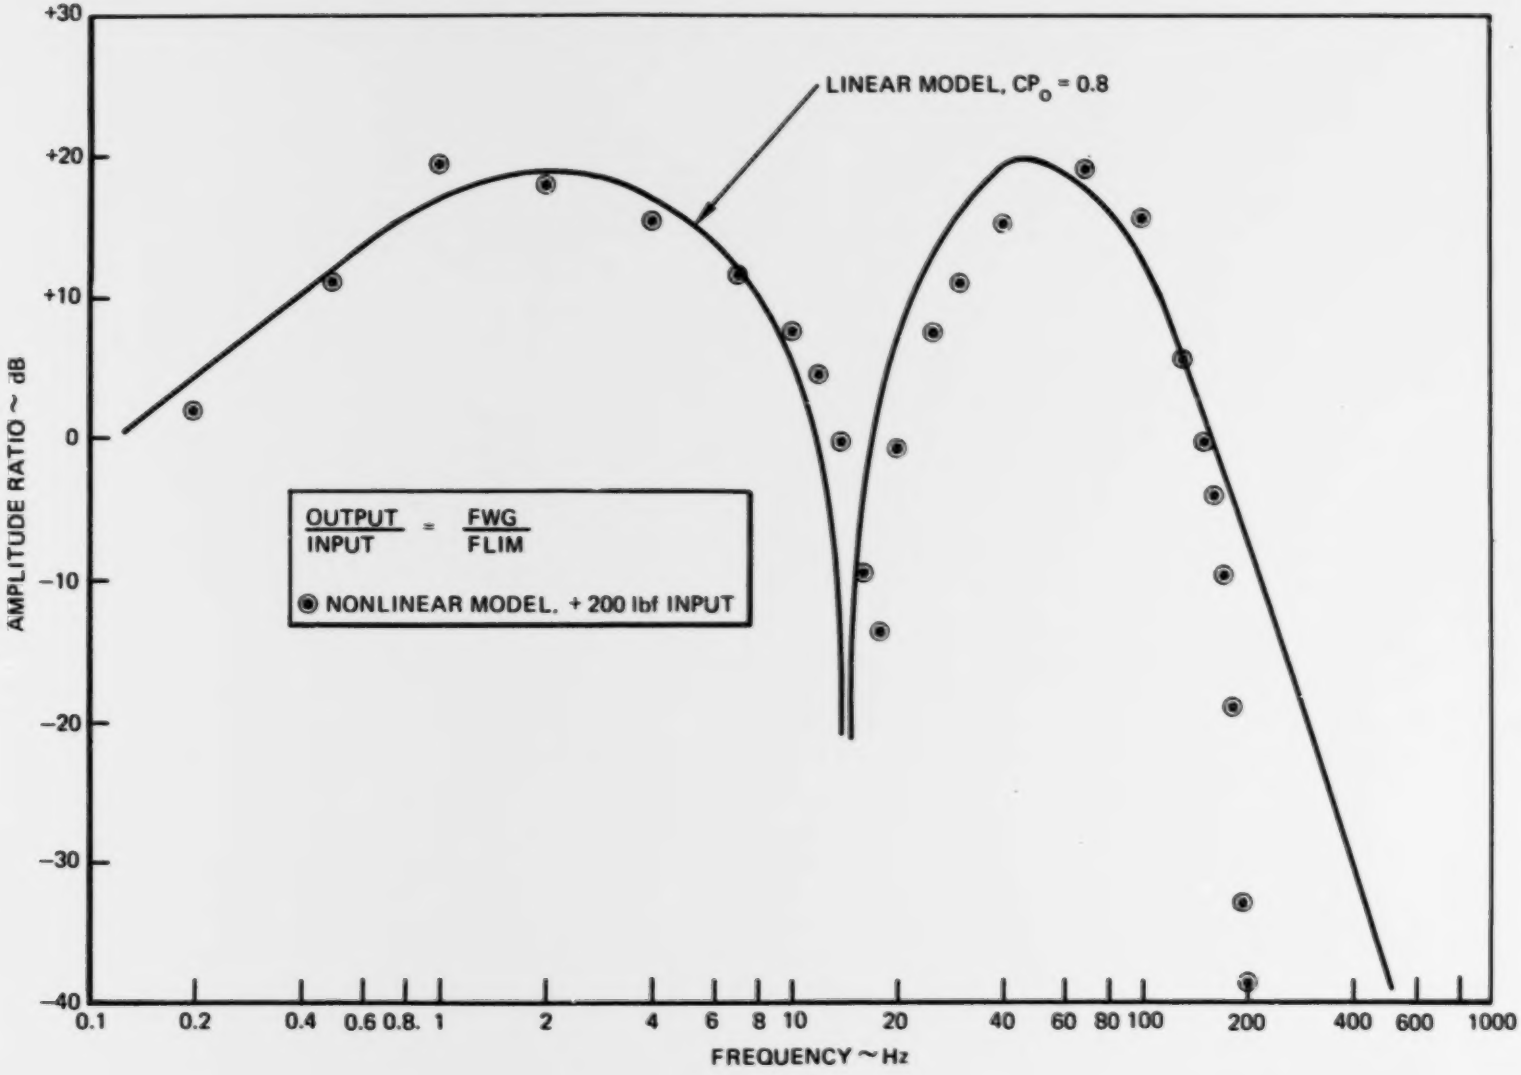

MICROFILMED FROM
BEST AVAILABLE

FIGURE 3-3 OPEN-LOOP, NO COMPENSATION FREQUENCY RESPONSE

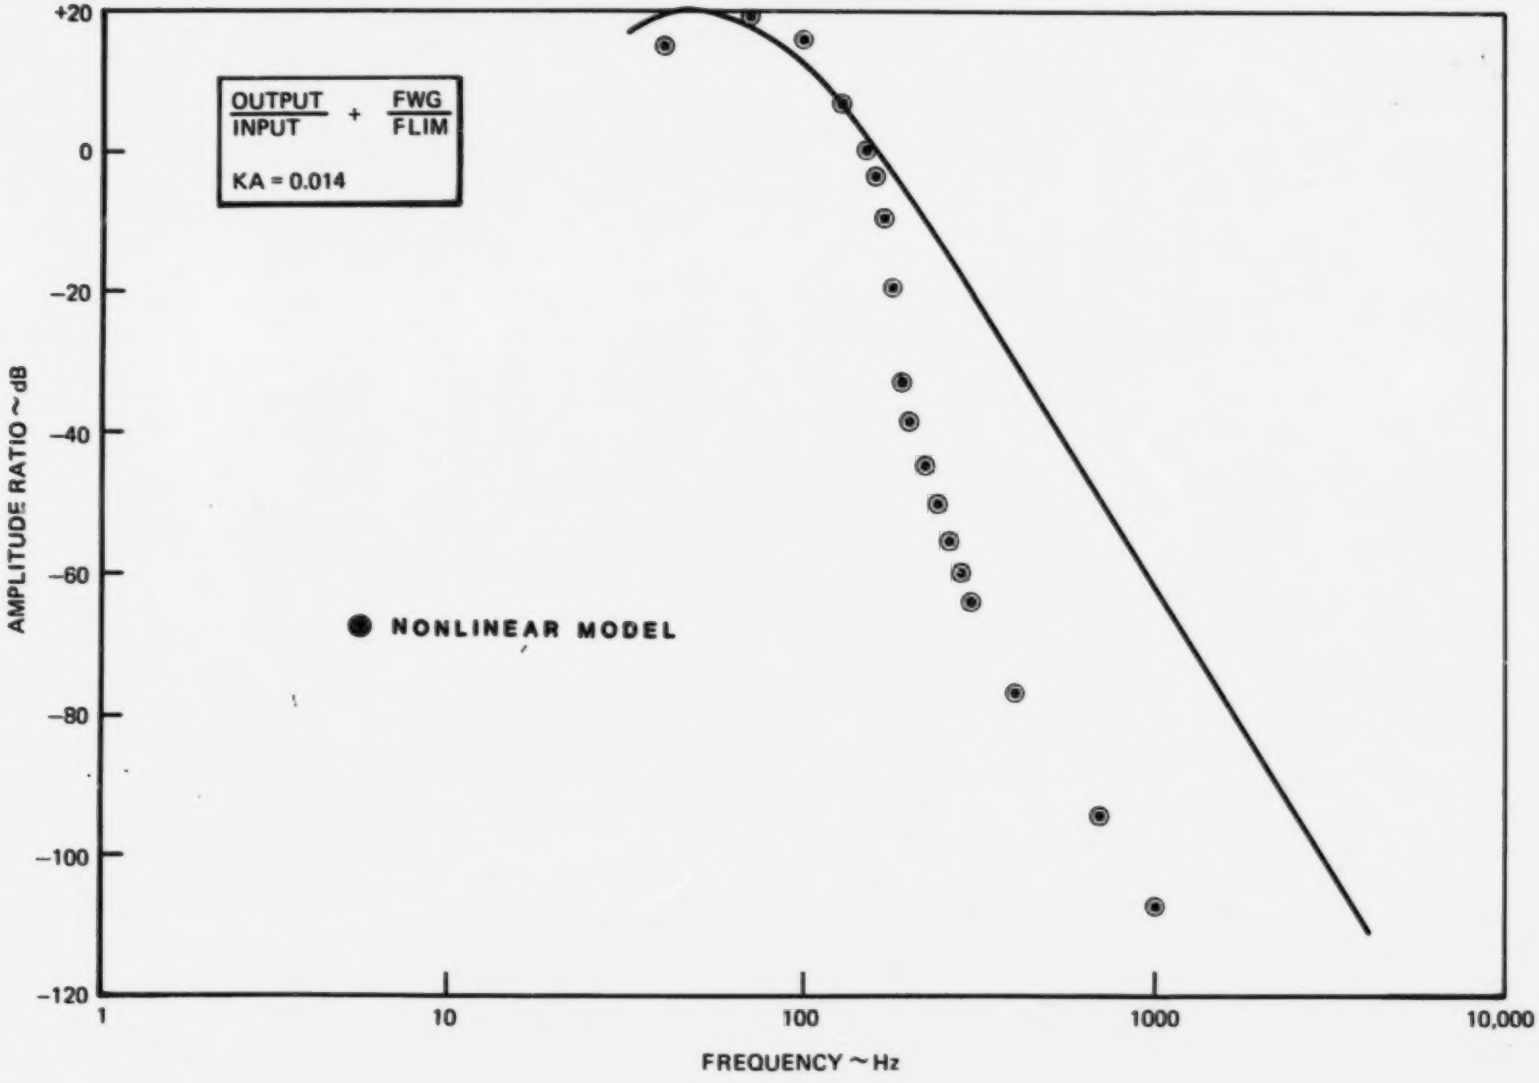

FIGURE 3-4. F-4 GEAR, OPEN-LOOP, NO COMPENSATION FREQUENCY RESPONSE

REPRODUCED FROM
BEST AVAILABLE COPY

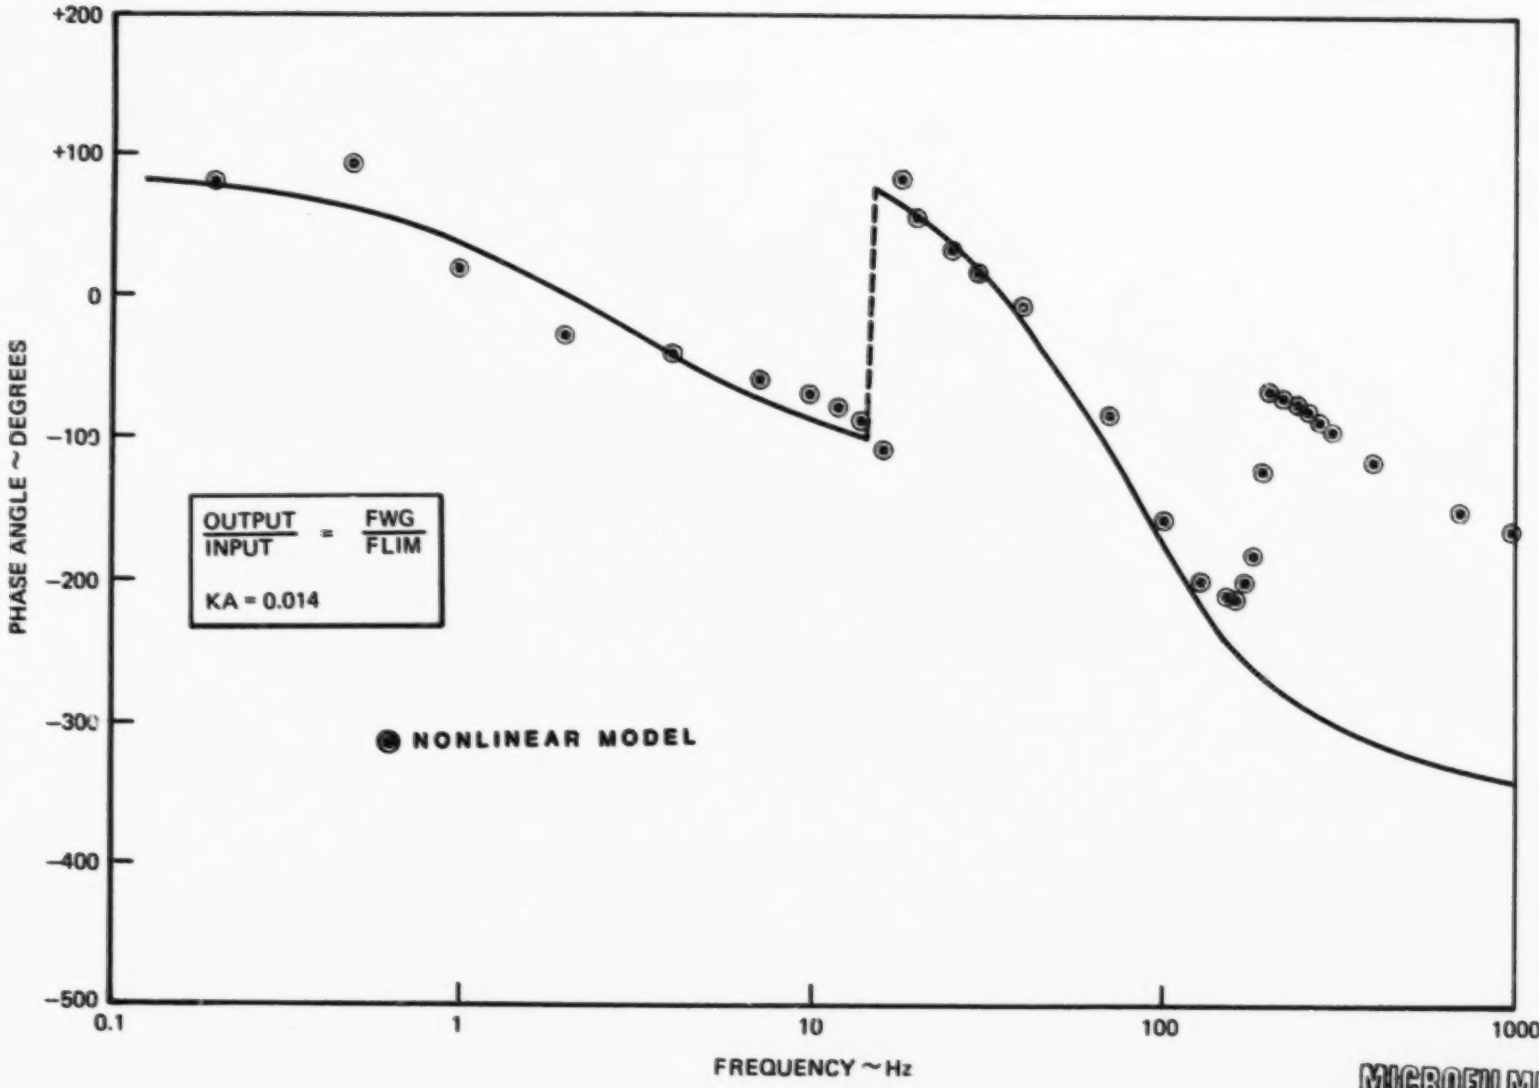

MICROFILMED FROM
BEST AVAILABLE COPY

FIGURE 3-5. F-4 GEAR, OPEN-LOOP, NO COMPENSATION FREQUENCY RESPONSE

3.5 LOOP COMPENSATION

The open-loop Nyquist diagrams of the uncompensated system presented in the previous section (Figures 3-6 and 3-7) indicate that the system is unstable around 100 Hertz. Thus, compensation is deemed necessary. The compensation that was developed for this system is implemented in the forward path of the control loop, and has the following transfer function.

$$T(S) = \left[\frac{\frac{S^2}{565.^2} + \frac{2(.100)}{565.}S+1}{\frac{S^2}{565.^2} + \frac{2(5.10)}{565}S+1}\right]\left[\frac{\frac{S}{617.}+1}{\frac{S}{6170.}+1}\right]\left[\frac{\frac{S}{1547.}+1}{\frac{S}{15470.}+1}\right] \quad (3\text{-}1)$$

It consists of a notch filter at 90 Hertz and two first-order 20 dB lead/lag networks. The frequency response of the compensation is shown in Figures 3-8 and 3-9 and the Nyquist plot including compensation is shown in Figure 3-10.

To understand the effect of each part of the compensation network on system dynamics, open-loop Nyquist diagrams obtained from the linear model are presented with successive portions of the compensation network incorporated. Figure 3-11 shows the uncompensated Nyquist diagram (this is the same as the results in Figure 3-6 except that the amplifier gain has been adjusted). Figure 3-12 shows the effect of including the compensation notch only. The system is now stable, but rather low damped at a frequency around 60 Hertz. The first lead/lag network was included to add phase lead in this frequency range. The Nyquist diagram with the notch and this lead/lag incorporated is shown in Figure 3-13. The second lead/lag was included to add phase lead in the 190 Hertz range. The open-loop Nyquist diagram with the entire compensation network included is presented in Figure 3-14.

The effect of each part of the compensation network on system dynamics was also evaluated using the nonlinear model on a typical vertical drop case. The conditions of the case are as follows:

1. The sink rate prior to impact is 1.83 m/sec (72 ins/sec)

2. The lift is equal to airplane weight at initial impact, then linearly reduced to 10 percent of the airplane weight over the next 1 second, then held constant at 10 percent thereafter.

3. The ground level is held constant.

MICROFILMED FROM
BEST AVAILABLE COPY

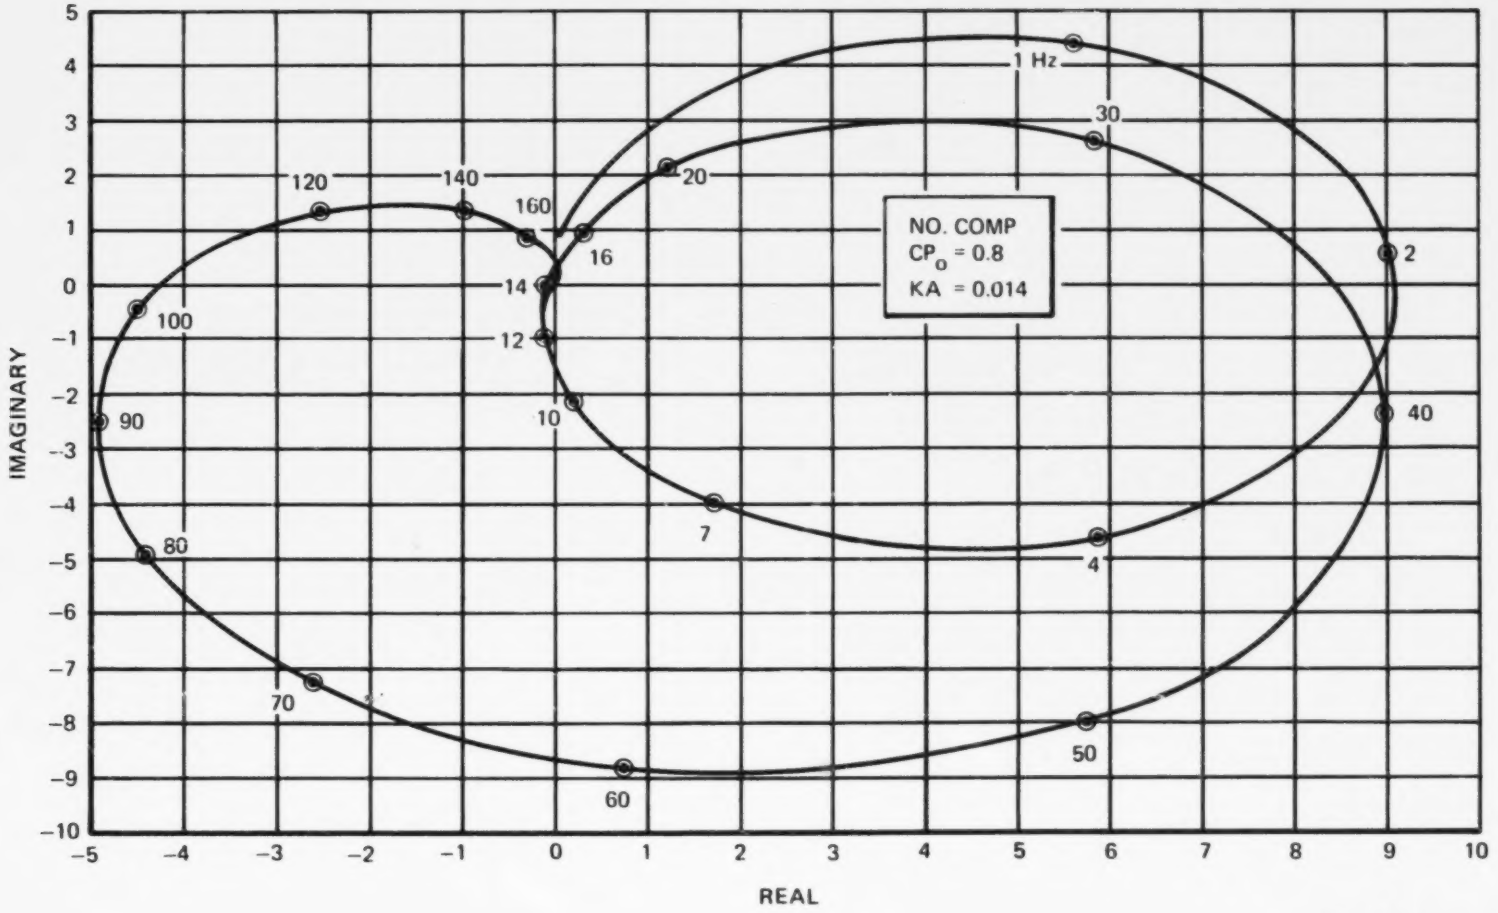

MICROFILMED FROM
BEST AVAILABLE COPY

FIGURE 3-6. OPEN-LOOP LINEAR MODEL WITHOUT COMPENSATION

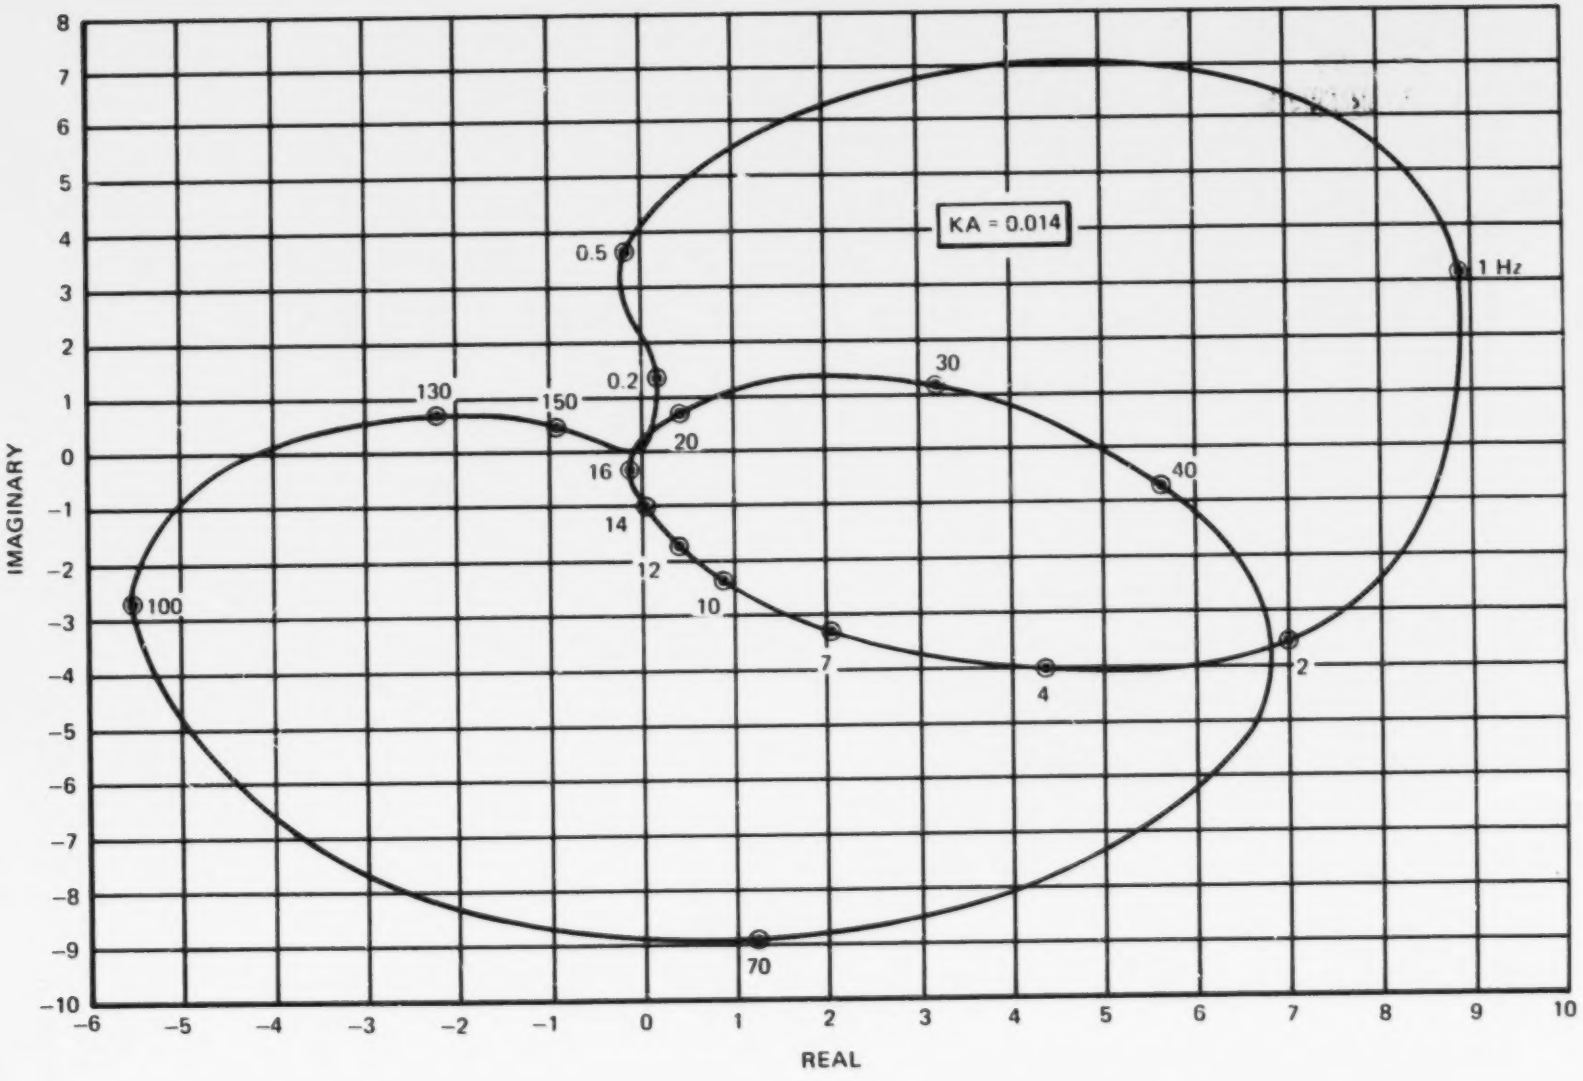

FIGURE 3-7. OPEN-LOOP NONLINEAR MODEL, 889.6N (± 200 LBF) INPUT

MICROFILMED FROM
BEST AVAILABLE COPY

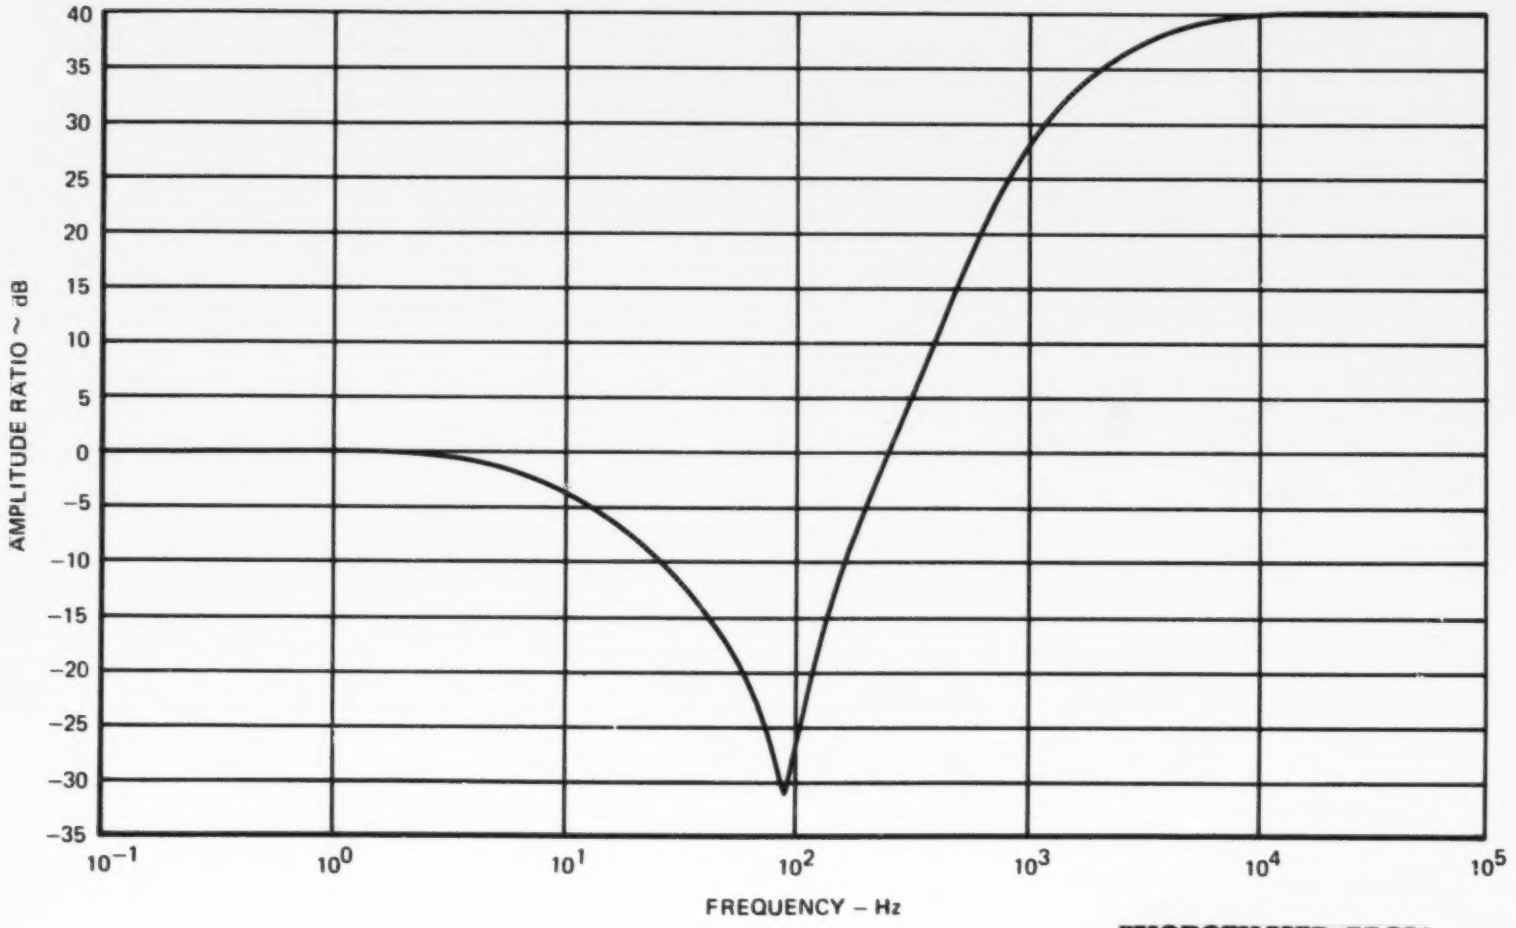

MICROFILMED FROM
BEST AVAILABLE COPY

FIGURE 3-8 COMPENSATION

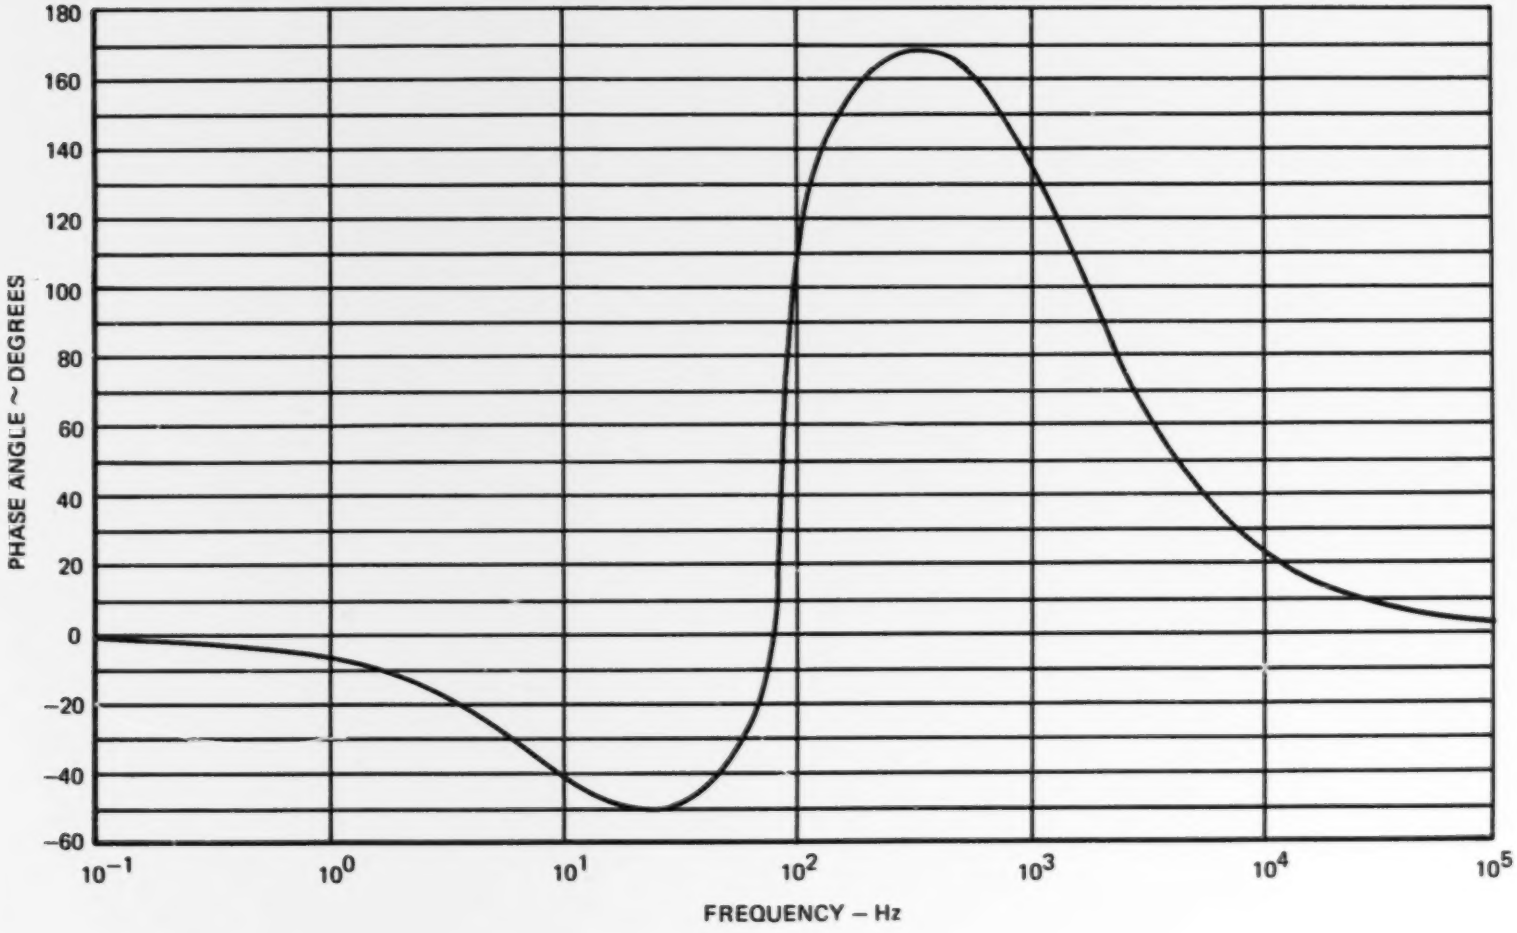

MICROFILMED FROM
BEST AVAILABLE COPY

FIGURE 3-9 COMPENSATION

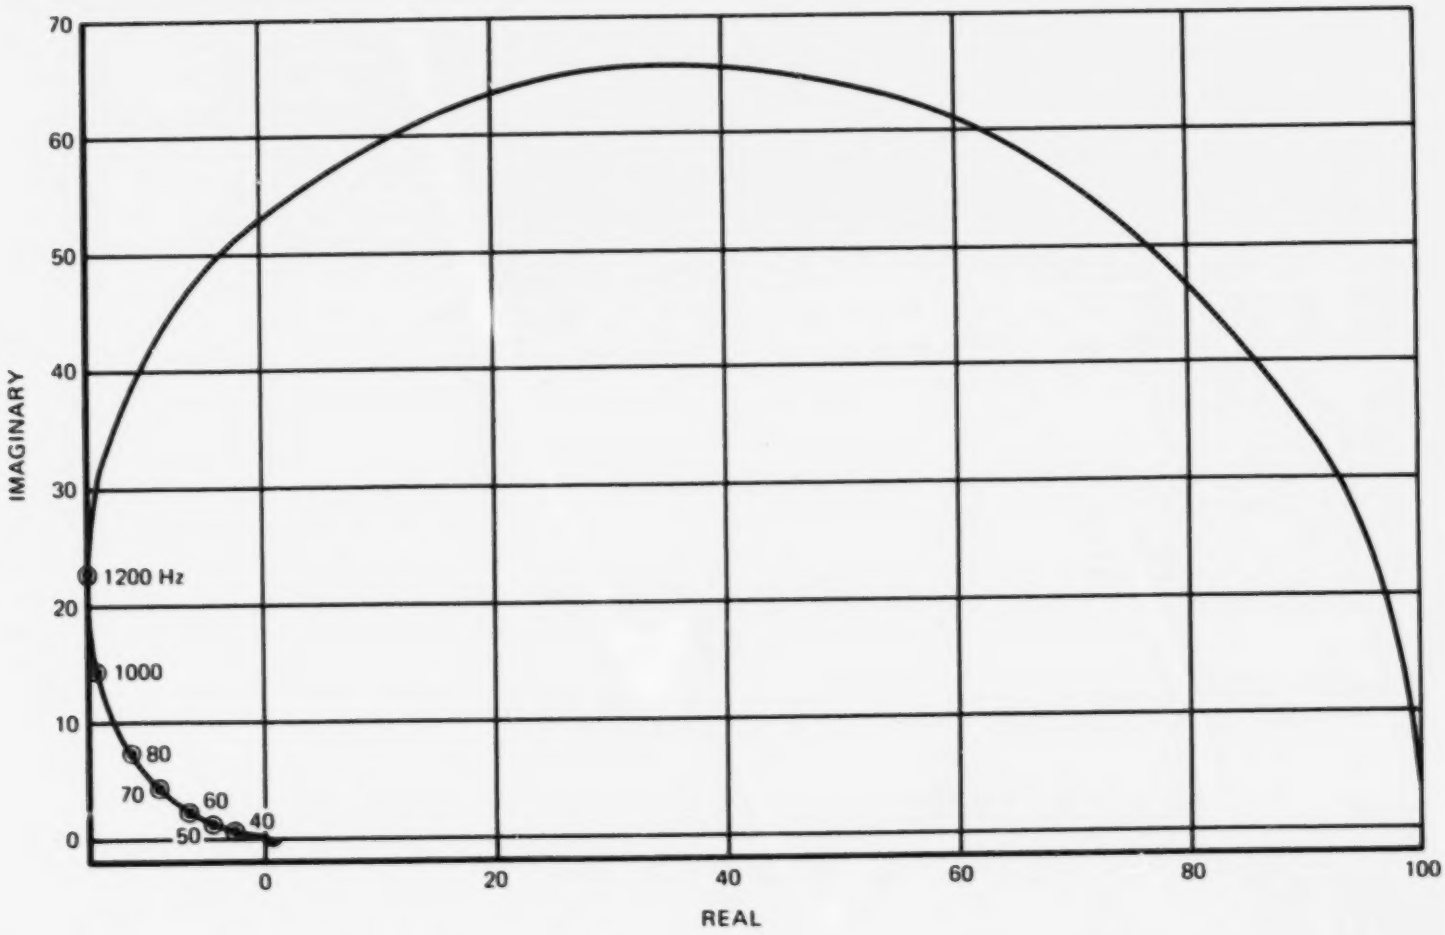

FIGURE 3-10 NYQUIST PLOT—COMPENSATION

MICROFILMED FROM
BEST AVAILABLE

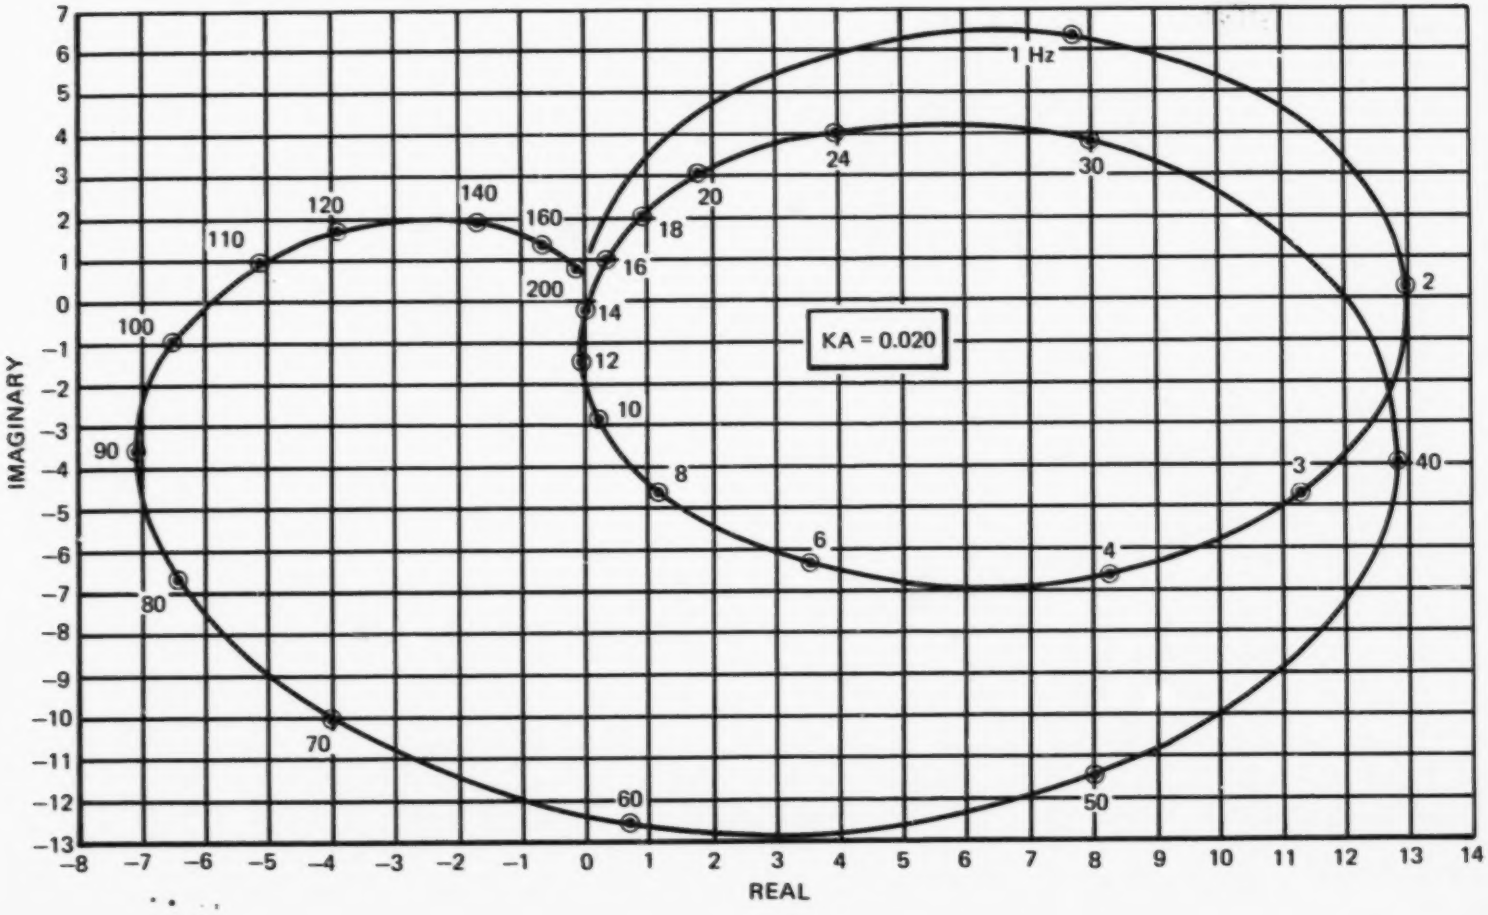

MICROFILMED FROM
BEST AVAILABLE COPY

FIGURE 3-11 NO COMPENSATION

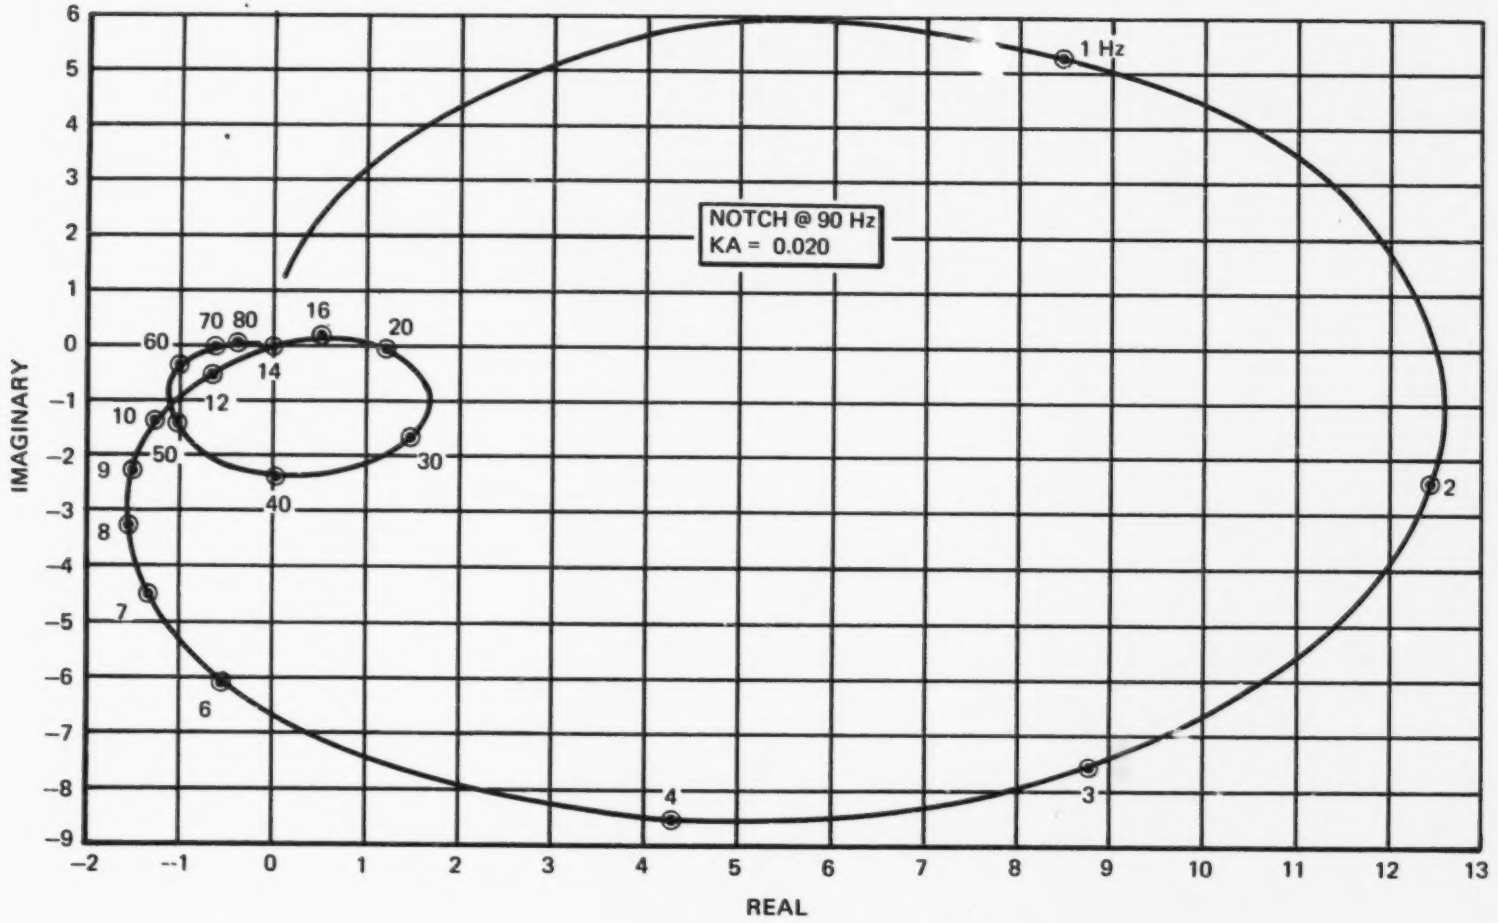

MICROFILMED FROM
BEST AVAILABLE COPY

FIGURE 3-12. 90 Hz NOTCH

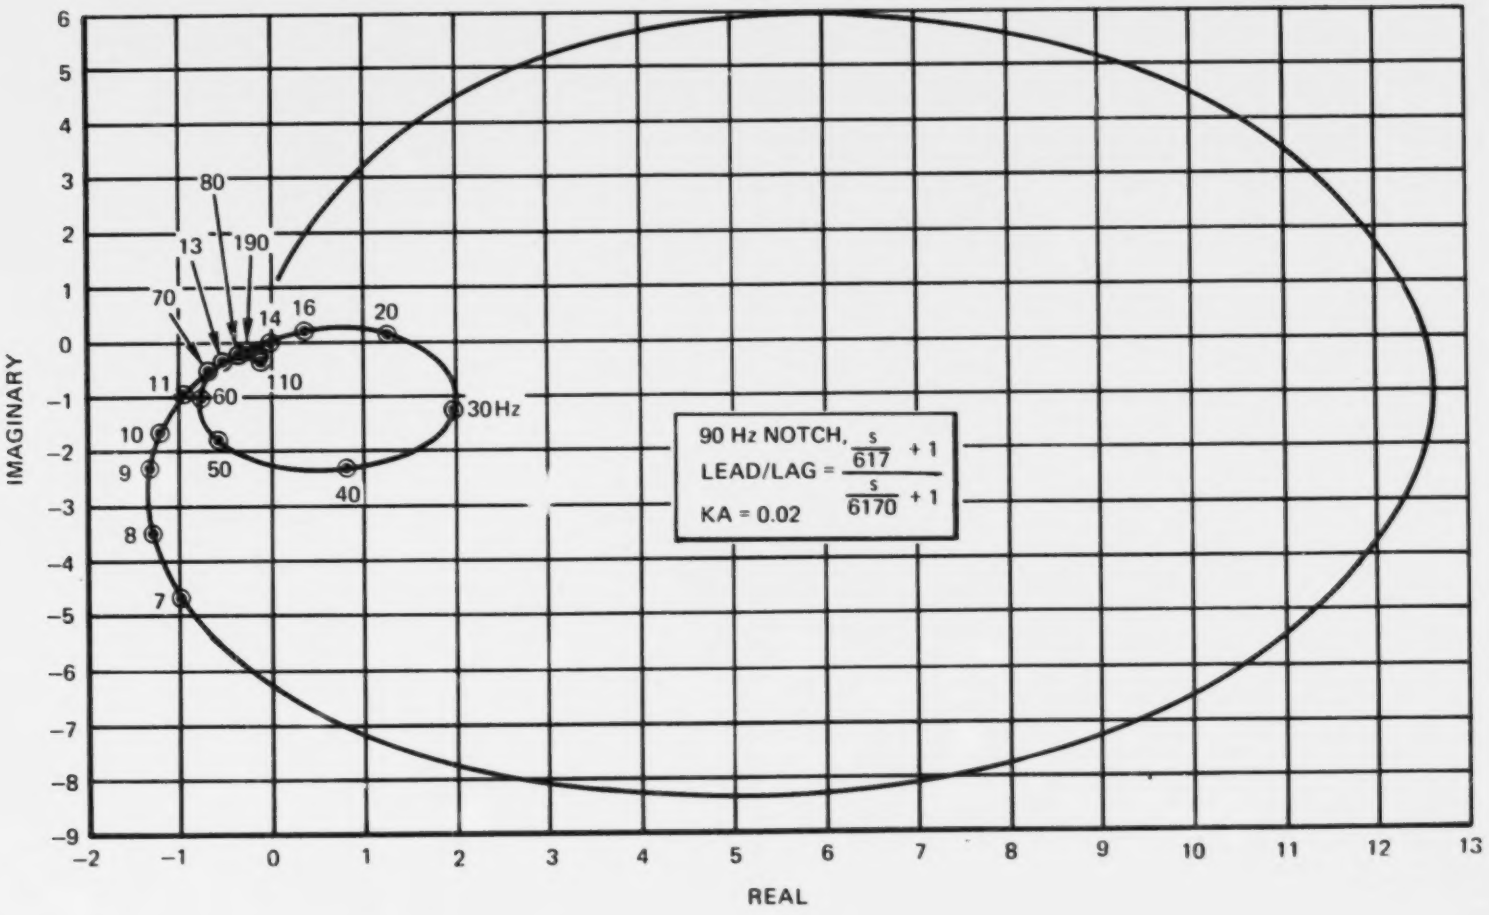

FIGURE 3-13. 90 Hz NOTCH AND LEAD/LAG

MICROFILMED FROM
BEST AVAILABLE COPY

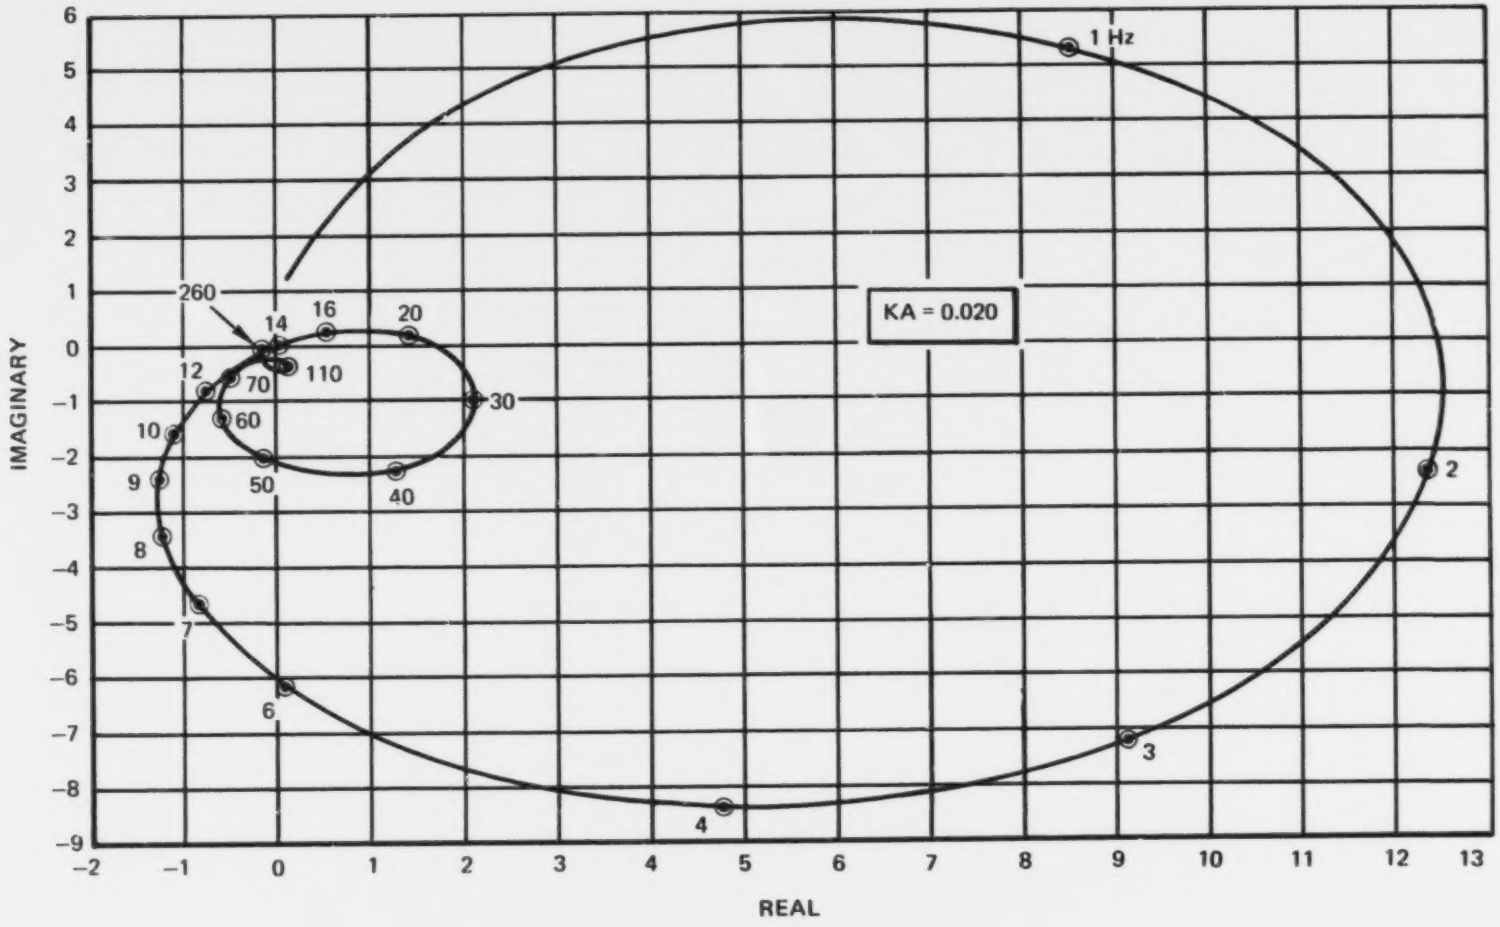

FIGURE 3-14 TOTALLY COMPENSATED LOOP

MICROFILMED FROM
BEST AVAILABLE COPY

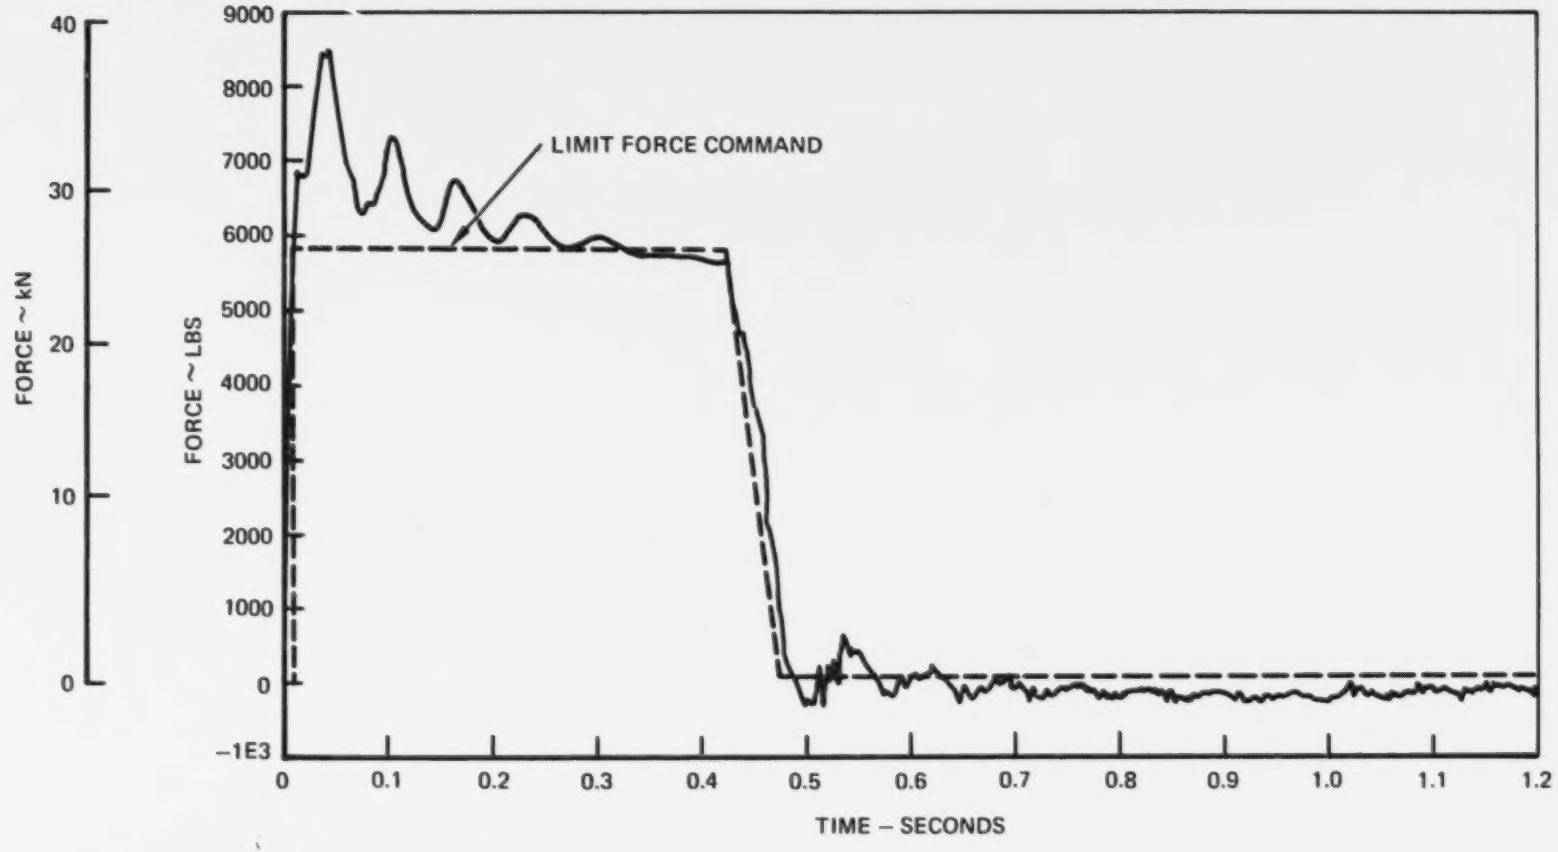

MICROFILMED FROM
BEST AVAILABLE COPY

FIGURE 3-15 CASE 2 COMP: NOTCH AT 90 Hz

MICROFILMED FROM
BEST AVAILABLE COPY

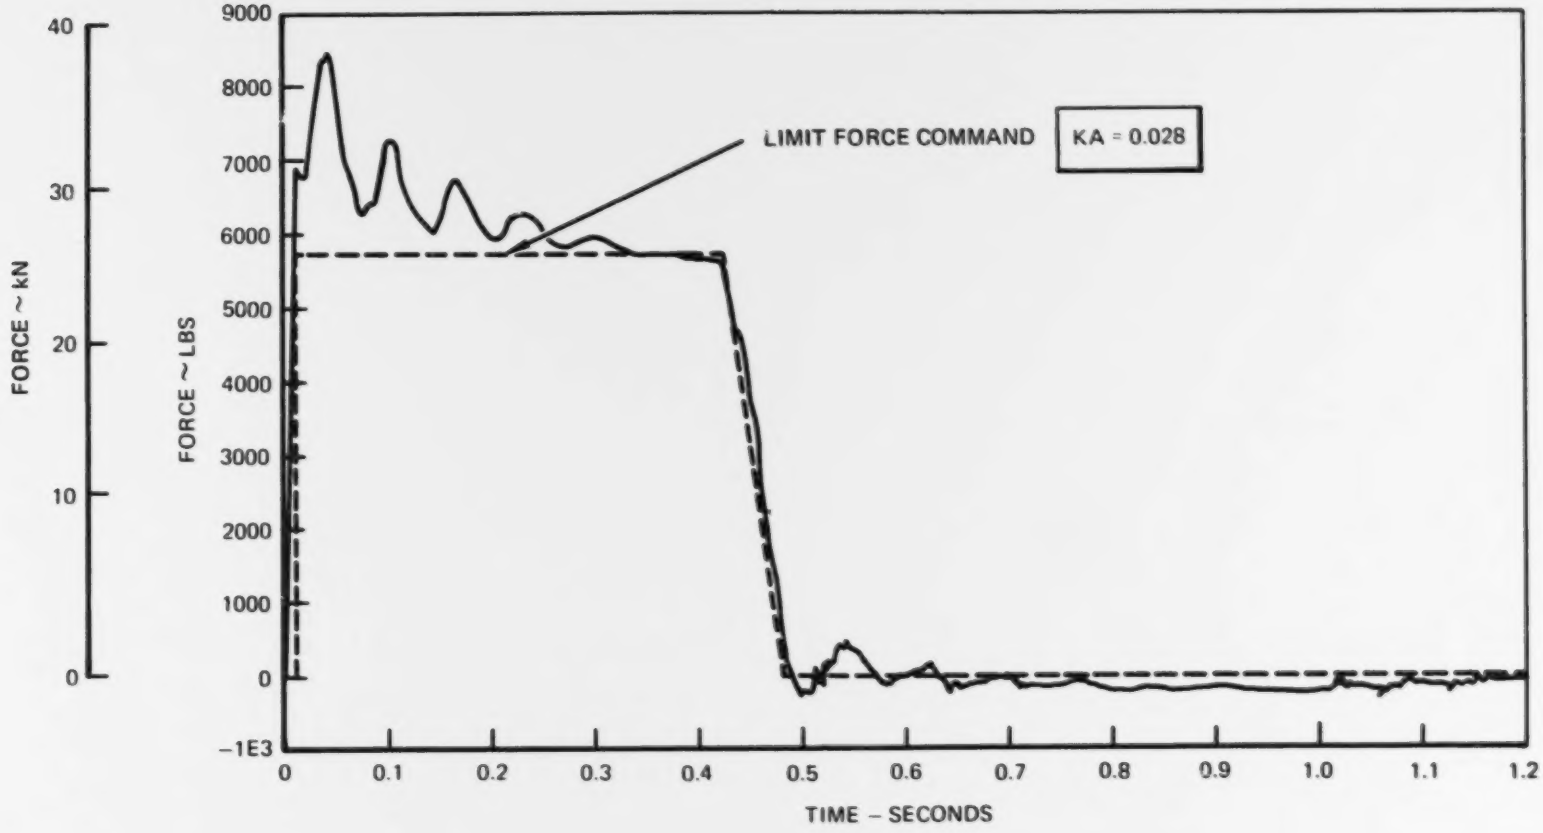

FIGURE 3-16 COMPENSATION – NOTCH @ 90 Hz
+ LEAD/LAG @ 617, 6170 RAD/SEC

MICROFILM
BEST AVAILABLE

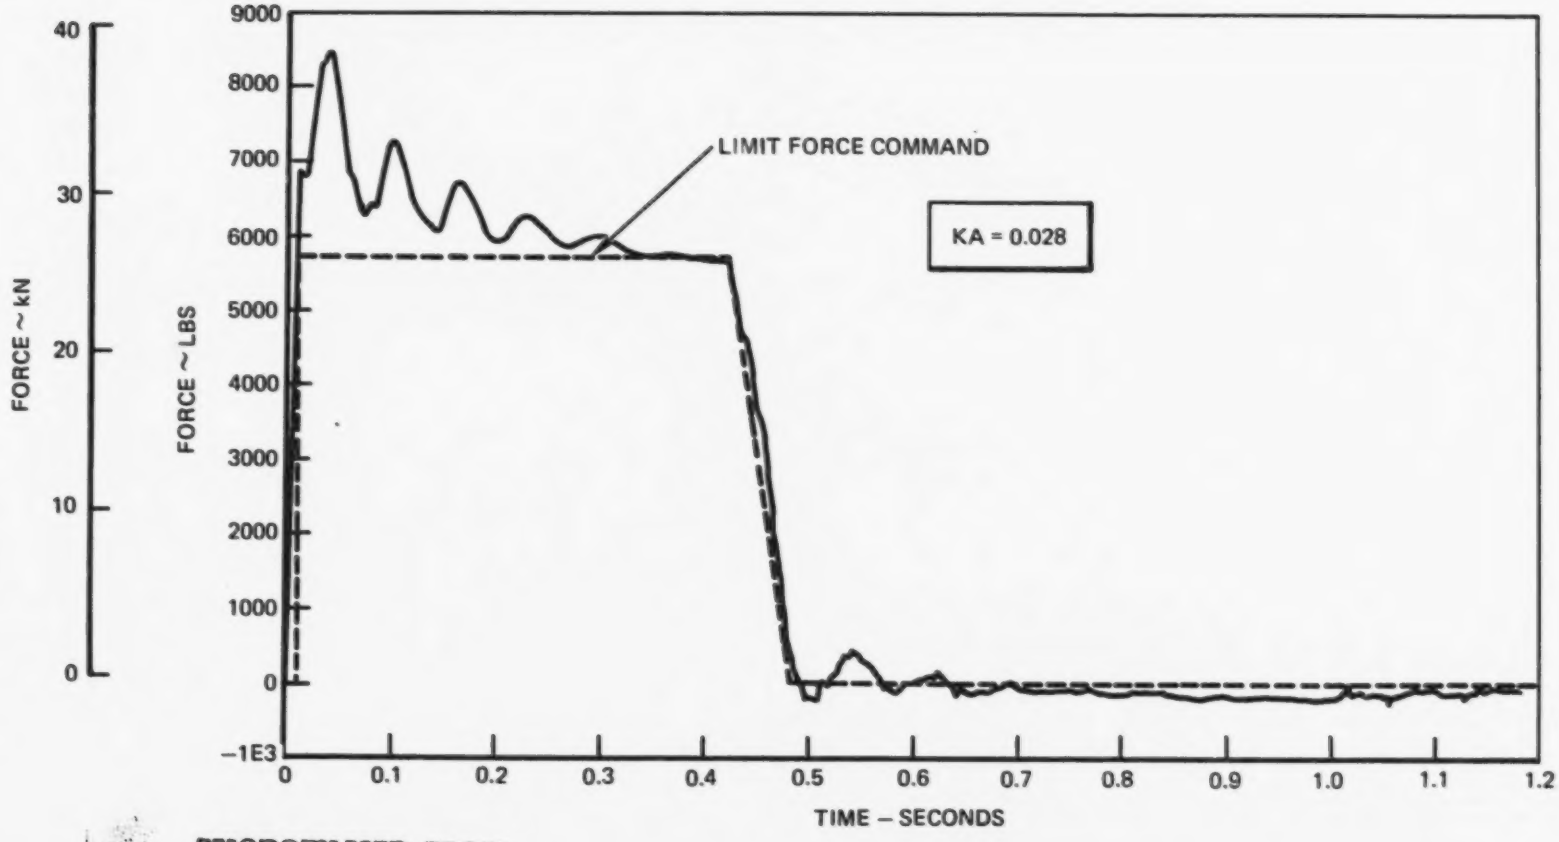

MICROFILMED FROM
BEST AVAILABLE COPY

FIGURE 3-17 TOTALLY COMPENSATED LOOP

The resultant force transients are shown in Figures 3-15, 3-16, and 3-17 for the notch compensation only, the notch plus the first lead/lag compensation only, and the entire compensation network, respectively. The results show that the notch stabilizes the system, and the lead/lag networks effectively reduce the oscillatory behavior of the system at the higher frequencies. It should be noted that the amplifier gain was set at 0.028 milliamperes per volt for each of these runs, which is higher than the final design value of 0.020.

Note from Figures 3-15 through 3-17 that the system exhibits a low damped oscillatory behavior at about 15 Hertz. This behavior is also exhibited in the Nyquist diagrams already presented. The linear model Nyquist diagram results predict a somewhat lower frequency of oscillation than the nonlinear results, however, (compare Figures 3-6 and 3-7) an attempt was made to increase the damping of these oscillations by adding some phase lead in that frequency range using another 20 dB lead/lag network. Although the resultant linear model Nyquist diagram looked promising, the nonlinear vertical drop results showed marginal improvement in the low-frequency oscillatory behavior. The resultant compensation also possessed significantly greater high-frequency amplification, an undesirable result. The approach was thus taken to employ the compensation network described previously (Equation 3-1), and improve the low frequency oscillations by reducing the loop gain as much as possible without significantly degrading the performance of the active control concept. It was found that the amplifier gain of 0.028 milliamperes/volt used in Figures 3-15 through 3-17 could be reduced to 0.020 mA/V without significantly affecting the ability of the active control gear to reduce the wing/gear forces, for all the cases run herein.

The block diagram of the system is shown in Figure 3-18.

3.6 VERTICAL DROP ANALYTICAL RESULTS

The nonlinear model was used to simulate various vertical drop landings and rollouts over repaired bomb craters using active control on the F-4 landing gear. In all cases the passive gear was also simulated in order to evaluate the effectiveness of active control in reducing the loads transmitted through the wing/gear interface. The compensation developed in Section 3.5 (Equation 3-1) was employed in all active control cases, and the amplifier gain used was 0.020 mA/V.

3.6.1 Vertical Drop, Case I

The conditions for vertical drop case number 1 are as follows:

1. The sink rate prior to impact is 1.83 m/sec (72 in/sec).
2. The lift equals airplane weight (per gear) at all times.
3. The ground level remains constant.

MICROFILMED FROM
BEST AVAILABLE COPY

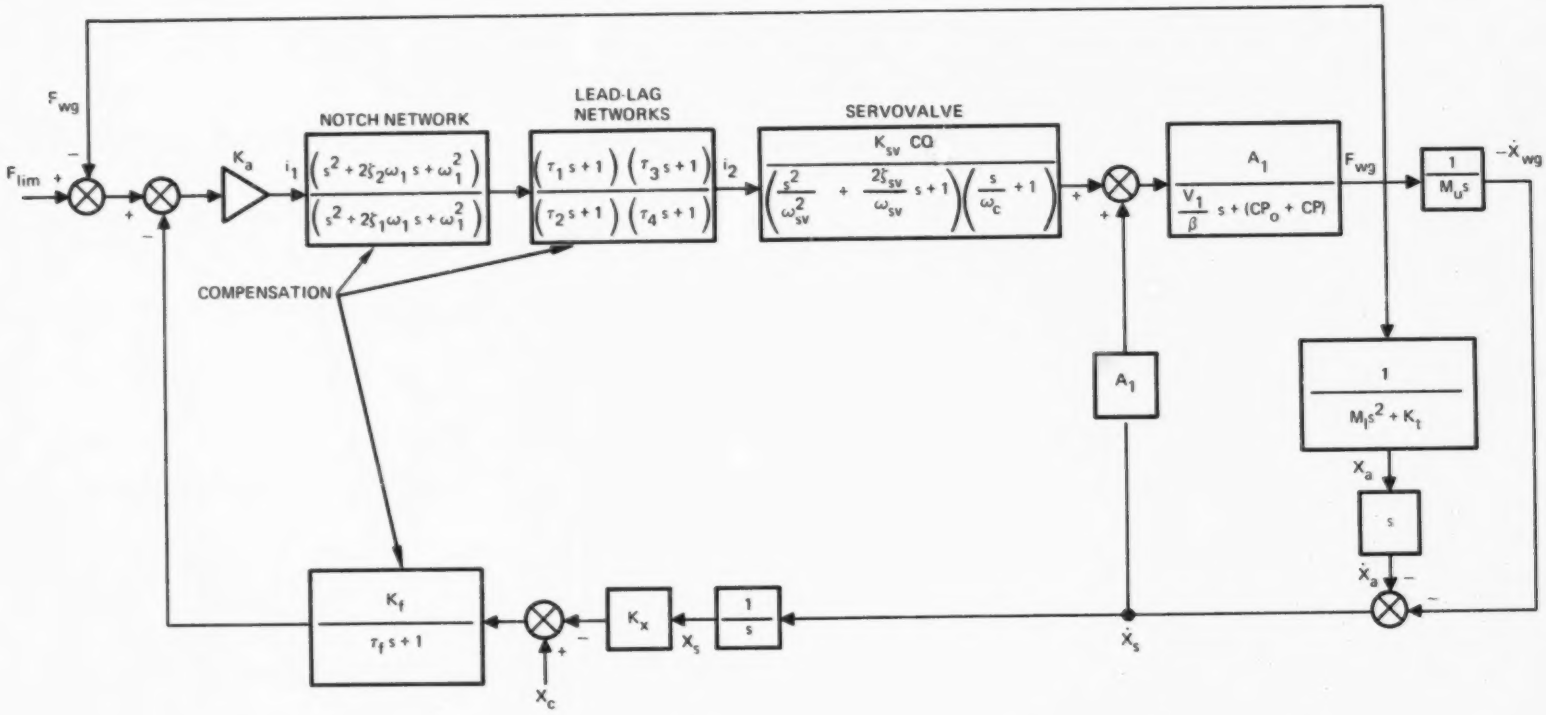

FIGURE 3-18 BLOCK DIAGRAM OF LINEAR MATH MODEL

MICROFILMED FROM
BEST AVAILABLE COPY

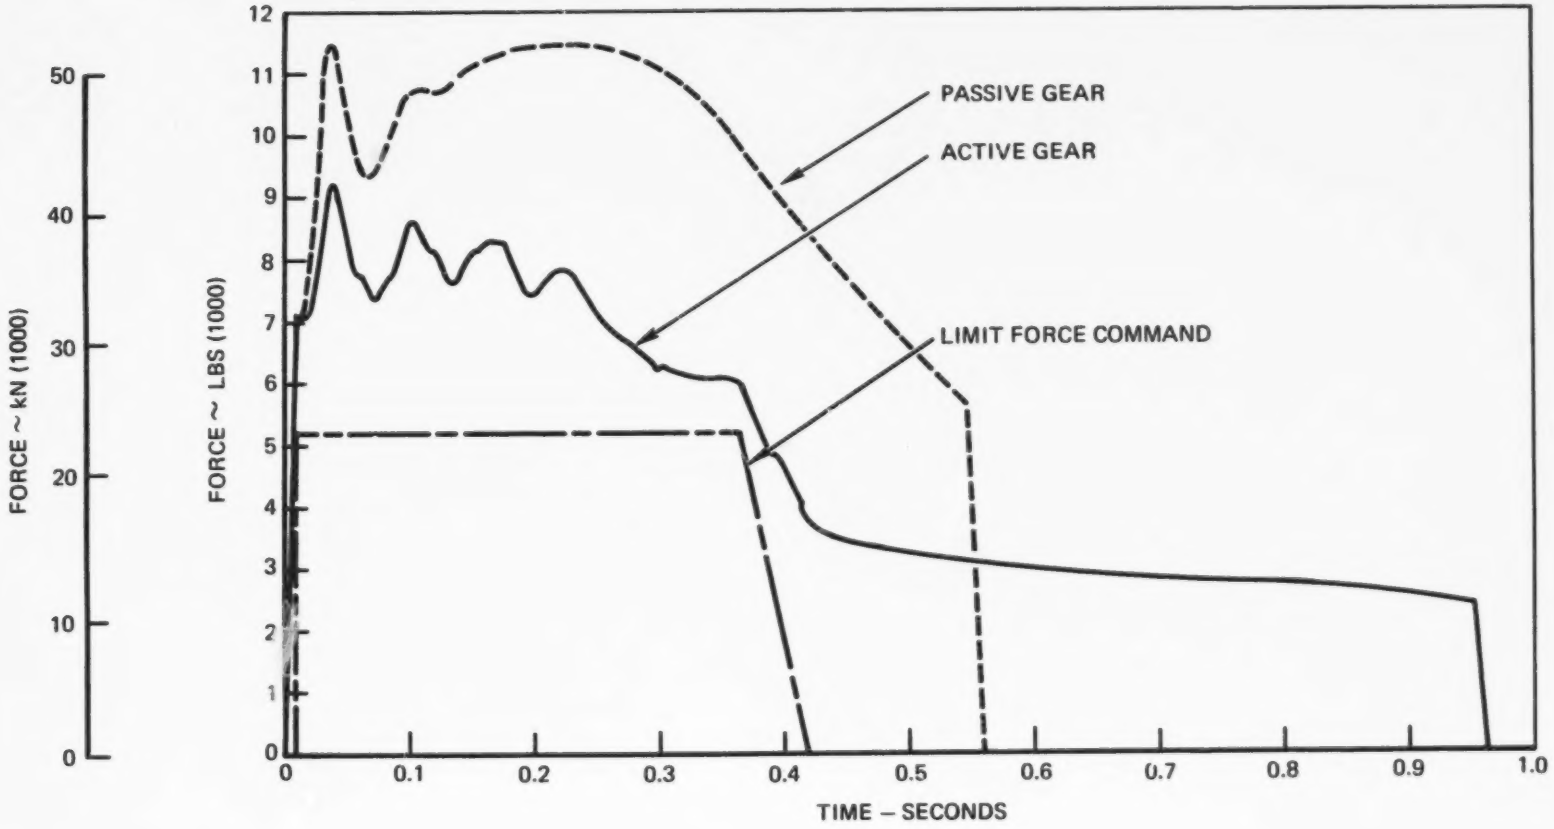

FIGURE 3-19 CASE 1

MICROFILMED FROM
BEST AVAILABLE COPY

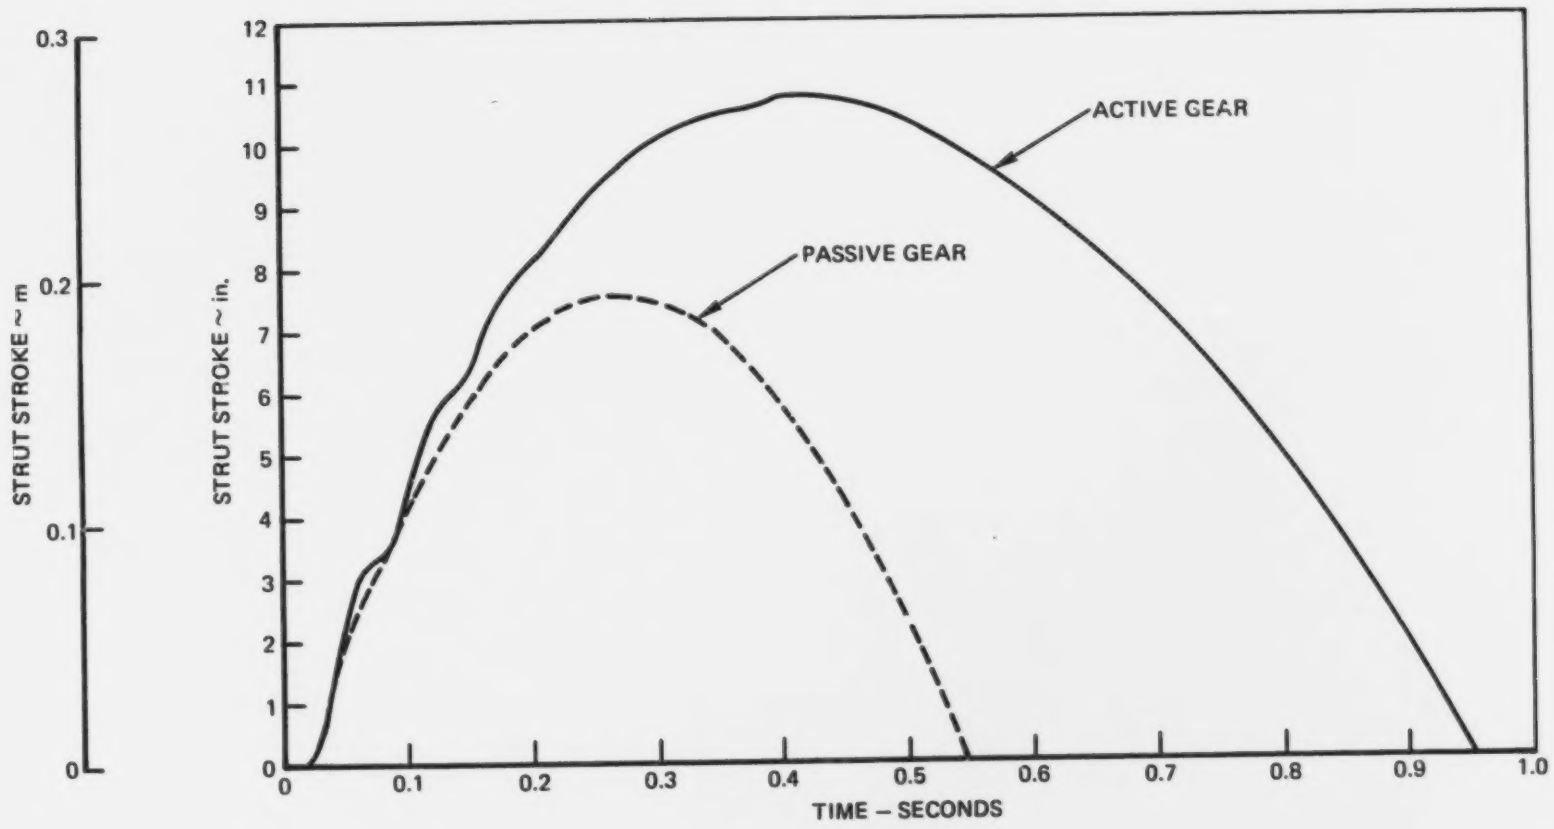

MICROFILMED FROM
BEST AVAILABLE COPY

FIGURE 3-20 CASE 1

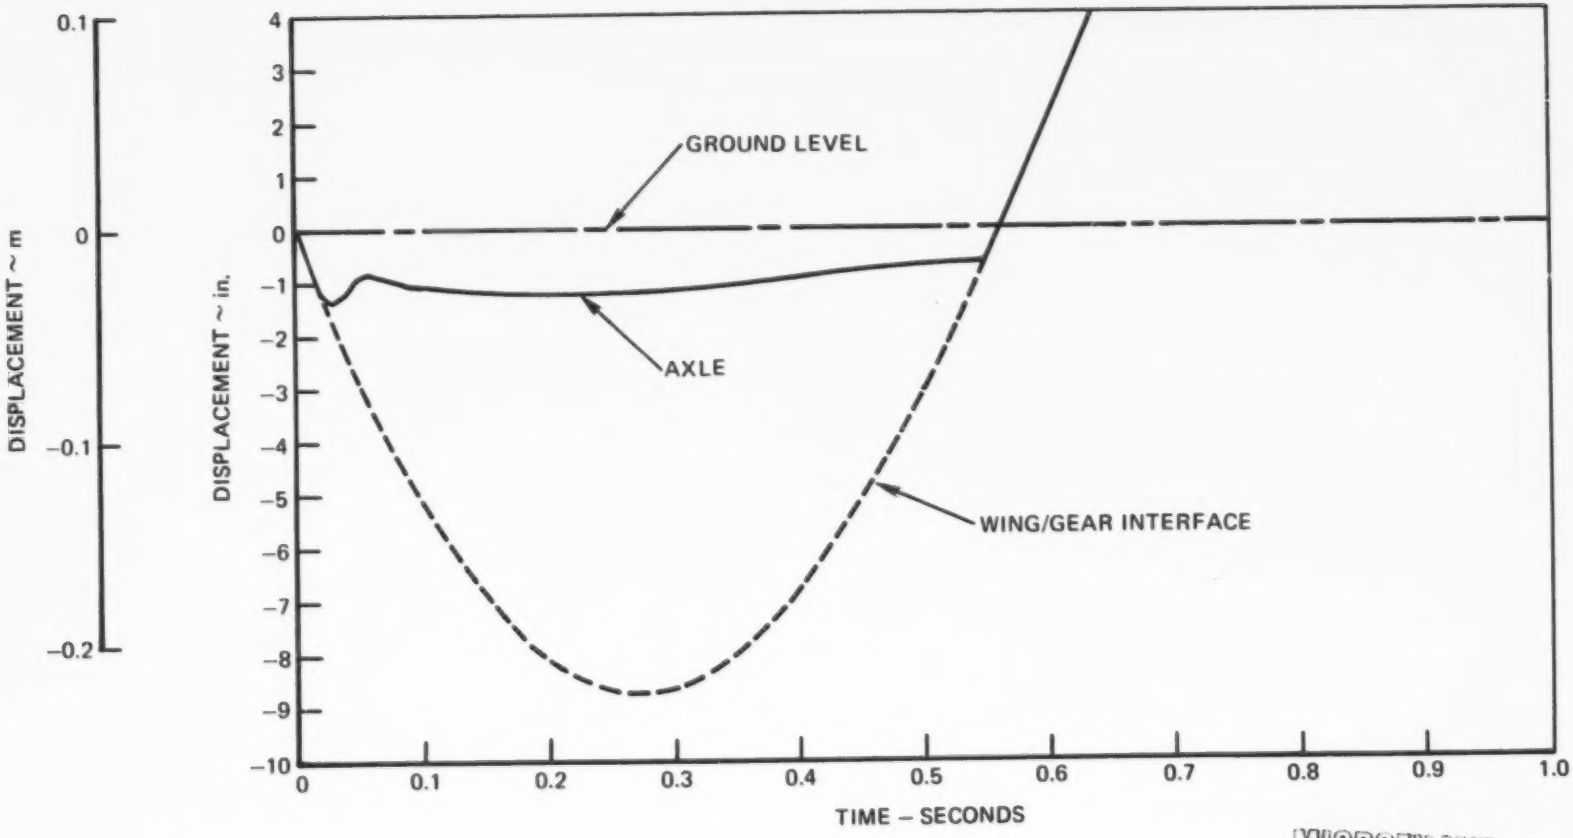

MICROFILMED FROM
BEST AVAILABLE COPY

FIGURE 3-21 CASE 1 PASSIVE GEAR

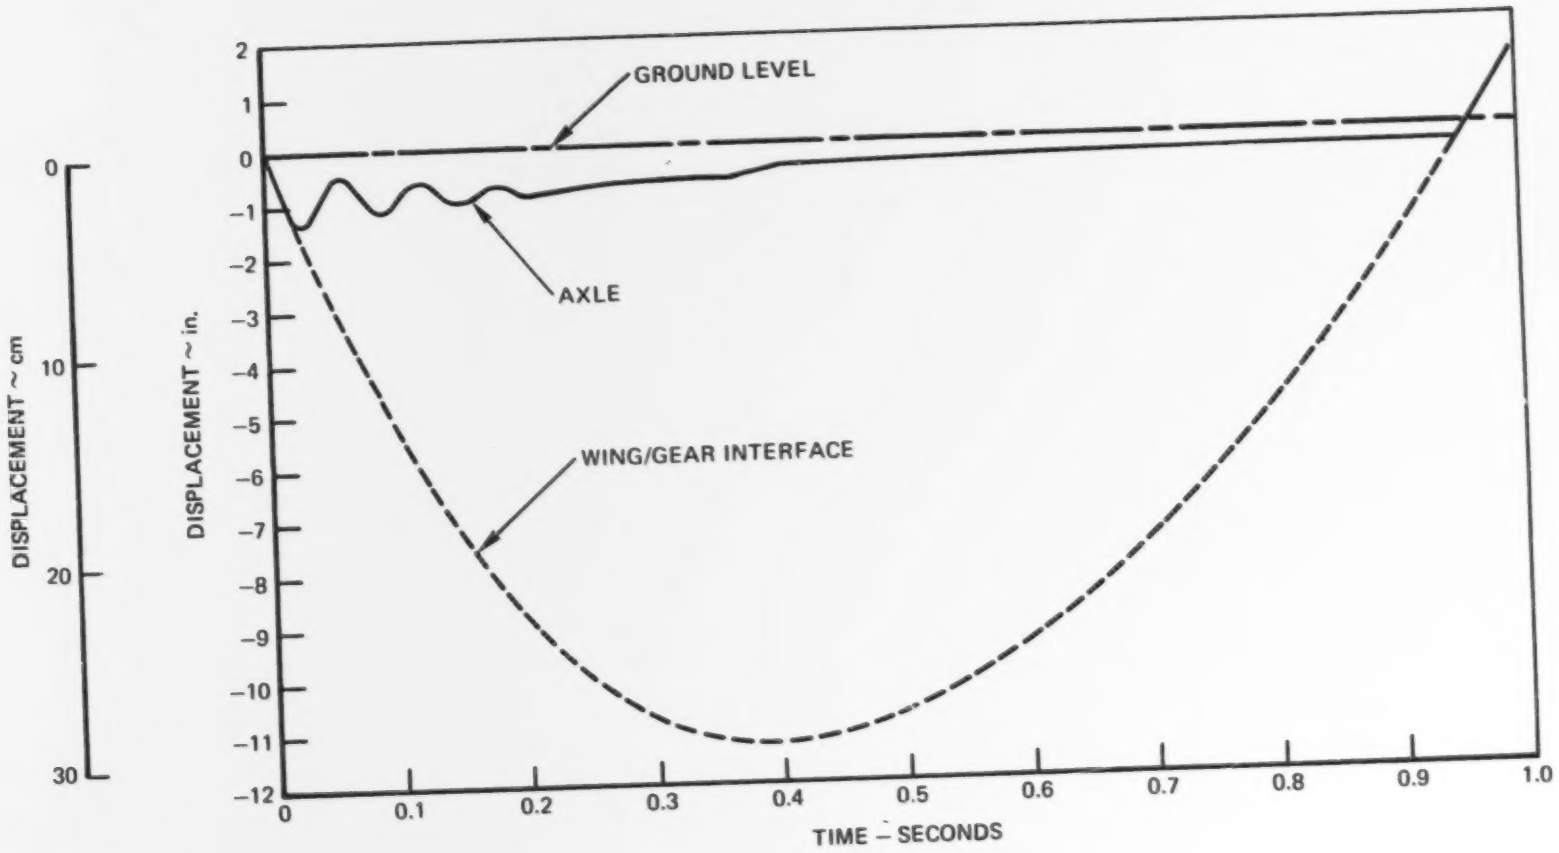

FIGURE 3-22. CASE 1 ACTIVE GEAR

MICROFILMED FROM
BEST AVAILABLE COPY

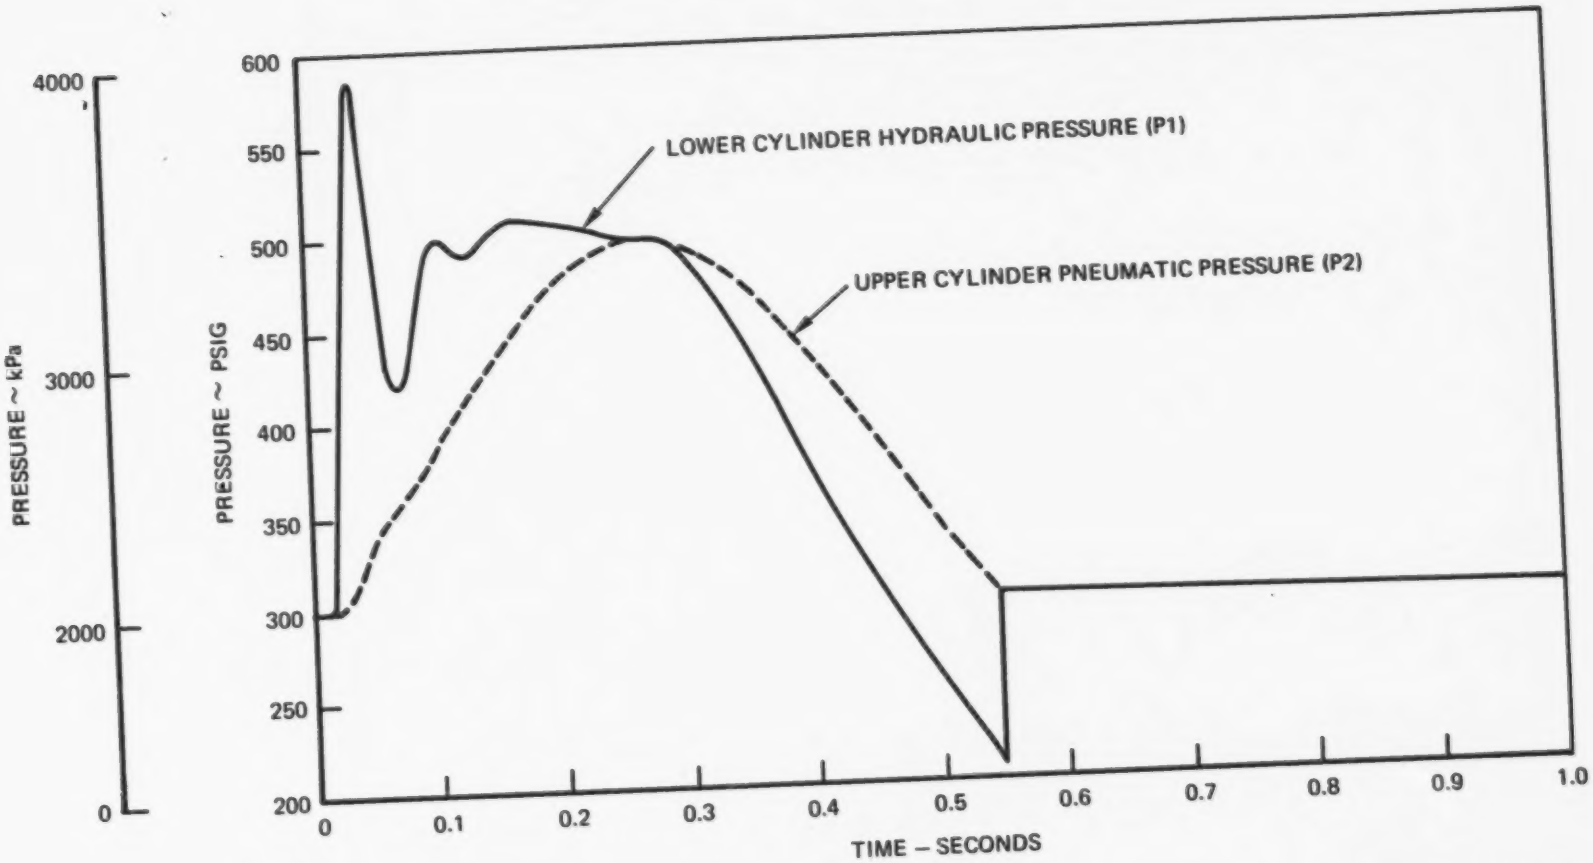

MICROFILMED FROM
BEST AVAILABLE COPY

FIGURE 3-23 CASE 1 PASSIVE GEAR

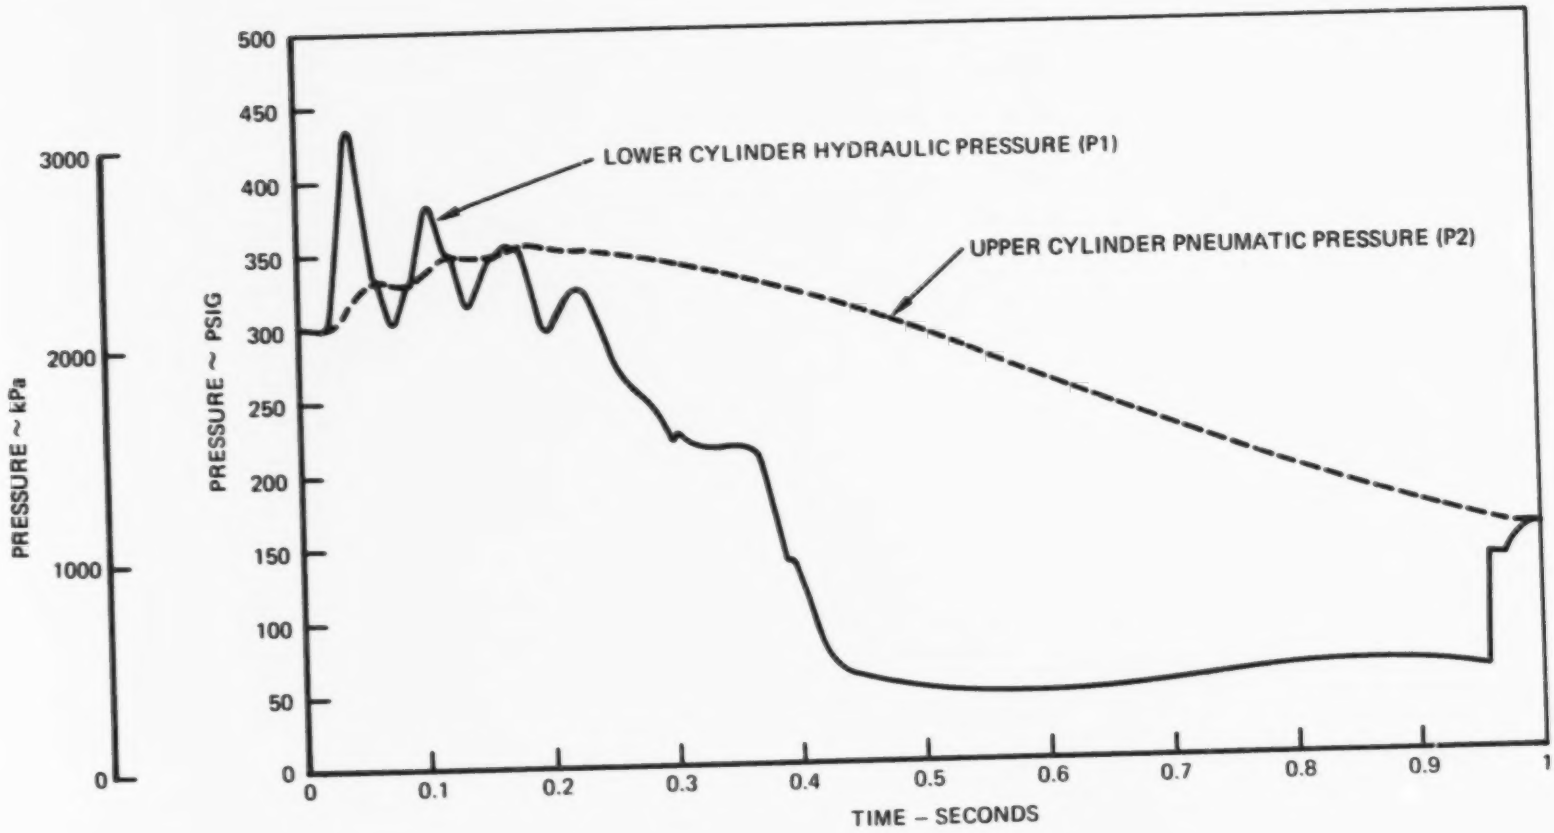

MICROFILMED FROM
BEST AVAILABLE COPY

FIGURE 3-24 CASE 1 ACTIVE GEAR

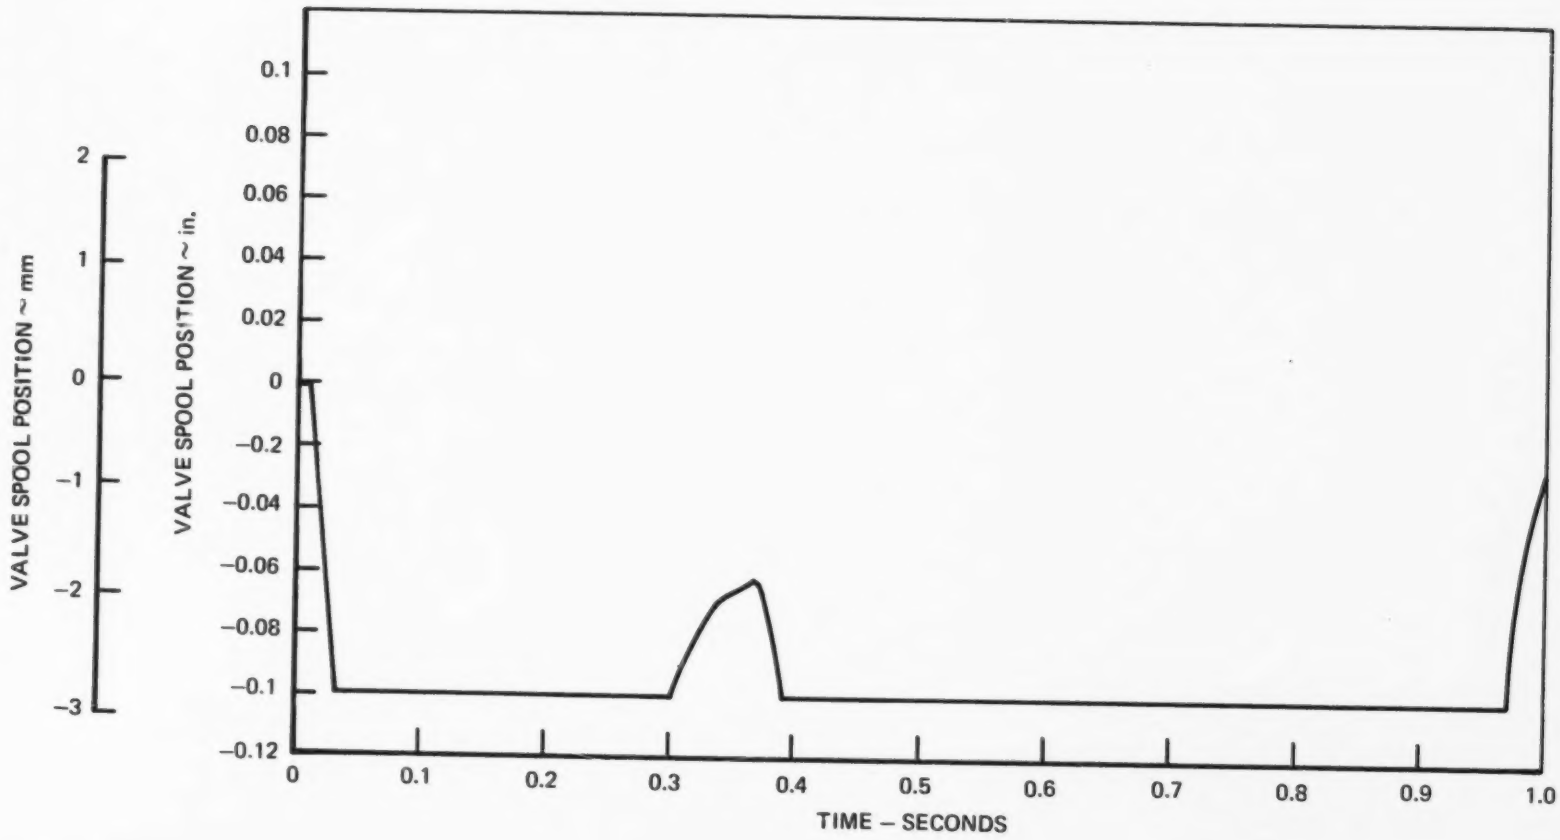

FIGURE 3-25 CASE 1 ACTIVE GEAR

MICROFILMED FROM
BEST AVAILA

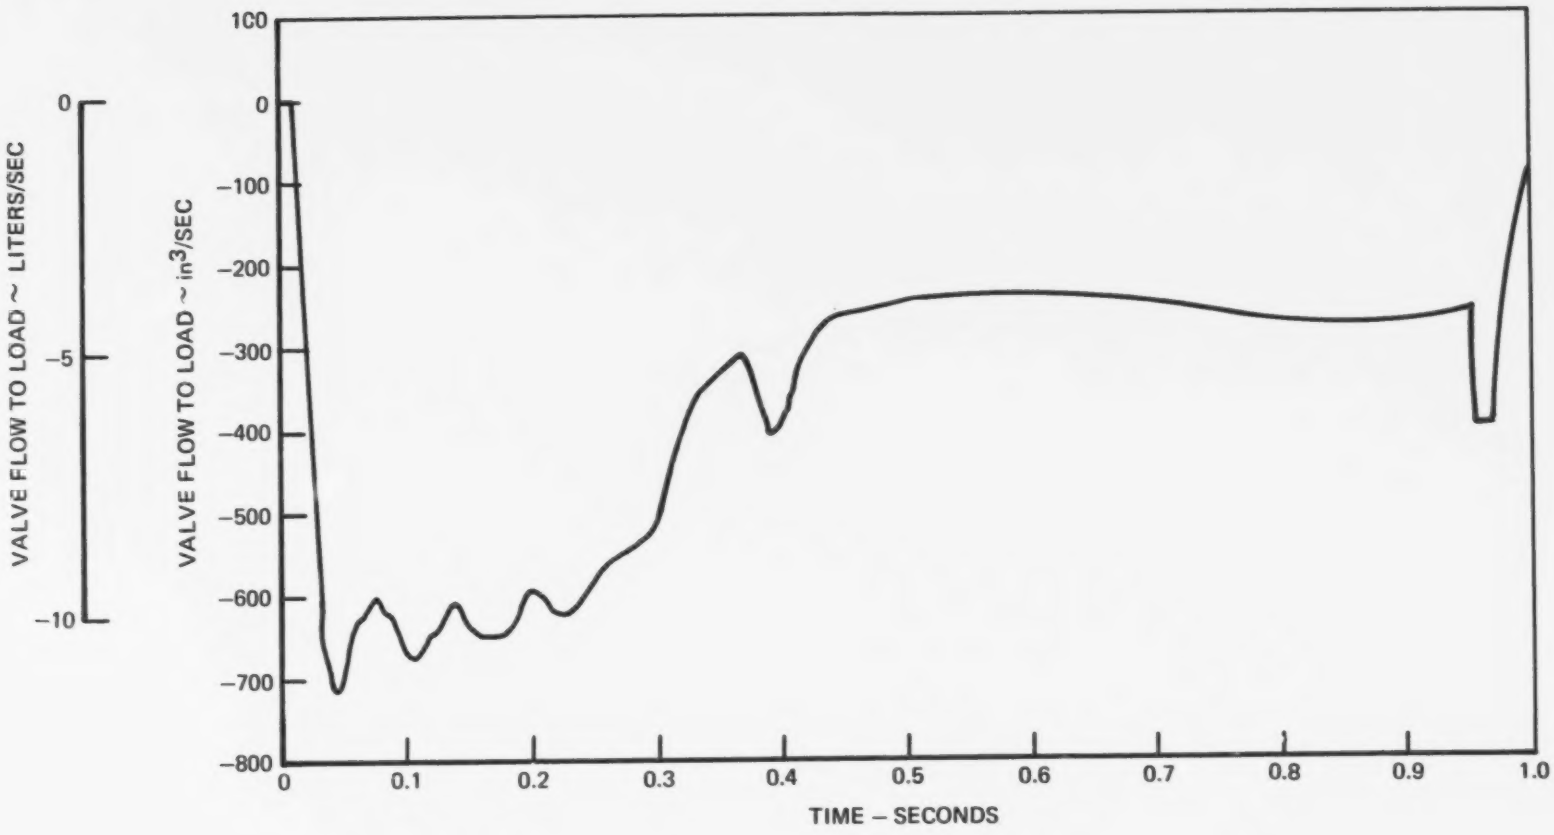

MICROFILMED FROM
BEST AVAILABLE COPY

FIGURE 3-26 CASE 1 ACTIVE GEAR

Command limit force is set automatically by the controller. Figure 3-19 shows the resultant wing/gear force transients for the active and passive gears. Active control reduces the peak force 20 percent below the passive gear case. Figure 3-20 compares the strut stroke between the two cases. The active gear uses significantly more stroke than the passive gear. Figures 3-21 and 3-22 show the vertical displacements of the ground level, landing gear axle, and wing/gear interface for the passive gear and the active gear, respectively. The displacements are positive in the up direction, and are all referenced to the condition where the gear is fully extended and barely in contact with the ground with zero tire compression. Thus, at the point of impact (at time = 0) all the variables are zero. When the axle displacement is below the ground level (which is constant), the tire is in compression; when it is above, the landing gear is off the ground. Also, when the wing gear interface displacement is the same as the axle displacement, the gear is fully extended. Thus, in Figure 3-21 for the passive gear, the landing gear becomes fully extended at 0.548 second and rebounds (i.e., leaves the ground) at 0.560 second. Note from Figure 3-22 that the active control causes the gear to remain in contact with the ground longer and when it rebounds, it does so at a lower upward velocity. Figures 3-23 and 3-24 show the lower and upper cylinder pressure transients for the passive and active gears, respectively. The pressures are significantly reduced in both cylinders as a result of active control. Finally, Figures 3-25 and 3-26 show the valve third stage spool displacement and the valve hydraulic flow rate to the gear respectively, for the active control case.

3.6.2 Vertical Drop, Case 2

The conditions for vertical drop case number 2 are as follows:

1. The sink rate prior to impact is 1.83 m/sec (72 in/sec).
2. The lift equals airplane weight (per gear) prior to and up to the point of impact, then lift is linearly reduced to 10 percent of airplane weight during the first second after impact, and lift is held constant at ten percent thereafter.
3. The ground level remains constant. Figures 3-27 through 3-34 show the transient response of the various variables of interest for the passive and active gear simulations. Active control in this case reduces the peak wing/gear force 22 percent below the passive gear case.

MICROFILMED FROM
BEST AVAILABLE COPY

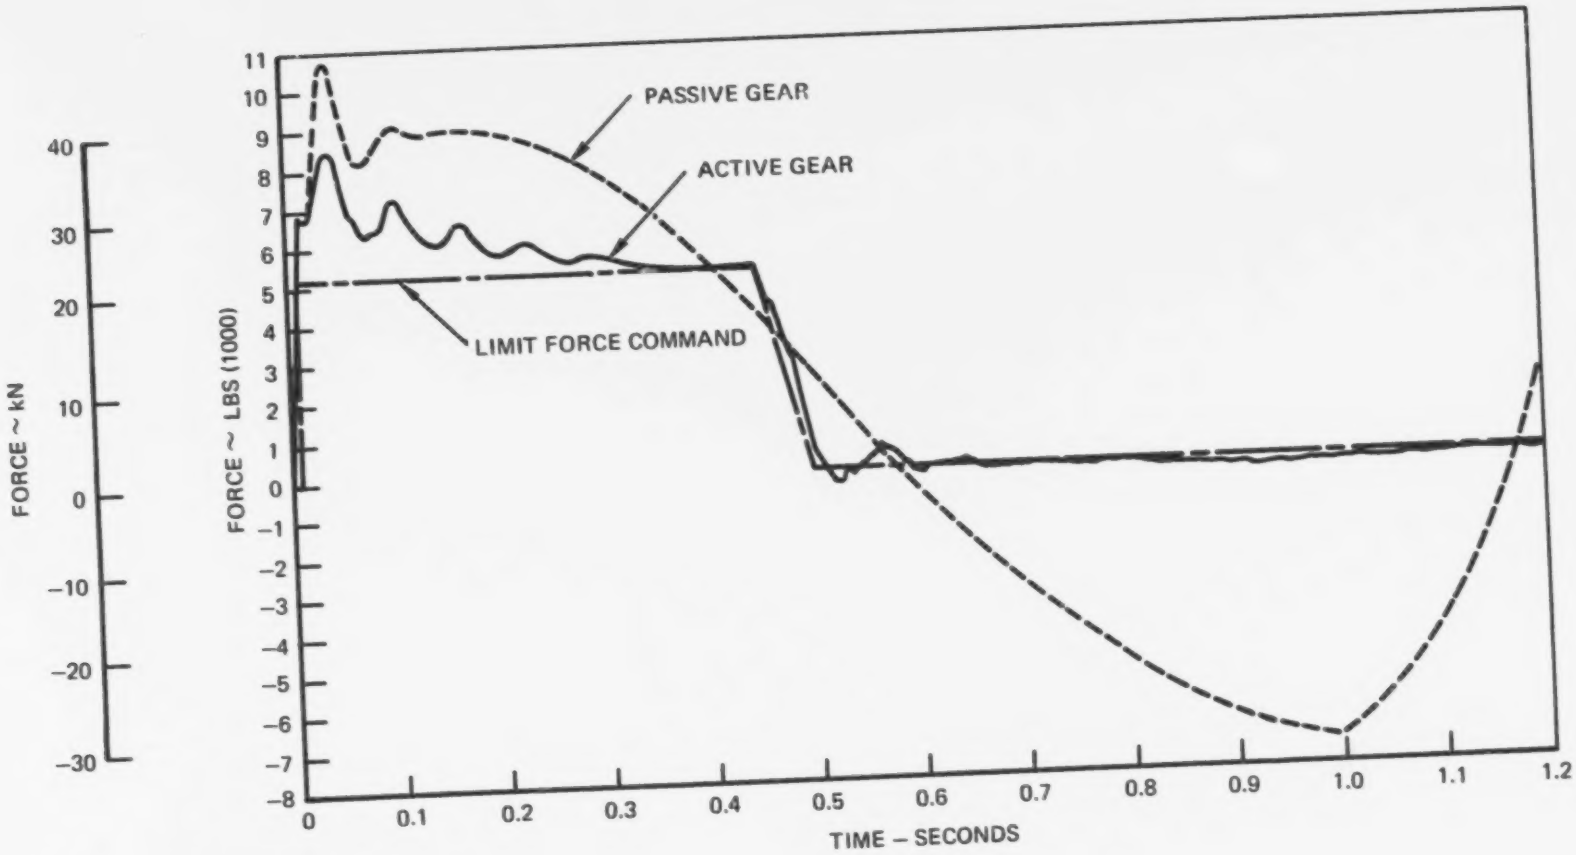

MICROFILMED FROM
BEST AVAILABLE COPY

FIGURE 3-27 CASE 2

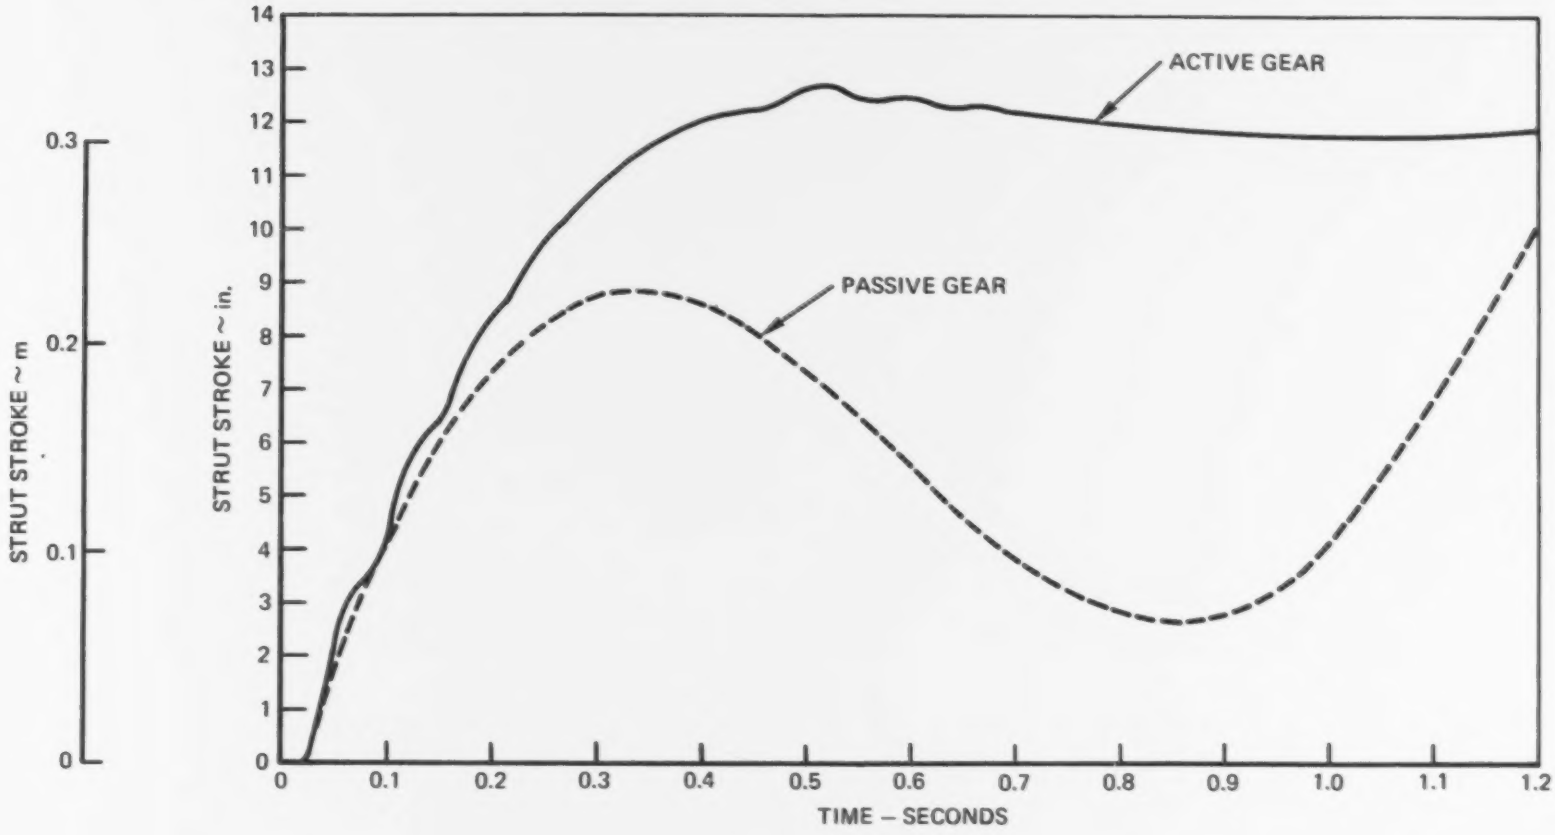

FIGURE 3-28 CASE 2

MICROFILMED FROM
BEST AVAILABLE COPY

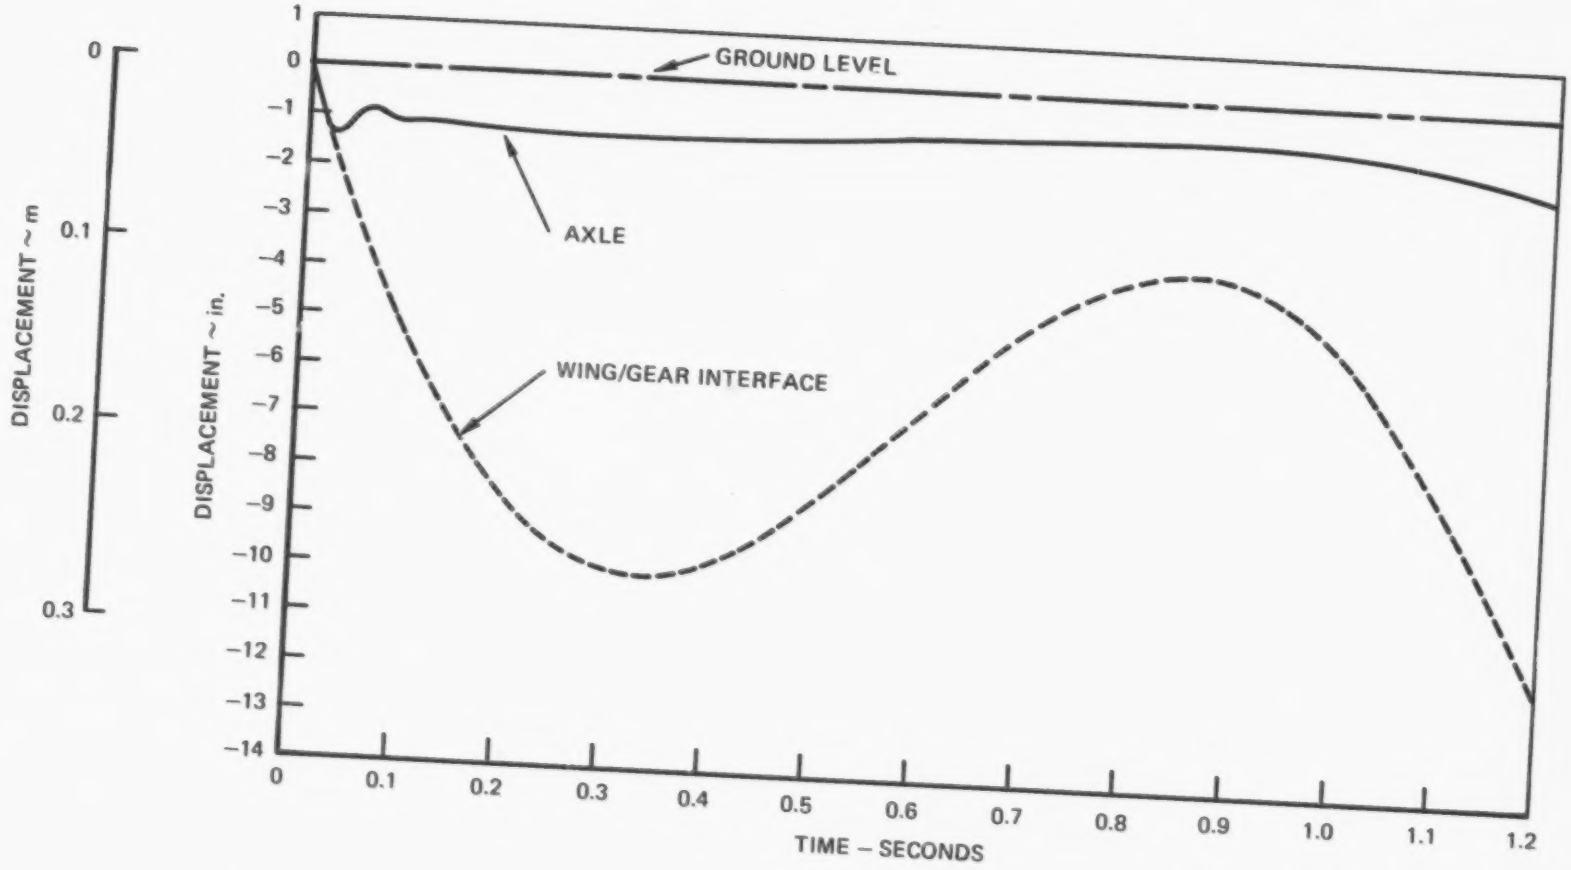

MICROFILMED FROM
BEST AVAILABLE COPY

FIGURE 3-29 CASE 2 PASSIVE GEAR

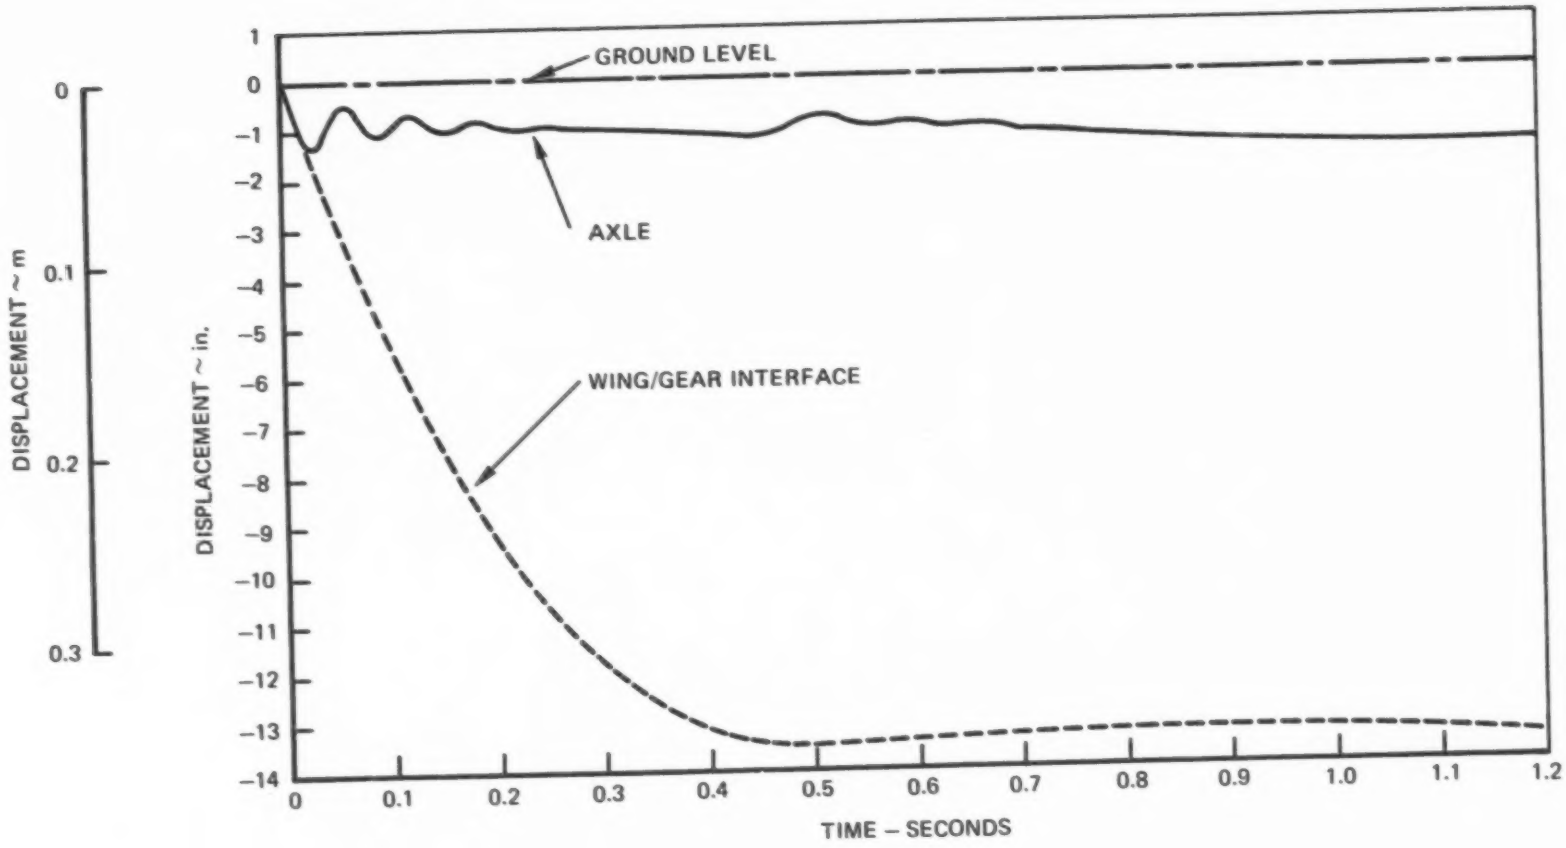

FIGURE 3-30 CASE 2 ACTIVE GEAR

MICROFILMED FROM
BEST AVAILABLE COPY

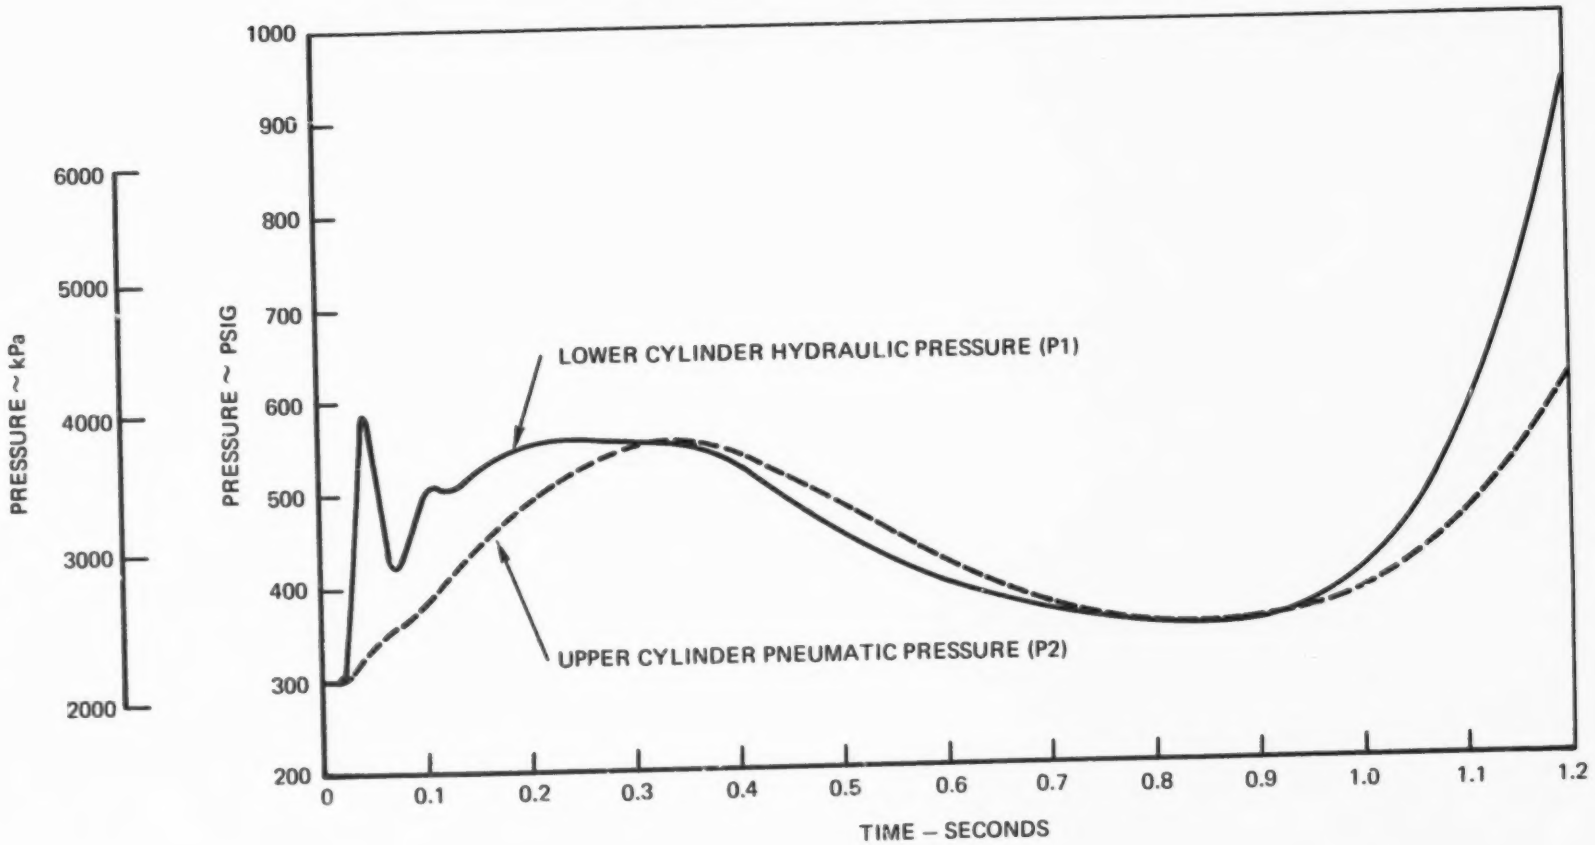

MICROFILMED FROM
BEST AVAILABLE COPY

FIGURE 3-31 CASE 2 PASSIVE GEAR

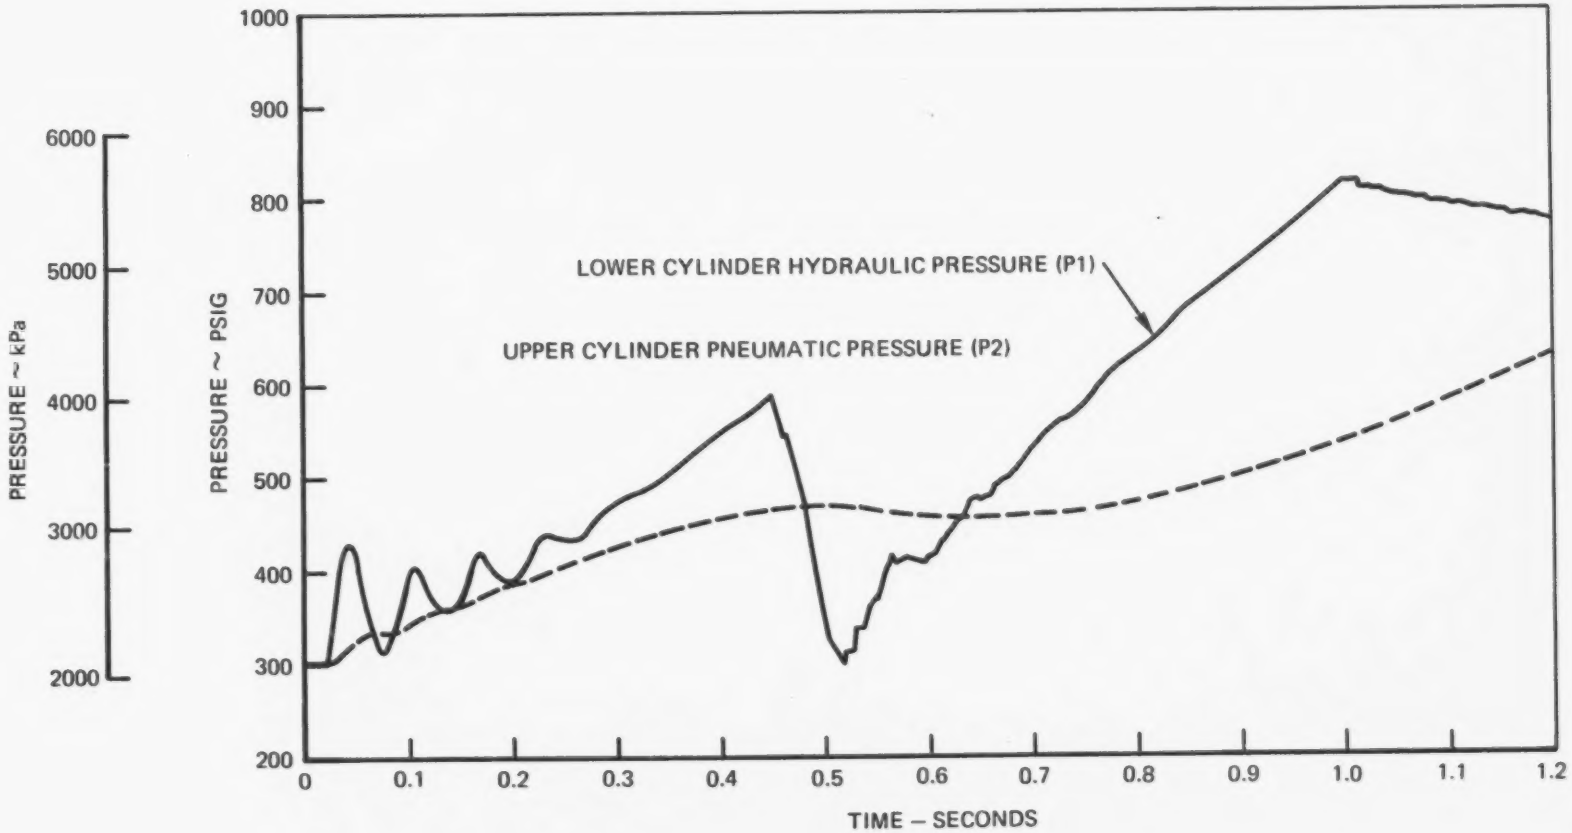

FIGURE 3-32 CASE 2 ACTIVE GEAR

MICROFILMED FROM
BEST AVAILABLE

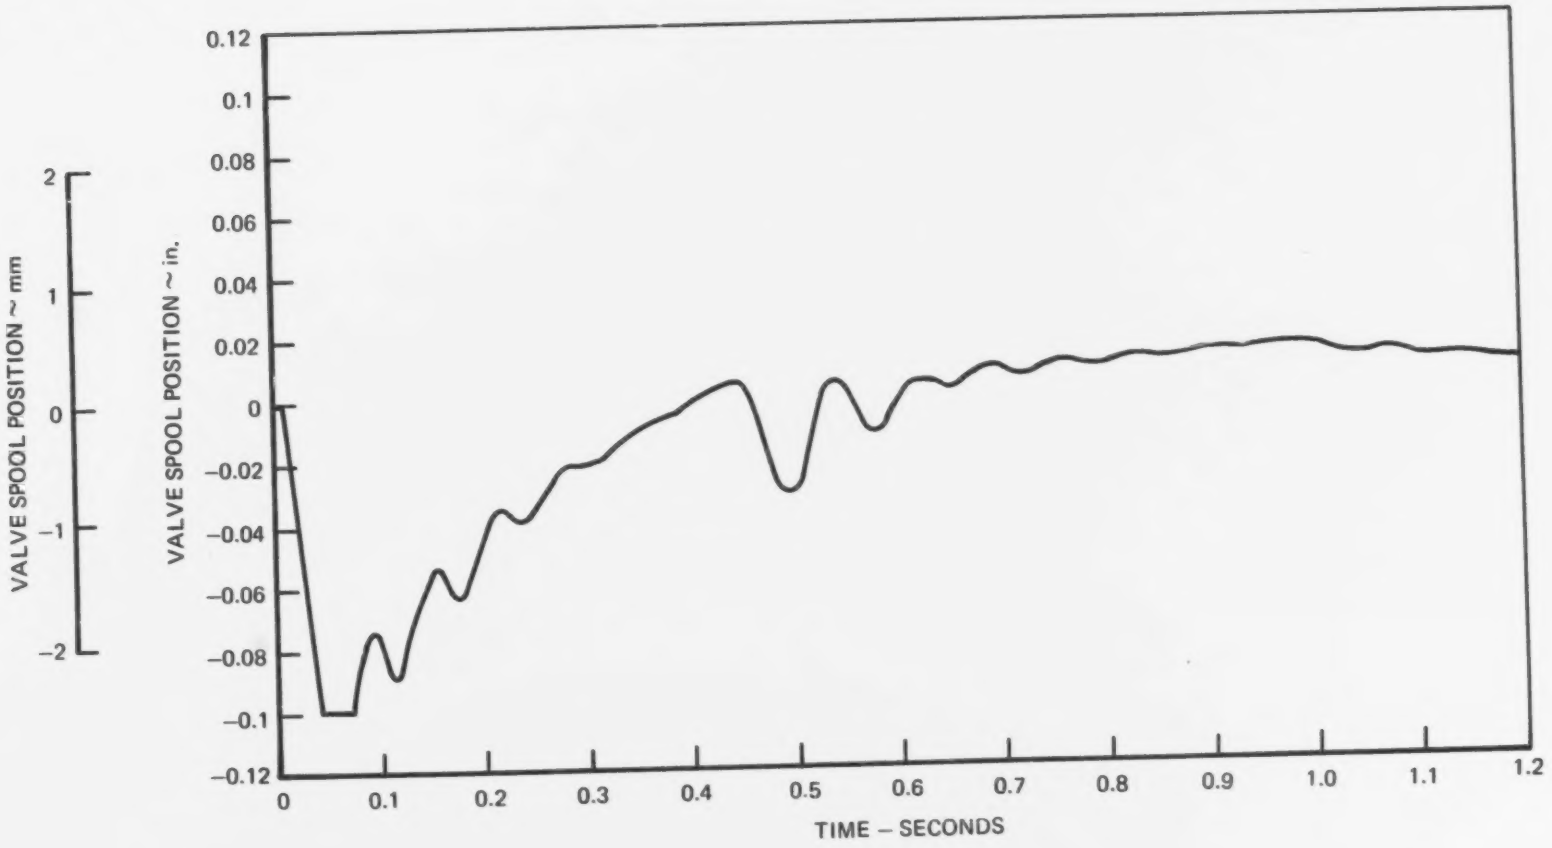

MICROFILMED FROM
BEST AVAILABLE COPY

FIGURE 3-33 CASE 2 ACTIVE GEAR

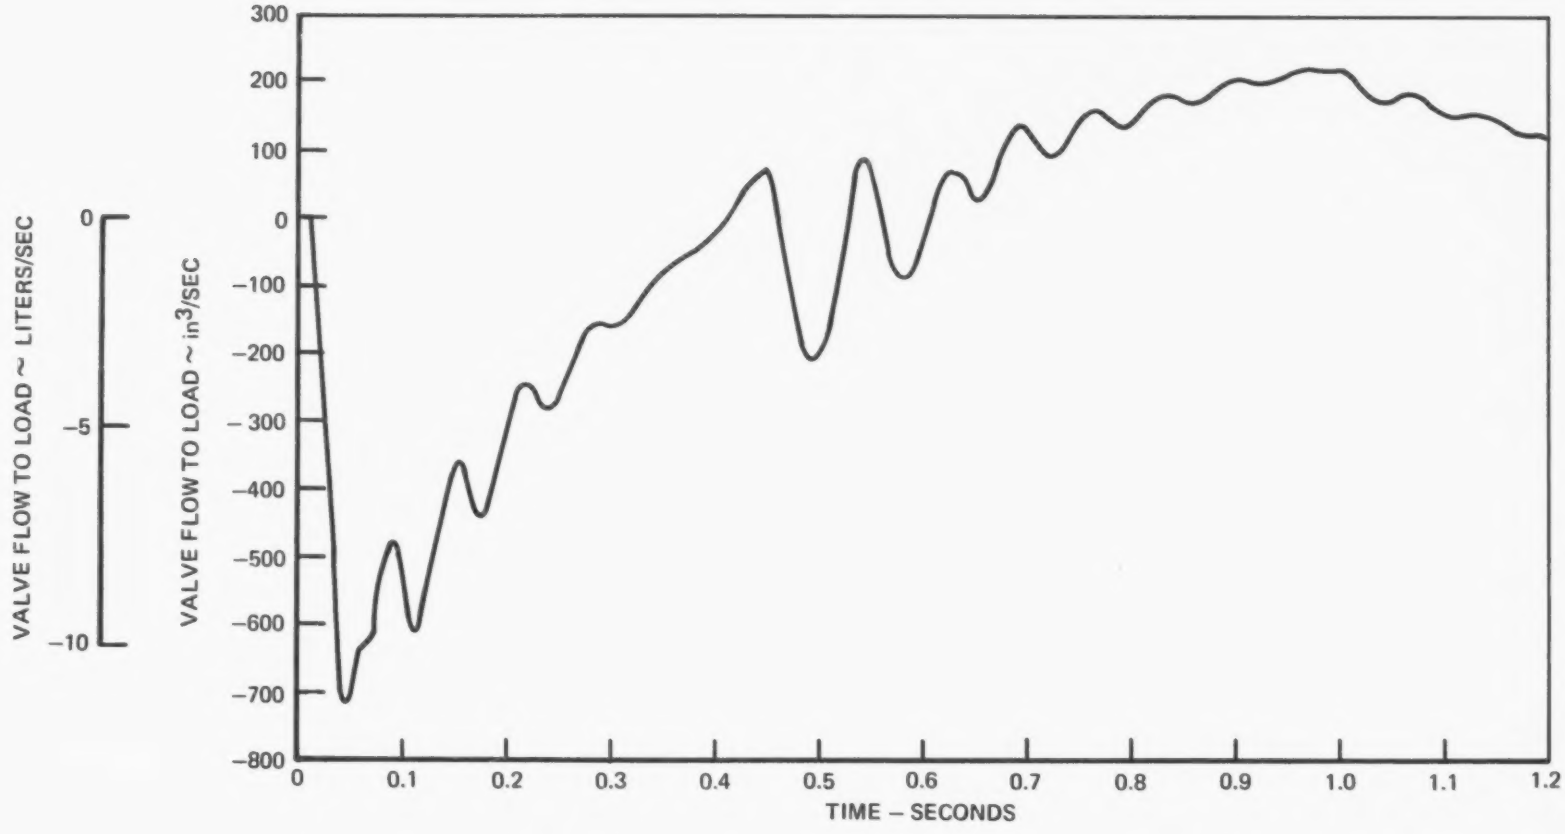

FIGURE 3-34 CASE 2 ACTIVE

MICROFILMED FROM
BEST AVAILABLE

3.6.3 Rollout Over Repaired Bomb Crater

Simulation of aircraft rollout over a repaired bomb crater (subsequent to an impact landing) was accomplished using the nonlinear vertical drop model. Initial conditions are calculated assuming the aircraft is in contact with the ground and the landing gear has reached an equilibrium condition in supporting the aircraft weight minus its lift. Assuming some horizontal speed for the aircraft, actual physical changes in ground level can be represented as transient changes which can be input into the nonlinear model. For this case a Class I repaired bomb crater was used. This was chosen because it was the worst-case profile out of all those supplied by NASA in support of this project. A diagram of the bomb crater is shown in Figure 3-35. The horizontal speed of the aircraft was assumed to be 51.8 m/sec (170 ft/sec). The command limit force is set to zero with a force deadband of ±8.9 kN (±2000 lbf) throughout the transient, consistent with the assumption that the disturbance occurs during rollout, subsequent to an impact landing. The lift is set to 10 percent of the aircraft weight (per gear) throughout the transient. Figures 3-36 through 3-43 show the transient response of the various variables of interest for the passive and active gear simulations. Active control in this case reduces the peak wing/gear force 74 percent below the passive gear case. Note also from Figures 3-38 and 3-39 that the passive gear leaves the ground three separate times during the transient, while the active gear leaves the ground only once, very briefly.

MICROFILMED FROM
BEST AVAILABLE COPY

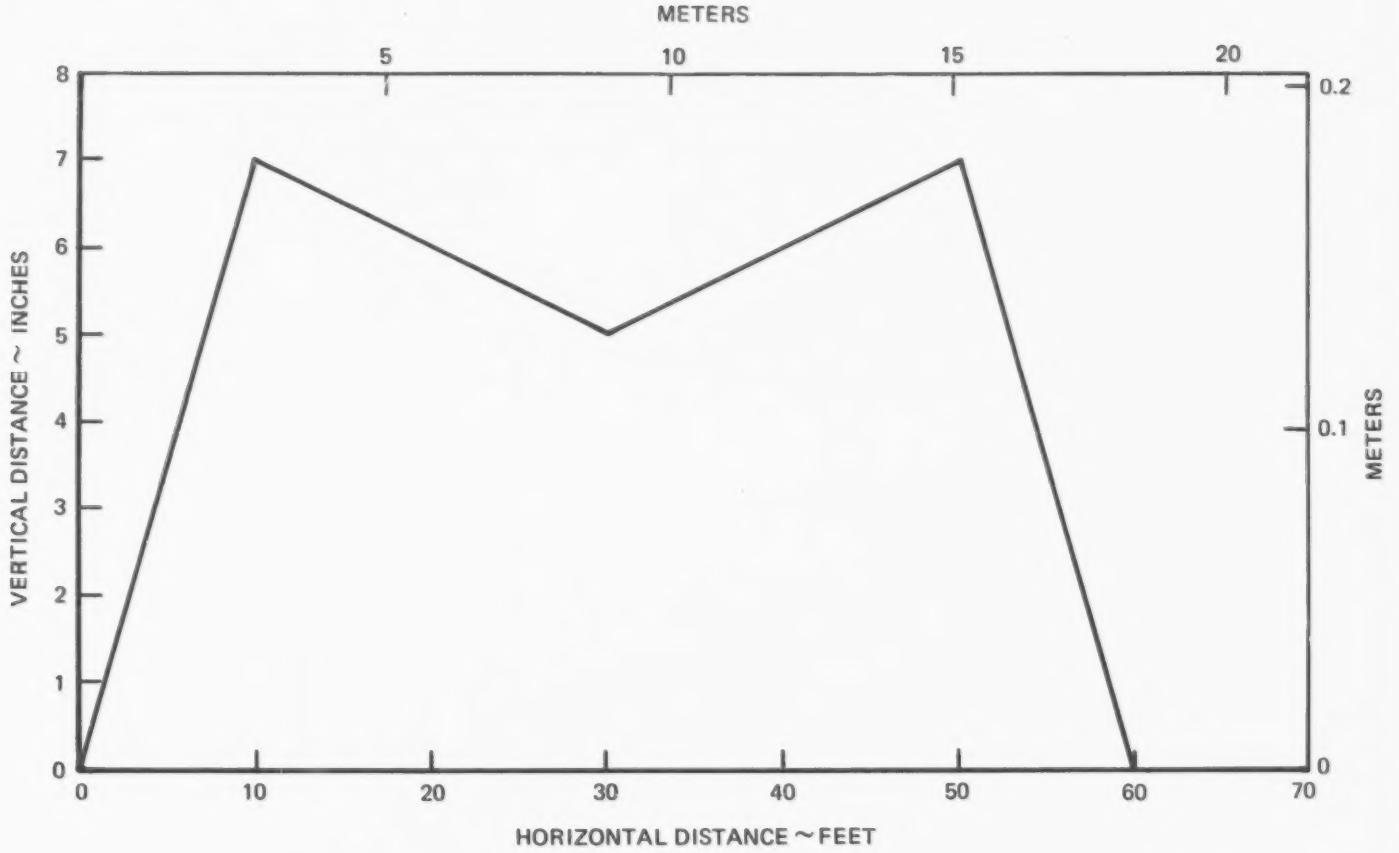

MICROFILMED
BEST AVAILABLE COPY

FIGURE 3-35. BOMB CRATER PROFILE

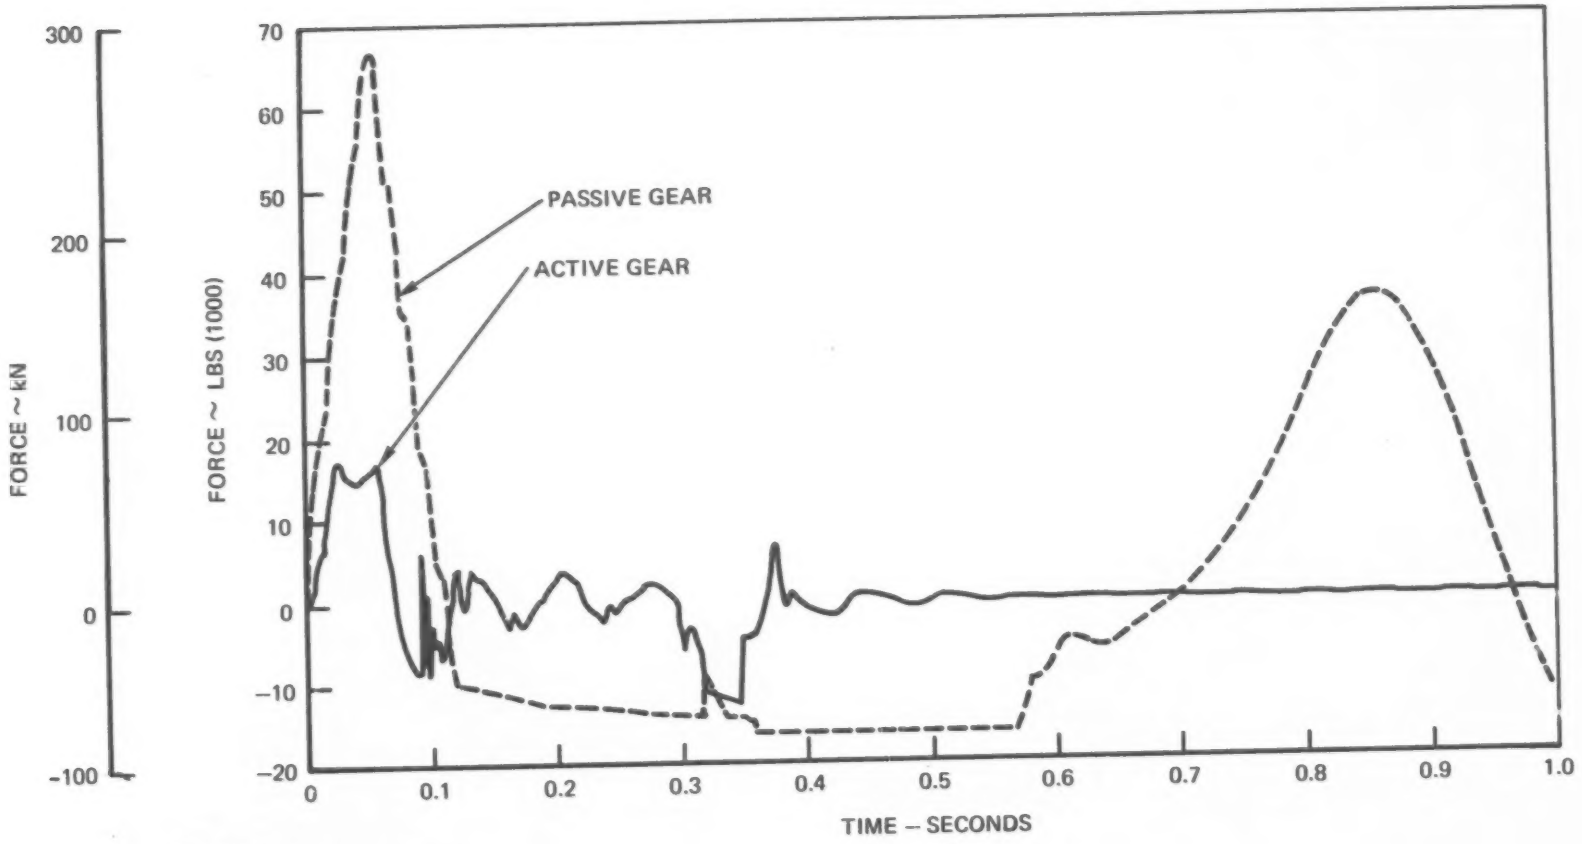

MICROFILMED FROM
BEST AVAILABLE COPY

FIGURE 3-36 BOMB CRATER LANDING

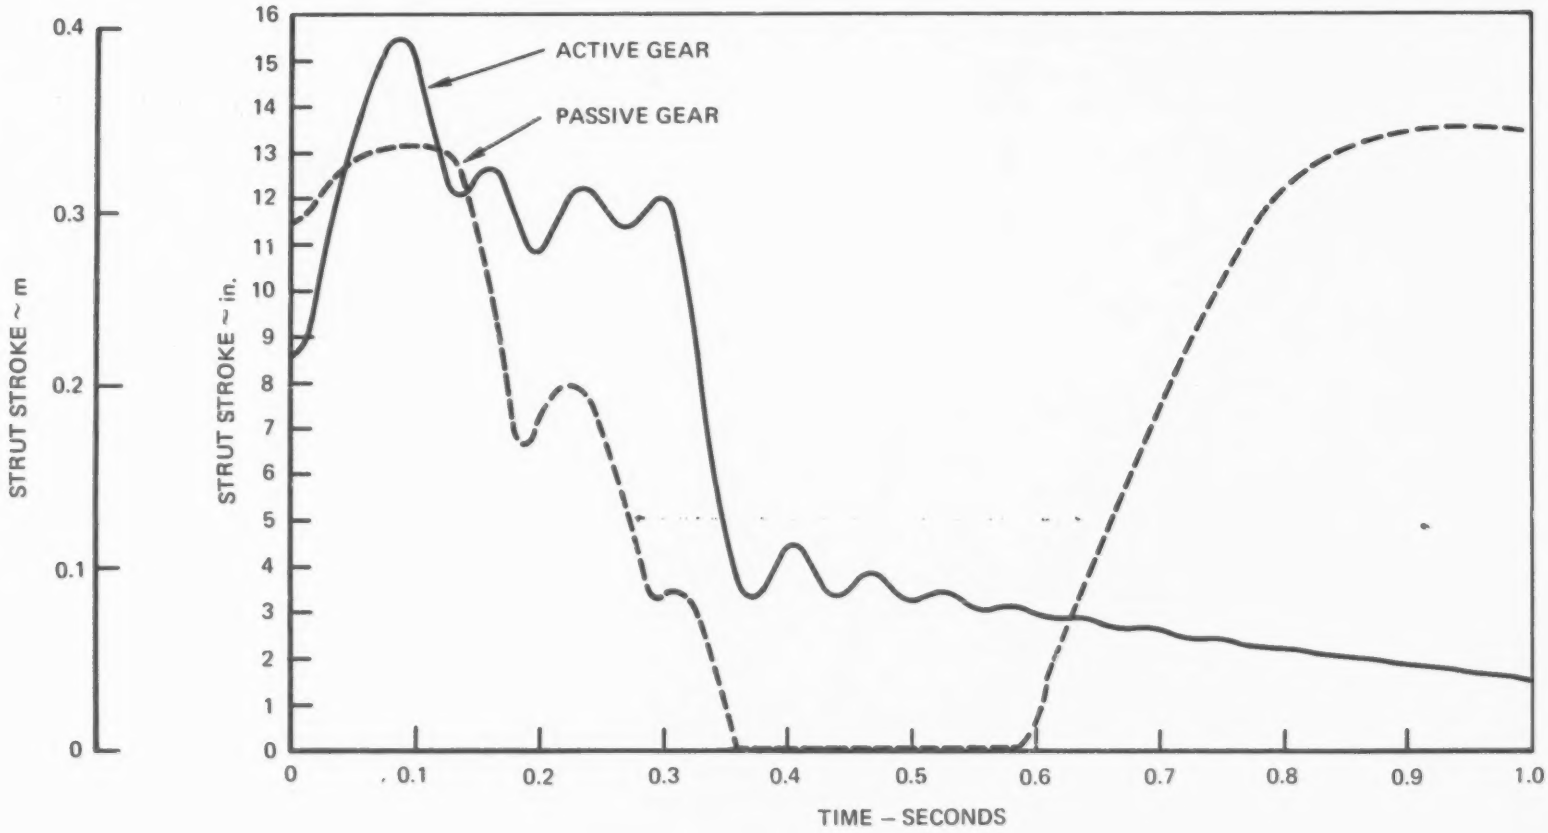

FIGURE 3-37 BOMB CRATER LANDING

MICROFILMED FROM
BEST AVAILABLE COPY

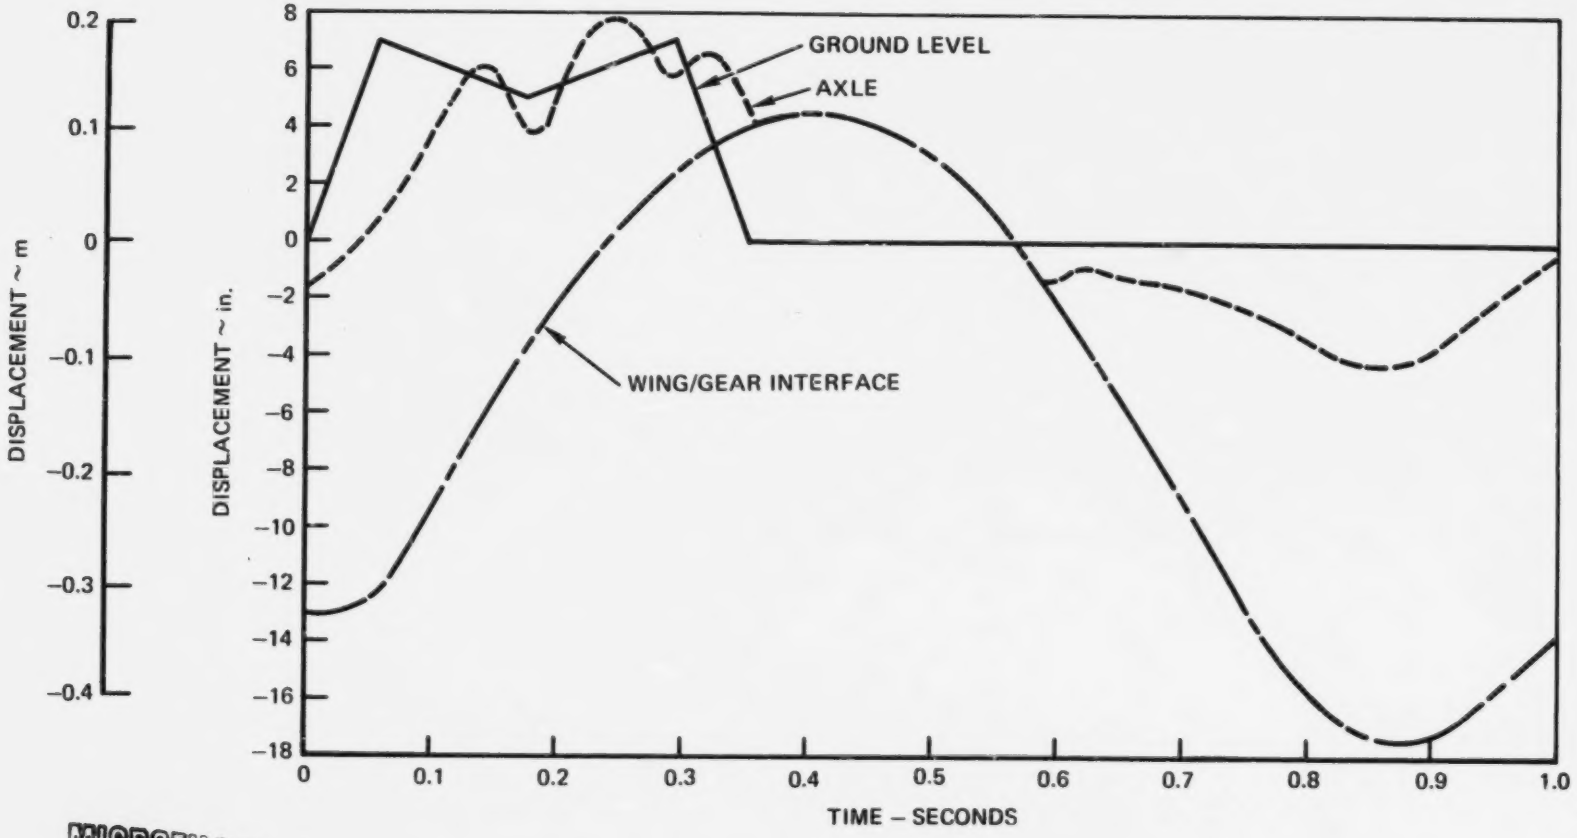

MICROFILM
BEST AVAILABLE COPY

FIGURE 3-38 BOMB CRATER LANDING PASSIVE GEAR

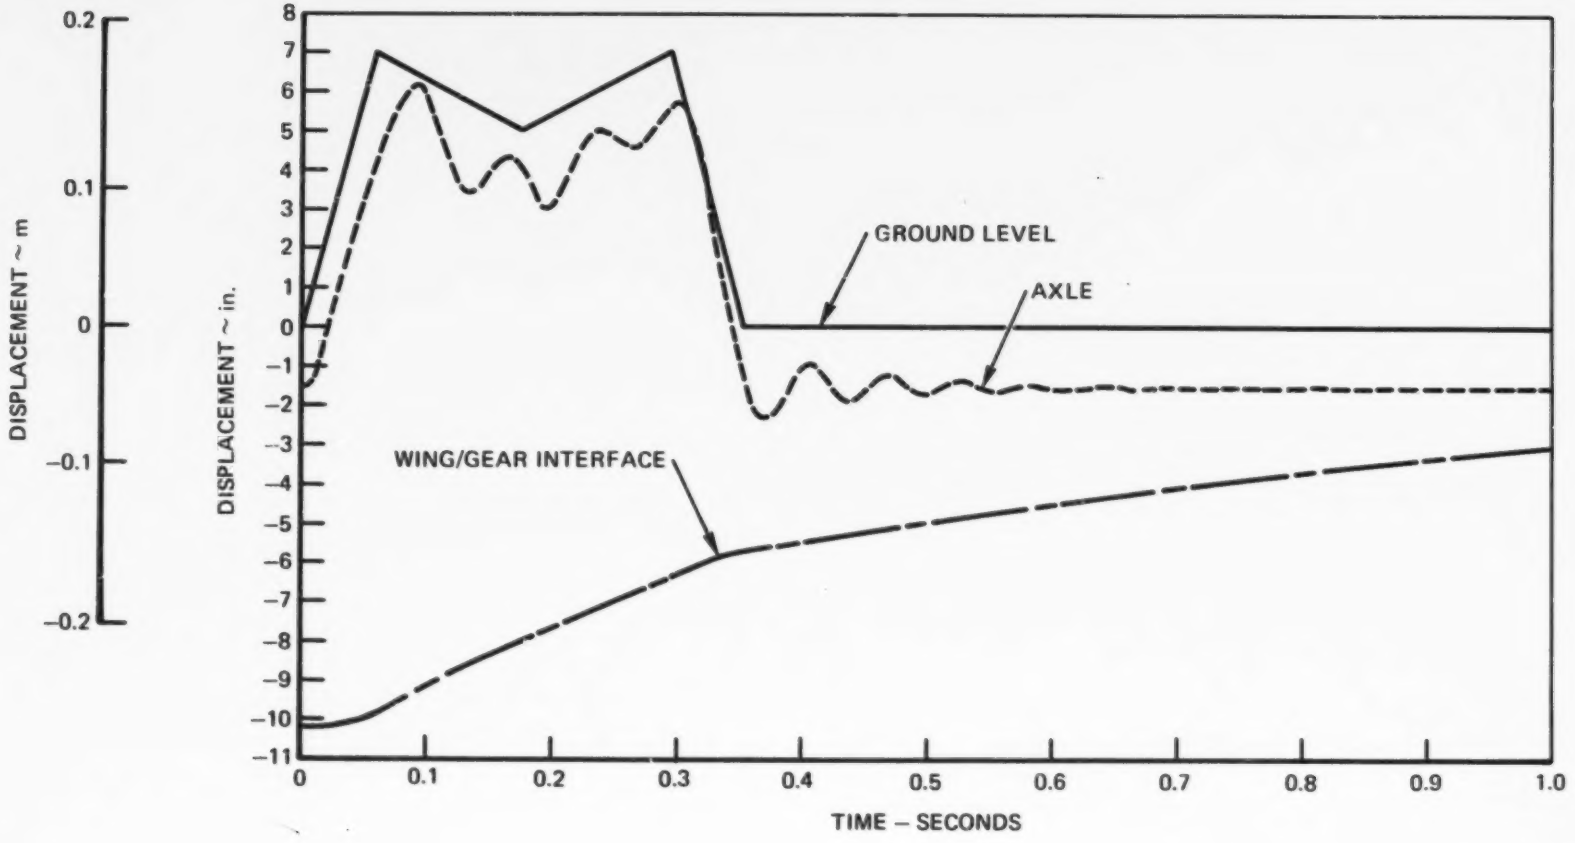

FIGURE 3-39 BOMB CRATER LANDING ACTIVE GEAR

MICROFILMED FRO
BEST AVAILABLE CO

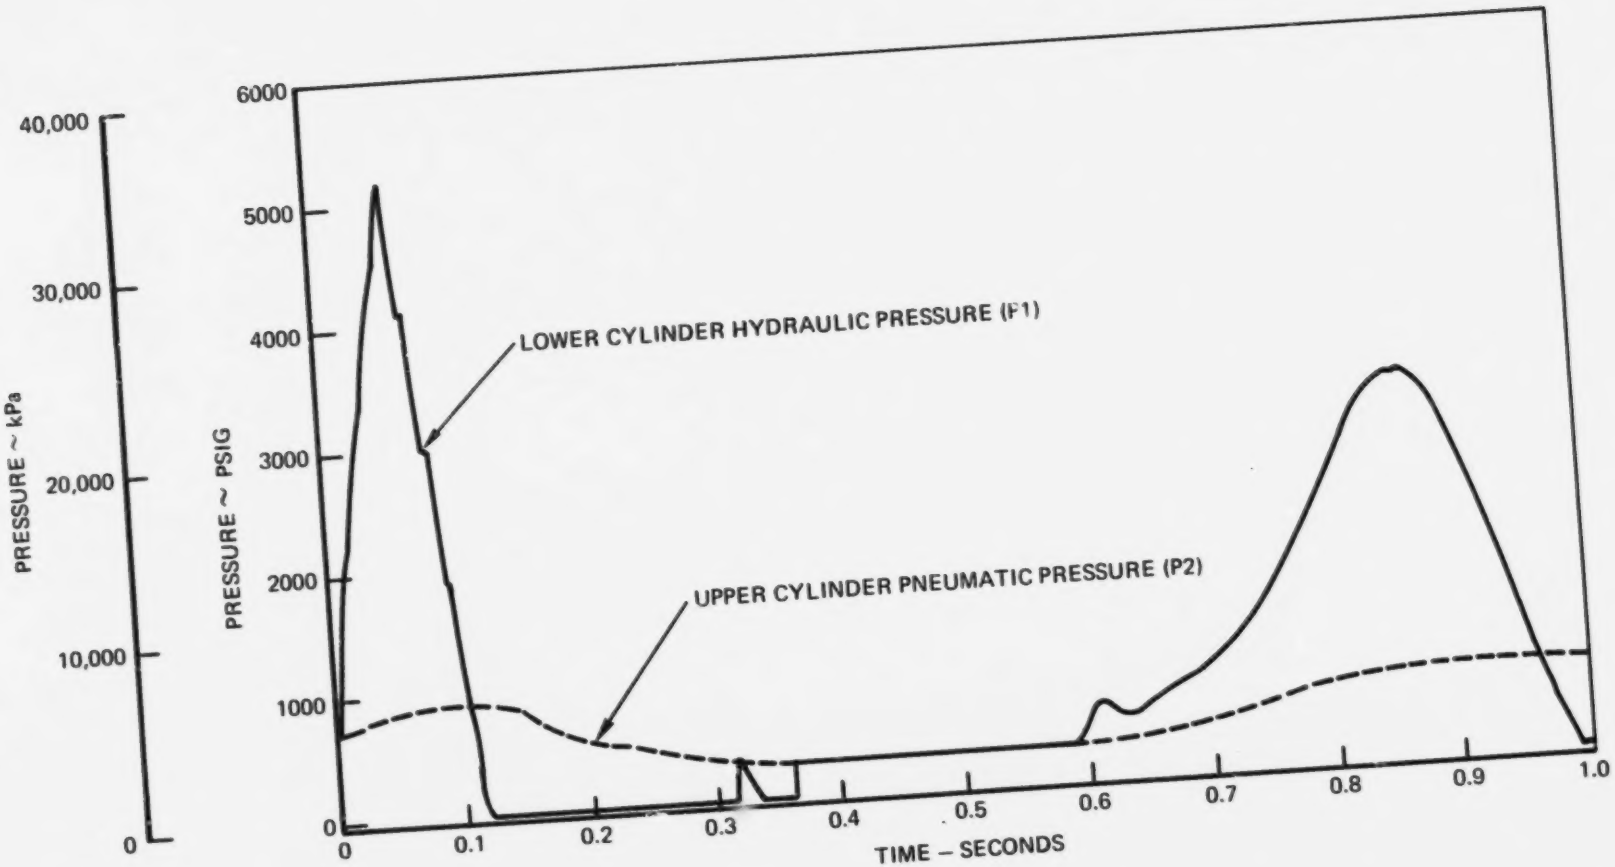

MICROFILMED FROM
BEST AVAILABLE COPY

FIGURE 3-40 BOMB CRATER LANDING PASSIVE GEAR

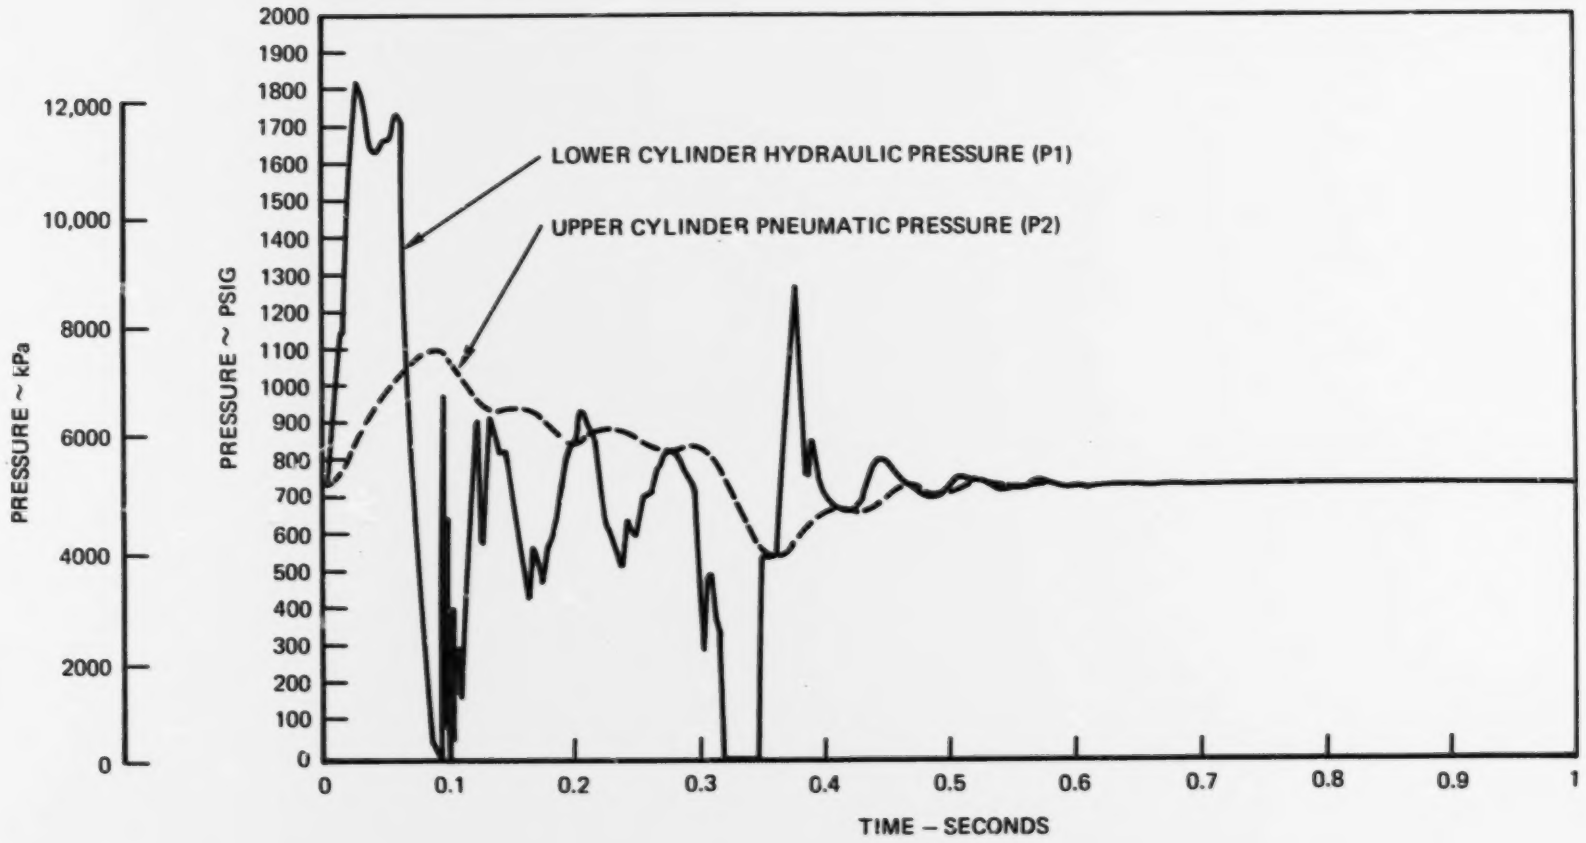

FIGURE 3-41 BOMB CRATER LANDING ACTIVE GEAR

MICROFILMED FROM
BEST AVAILABLE COPY

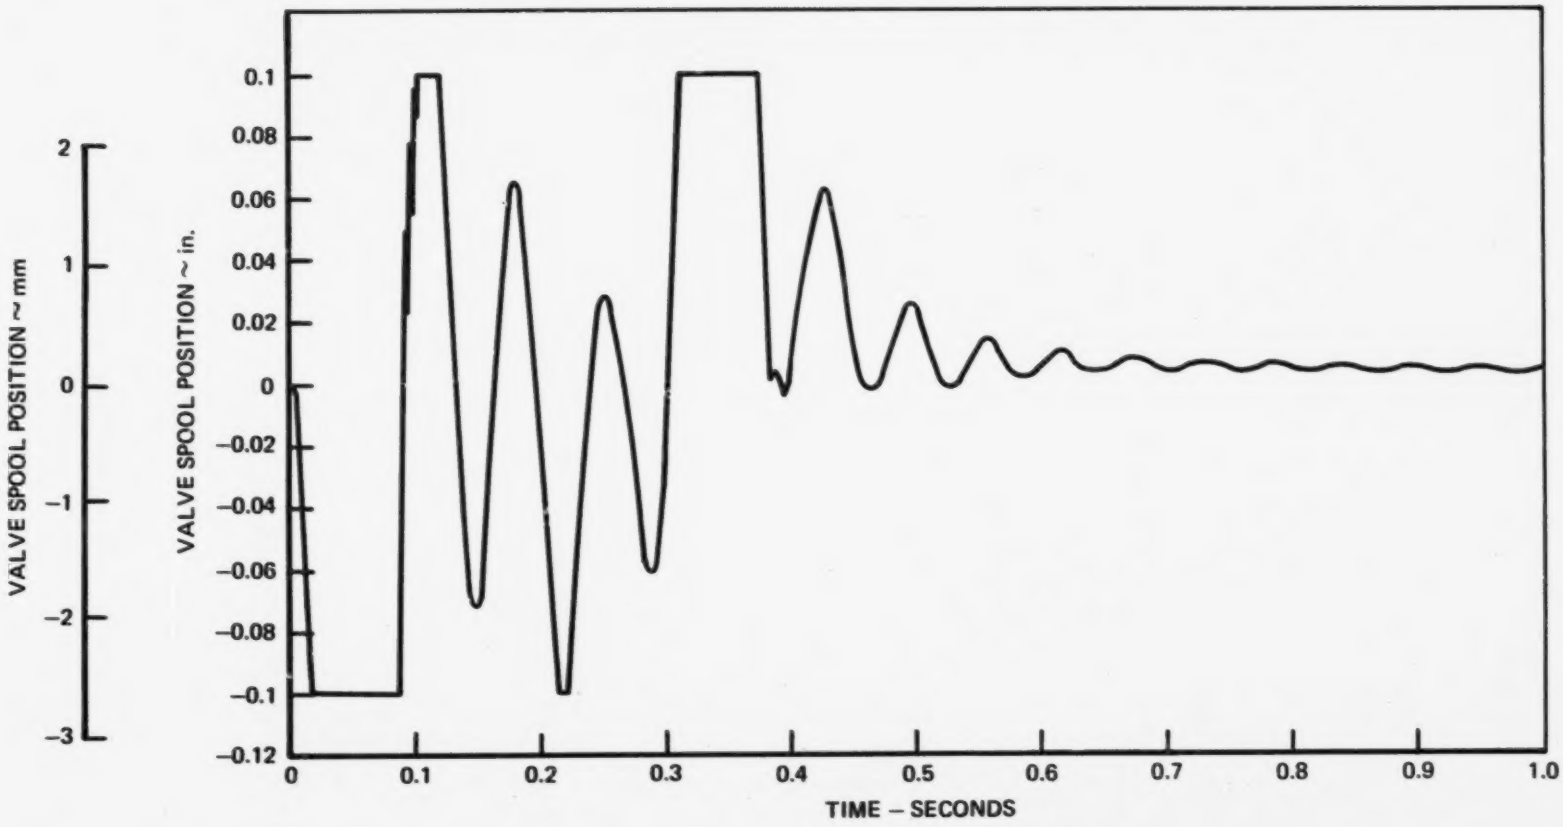

MICROFILMED FROM
BEST AVAILABLE COPY

FIGURE 3-42 BOMB CRATER LANDING ACTIVE GEAR

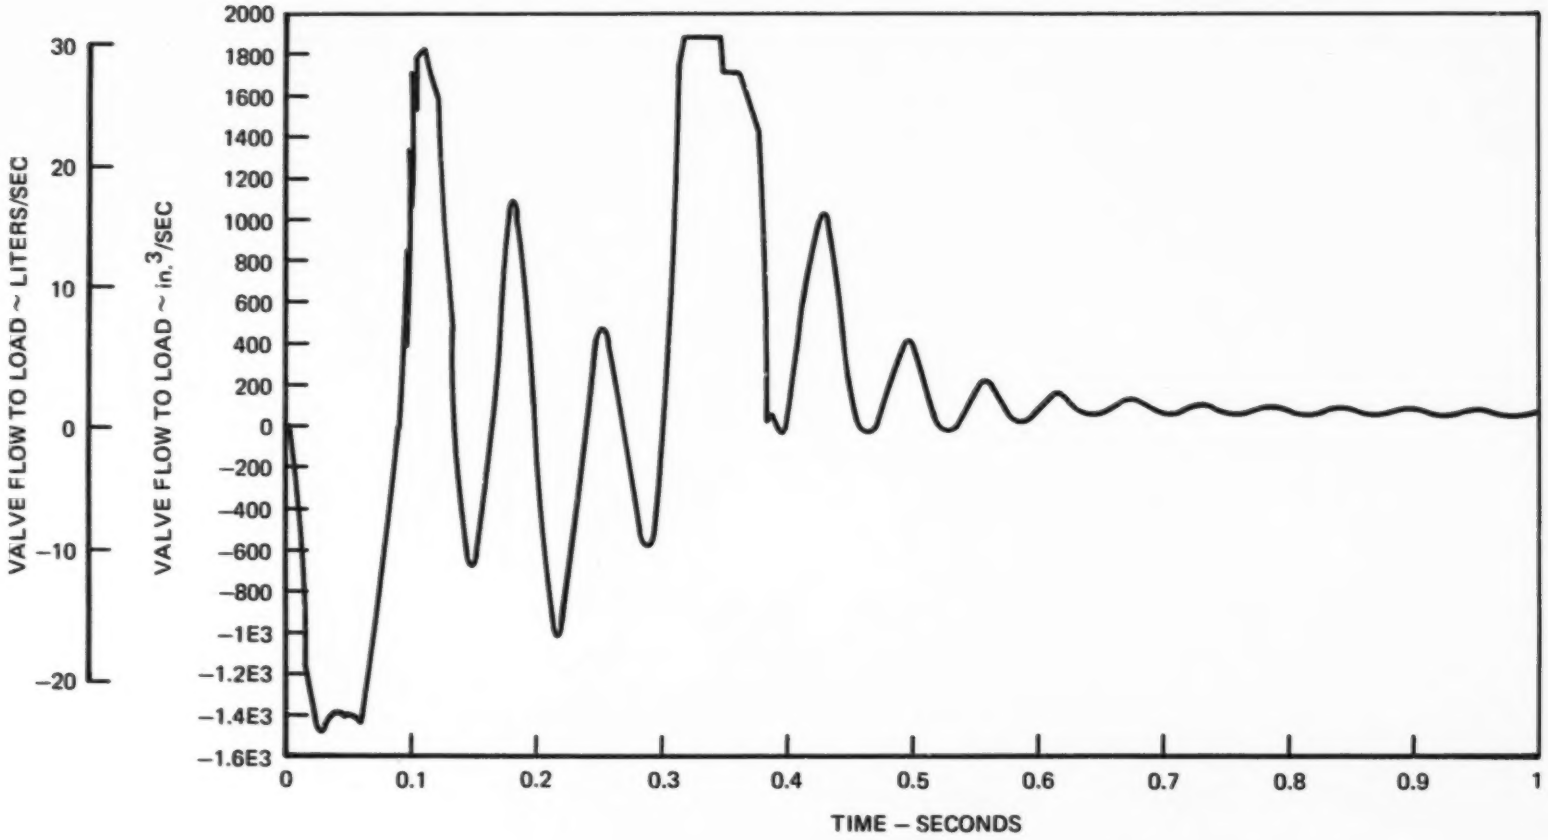

FIGURE 3-43 BOMB CRATER LANDING ACTIVE GEAR

MICROFILMED FROM
BEST AVAILABLE COPY

4.0 HARDWARE

The analog electronic hardware is the same as that designed during the Reference 1 investigation (HR drawing 88000080-201) except for the following circuit changes:

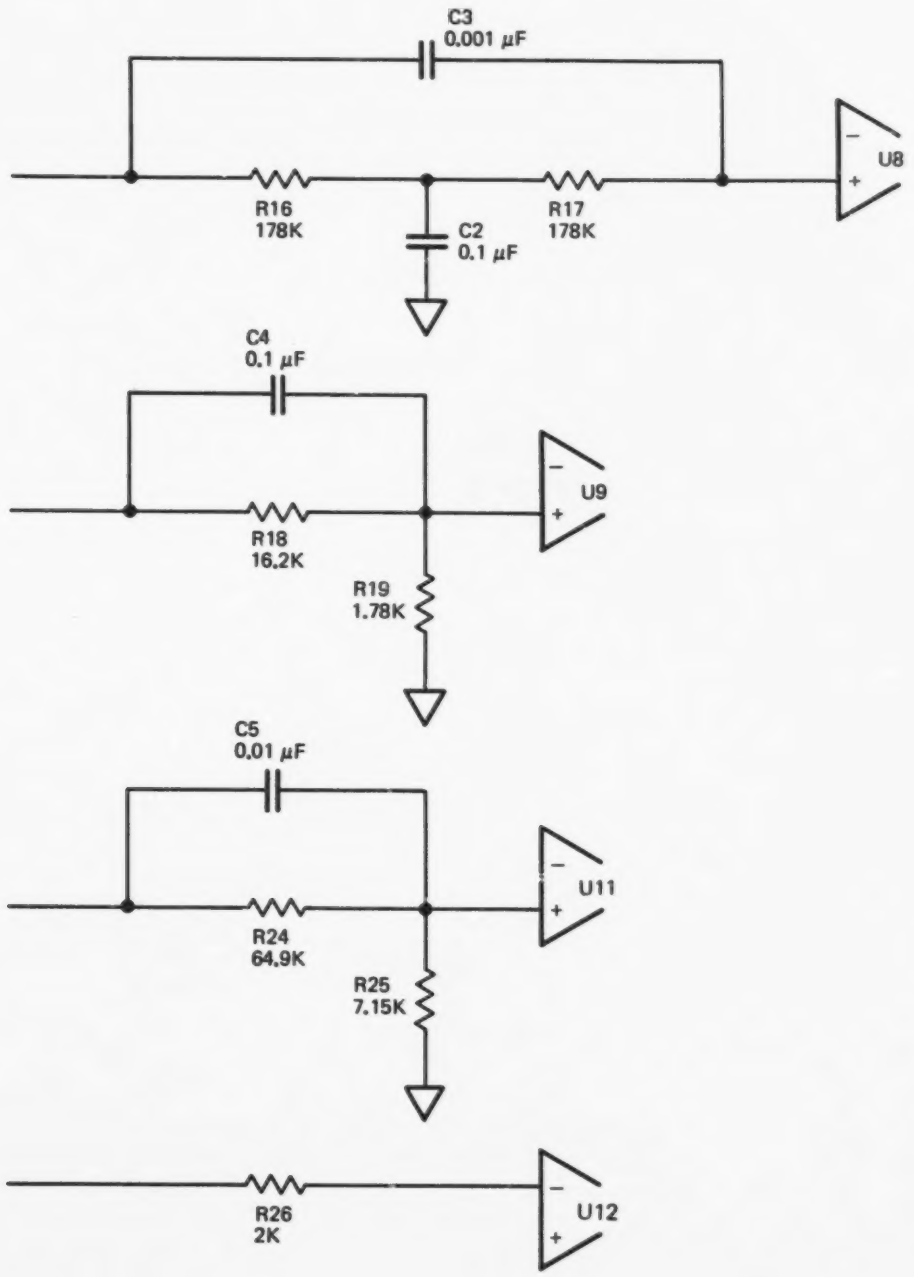

MICROFILMED FROM
BEST AVAILABLE COPY

The original hardware mechanization of Reference 1 did not include provisions for a force deadband. These provisions were subsequently added and consist of the following:

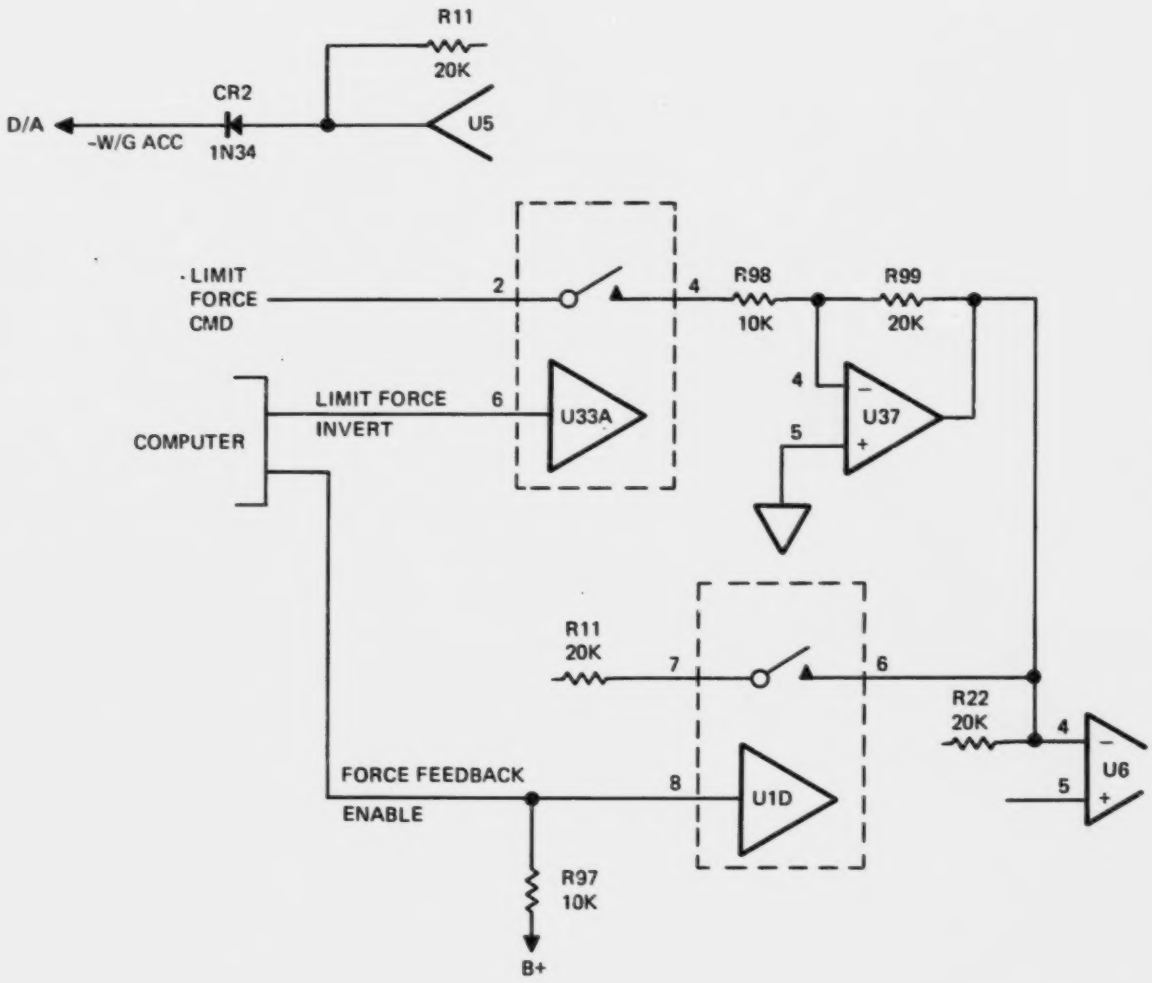

MICROFILMED FROM
BEST AVAILABLE COPY

5.0 SOFTWARE

The digital software of the system described in Reference 1 was modified to be compatible with the F-4 landing gear. Changes were incorporated to reflect the new scaling which was necessitated by the new weight and strut stroke. The scaling is discussed in detail in Appendix A.

In addition, program changes made by NASA were incorporated, including a force deadband which is effective in the takeoff mode as well as the landing mode.

The software flow chart is shown in Figure 5-1 and the complete program is listed in Appendix B.

6.0 CONCLUSION

An analysis has been made on the active control landing gear concept applied to the F-4 aircraft. Servocontrol loops and signal shaping have been defined. The results of the analysis show that the active control landing gear can significantly reduce the loads transmitted to the aircraft for both landing impact cases and rollout over ground level perturbations. For the vertical drop landing impact cases analyzed, reductions in wing/gear interface force of 20 to 22 percent were achieved from the conventional passive gear case. For the case of rollout over a repaired bomb crater, a reduction of 74 percent was achieved.

7.0 RECOMMENDATIONS

Based on the conclusion of this report it is recommended that the study be continued by investigating the following areas:

1. The benefits of the ACLG vs. any penalties involved such as cost, weight, and the effect on aircraft structure and hydraulic systems.

2. The possibility that under extremely uneven landing conditions the gear could be depleted of fluid and the effect of such depletion.

3. Requirements for landing at higher sink rates, i.e., 3.05 m/sec (10 ft/sec).

4. The design of a flightworthy ACLG for the F-4 aircraft.

5. The application of the results of this analysis to other aircraft systems.

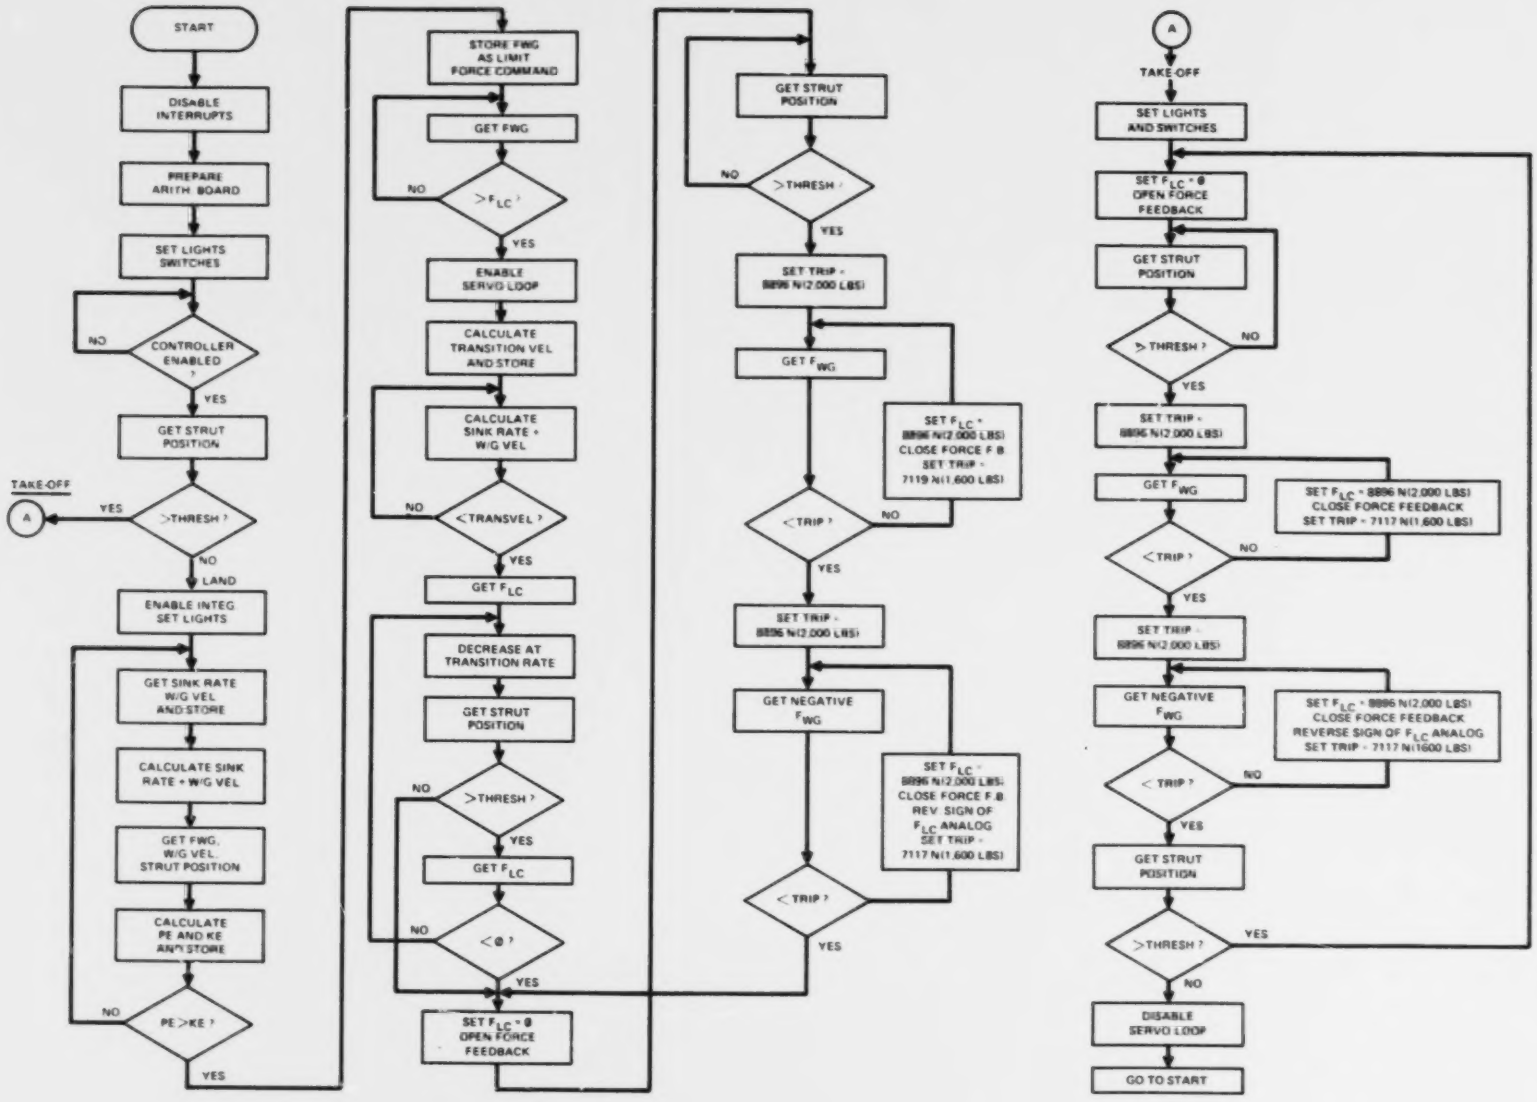

FIGURE 5-1 SOFTWARE FLOW CHART

MICROFILMED FROM BEST AVAILABLE COPY

APPENDIX A

DIGITAL SCALING

Since the stroke of the strut is 0.4034 m (15.88 in) it is anticipated that a (0.51m) potentiometer will be used to measure strut displacement.

It is further anticipated that the wing/gear interface accelerometer will be the same as that used in the system described in Reference 1.

Based on these assumptions the digital scaling is as follows:

(1) W/G acceleration:

The scale factor of the accelerometer is 2.85 v/g. The accelerometer signal is attenuated to 0.6316 of its value and then amplified by a factor of 6 in the analog circuitry to produce a scale factor of 10.8 v/g. Since 10 v = 4095 bits the digital acceleration scale factor is:

$$10.8 \times 409.5 = 4423 \text{ bits/g.}$$

Since the aircraft weight is:

$$8.184 \times 10^4 \text{ N (18,398 lb)}$$

the scale factor in terms of force is:

$$0.05404 \text{ bits/N } (0.2404 \text{ bits/lb})$$

(2) W/G Velocity:

As stated above, the accelerometer scale factor is 2.85 v/g

$$\text{or } \frac{2.85\text{v}}{9.807\text{m/sec}^2} \quad \text{or: } 0.2907 \text{ v/m/sec}^2 (0.00738 \text{ v/in/sec}^2)$$

In the analog circuitry this signal is amplified by a factor of

$$(0.6316)(21.47) = 13.56$$

and integrated to produce w/g velocity. The velocity scale factor is then:

$$(0.2907)(13.56) = 3.94 \text{ v/m/sec/ } (0.1 \text{ v/in/sec}).$$

Digitally the scale factor is:

(3.94 v/m/sec)(409.5 bits/v) = 1614 bits/m/sec (40.95 bits/in/sec).

(3) Sink rate

The sink rate is scaled at

3.94 v/m/sec (0.1 v/in/sec)

or digitally at

1614 bits/m/sec (40.95 bits/in/sec)

to match the scaling of the w/g velocity signal.

(4) Strut displacement:

The strut potentiometer produces

10 v for 0.508 m (20 in).

Its scale factor is then

19.96 v/m. (0.5 v/in).

The potentiometer signal is multiplied by 0.715 in the analog circuitry to produce a scale factor of:

19.96 (0.715) = 14.08 v/m (0.3575 v/in).

Digitally the scale factor is

$$(14.08 \text{ v/m } (409.5 \frac{\text{bits}}{\text{v}}) = 5766 \text{ bits/m } (146.4 \text{ bits/in}).$$

The maximum strut displacement is equivalent to:

(0.4034 m)(5766 bits/m) = 2325 bits

which is 0915 HEXADECIMAL (H).

(5) Work potential of the strut:

$$WP = Fwg\ (Xmax - Xs) = M\ddot{X}wg\ (Xmax - Xs)$$

If $\ddot{X}wg$ = 1 g and X max - Xs = 0.0254 m (1 in) then

$M\ddot{X}wg = 8.184 \times 10^4$ N (18,398 lb.)

WP is then $(8.184 \times 10^4 * 0.0254$ = 2079 N-m (18,398 lbf ins)

As pointed out in (1) and (4) above, 1 g is equivalent to:

10.8 v and 0.0254 m (1 in) is equivalent to 0.3575 v.

Digitally then,

$$WP = (10.8\ v)(409.5\ \tfrac{bits}{v})(0.3575\ v)(409.5\ \tfrac{bits}{v}) = 6.4745 \times 10^5 \text{ bits.}$$

The scale factor of WP is therefore:

$$\frac{6.4745 \times 10^5}{2079} = 3.114 \times 10^2 \text{ bits/N-m} \quad (35.19 \text{ bits/lbf.in})$$

(6) Kinetic Energy:

$KE = \frac{1}{2} W/g\ (V\ tot)^2$ where $V\ tot = V\ touchdown + \int_o^\tau \ddot{X} w g dt$

If Vtot = 0.0254 m/sec (1 in/sec) then

$$KE = \tfrac{1}{2} \frac{(8.184 \times 10^4 N)}{(9.807\ m/sec^2)} (0.0254\ m/sec)^2 = 2.692\ Nm\ (23.83\ lb\ in)$$

Digitally, from (2),

Vtot = (0.0254 m/sec)(3.94 v/m/sec)(409.5 bits/v) = 40.95 bits.

Then $KE = (40.95)^2 = 1676.9$ bits.

Therefore the scale factor for KE is:

$$\frac{1676.9 \text{ bits}}{2.692 \text{ N-m}} = 622.9 \text{ bits/N-m} = (70.37 \text{ bits/lb in})$$

which is twice the scale factor of WP, from (5) above.

Therefore, to compare KE to WP it must be divided by 2. This is accomplished in the software by a right shift.

(7) Decrease of limit force command during transition:

10 v. corresponds to:

8.184×10^4 N (18,398 lbs_f) of F_{lI},

so that the scale factor of F_{lI} is:

8184 N/v (1840 lbs_f/v.)

Digitally the scale factor is:

$$\frac{(8184\ N/v)}{409.5\ bits/v} = 19.98\ \frac{N}{bit}\ (4.49\ lbf/bit) = 0.05\ bit/N\ (0.22\ bit/lbf)$$

During transition F_{1I} is decreased at a rate of

4.44810^5 N/sec (10^5 lbf/sec)

or digitally at a rate of

2.226×10^4 bits/sec.

(8) Transition velocity (Vt):

$$Vt = \frac{F_{1I}^2}{2(W/g)R}$$

$W = 8.178 \times 10^4$ N (18,398 lb) and $R = 4.445 \times 10^5$ (10^5 lb/sec)

then:

$$Vt = \frac{F_{1I}^2}{2(9.178 \times 10^4/9.8)(4.445)10^5} = 1.348 \times 10^{-10}\ F_{1I}^2$$

Therefore:

4.445 N (1 lb) produces:

2.663×10^{-9} m/sec (1.049×10^{-7} in/sec)

From (7) the digital scale factor of F_{1I} is $0.05\ \frac{bit}{N}$

so that the digital signal produced is:

$(4.445 \times 0.05)^2 = 0.0494$ bits.

The scale factor of Vt is therefore:

$$\frac{0.0494}{2.663 \times 10^{-9}} = 1.86 \times 10^7\ bits/m/sec\ (4.724 \times 10^5\ bits/in/sec)$$

From (2) and (3) the scale factor for Vtot is:

1614 bits/m/sec (40.95 bits/in/sec)

Therefore, in order to compare Vtot to Vt, Vt must be multiplied

$$\frac{1614}{1.885 \times 10^{7}} = 0.00008669$$

in the arithmetic board which is accomplished as follows:

0.0000869 DECIMAL (D)=

0.00000000000001011010111001101010101011011100000001 Binary (B)

which equals:

$1.01101011100110101010110 \times 2^{-14}$(B)

The exponent is -14(D)

The bias in the arithmetic board is:

07F HEXIDECIMAL (H) or 127 (D)

Therefore the number must be applied with a bias of

127 -14 = 113 (D).

In addition, a factor must be applied due to the fact that the numbers from the A/D converter are stored in the most significant 12 bits of the 16 so that the number for Vtot is too high by a factor of 16. Vt is a function of FLI^2 and is too high by a factor of $(16)^2$. The net result is that Vt is too high by a factor of 16. It must therefore be reduced by a factor of 16 or 2^4.

Therefore the exponent of the applied number is:

113 - 4 = 109(D) = 6D (H) = 01101101 (B)

A sign bit ("0" for positive) must precede the exponent. The format of the applied number is:

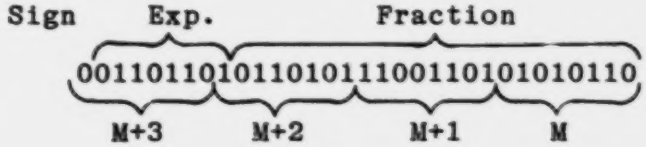

Therefore, if this is stored in memory starting at address M, the contents of memory are:

M	36(H)
M+1	B5(H)
M+2	CD(H)
M+3	56(H)

APPENDIX B

MICROPROCESSOR PROGRAM

The microprocessor program is listed in the following pages. It should be pointed out that for three-byte instructions, the listing of the last two bytes is in an order which is reversed from the order in which the bytes are stored in memory. This is a peculiarity of the assembler which was used.

ASSEMBLED AT 0000

MACRO-80 3.34 04-NOV-79 PAGE 1

```
                                00001  ;*******************************************************
                                00002  ;     PROGRAM FOR AN ELECTROHYDRAULIC ACTIVE
                                00003  ;     CONTROL AIRCRAFT LANDING GEAR
                                00004  ;*******************************************************
                                00005  ;  NOTES:
                                00006  ;  RAM LOCATION 3D0EH ADDED AS A TEMP LOC
                                00007  ;  FOR FLIM 2/13/80
                                00008  ;*******************************************************
                                00009  ;  REVISED FOR F4 GEAR 6/28/81
                                00010          ORG     00
0000'  F3                       00011  START:  DI              ;DISABLE INTERRUPTS
0001'  21 3FFF                  00012          LXI     H,3FFFH ;INIT. STACK
0004'  F9                       00013          SPHL
0005'  3E 82                    00014          MVI     A,82H   ;INIT. MATH BOARD
0007'  D3 EB                    00015          OUT     0EBH
0009'  3E 00                    00016          MVI     A,00    ;SET MEM. BASE ADD.
000B'  D3 A1                    00017          OUT     0A1H
000D'  3E 80                    00018          MVI     A,80H
000F'  D3 A2                    00019          OUT     0A2H
0011'  21 0092                  00020          LXI     H,0092H ;STRUT THRESH.=1 IN.
                                00021                          ;MULT THRESH BY 16
0014'  CD 0289'                 00022          CALL    ANM     ;FOR LATER USE
0017'  22 3F8A                  00023          SHLD    3F8AH   ;LABLE BXTHR
001A'  3E 4C                    00024          MVI     A,4CH   ;SET LIGHTS,SWITCHES
001C'  D3 EA                    00025          OUT     0EAH
                                00026  ;*******************************************************
                                00027  ;     OUTPUT MUX0-MUX4 FOR A/D BOARD CHECK
                                00028  ;     ALSO LOOK FOR CONTROLLER ENABLED
                                00029  ;*******************************************************
001E'  16 03                    00030  TL1:    MVI     D,3
0020'  06 FF                    00031  TL2:    MVI     B,0FFH
0022'  0E 05                    00032          MVI     C,5
0024'  7A                       00033  TL3:    MOV     A,D
0025'  CD 0251'                 00034          CALL    IN1
0028'  22 F708                  00035          SHLD    0F708H  ;OUTPUT TO DAC0
002B'  DB E9                    00036          IN      0E9H    ;CONTROLLER ENABLED?
002D'  1F                       00037          RAR
002E'  DA 0042'                 00038          JC      L1      ;YES,JUMP TO L1
0031'  05                       00039          DCR     B
0032'  C2 0024'                 00040          JNZ     TL3
0035'  06 FF                    00041          MVI     B,0FFH
0037'  0D                       00042          DCR     C
0038'  C2 0024'                 00043          JNZ     TL3
003B'  15                       00044          DCR     D
003C'  FA 001E'                 00045          JM      TL1
003F'  C3 0020'                 00046          JMP     TL2
```


MICROFILMED FROM
BEST AVAILABLE COPY

```
                        00047   ;*****************************************************
                        00048   ;     CONTROLLER HAS BEEN  'ABLED
                        00049   ;*************************   ************************
0042'  3E 02            00050   L1:     MVI     A,02
0044'  CD 0251'         00051           CALL    IN1     ;GE  STRUT POS FOR LAND/TO. DEC.
0047'  2A 3F8A          00052           LHLD    3F8AH   ;GET STRUT THRESHOLD
004A'  EB               00053           XCHG            ;PUT IN DE
004B'  2A 3F86          00054           LHLD    3F86H   ;LOAD HL WITH STRUT POSITION
004E'  CD 0282'         00055           CALL    SUB2    ;CALC. THRESHOLD-STRUT
0051'  DA 01BD'         00056           JC      L12A    ;YES, JUMP TO 12A
                        00057   ;*****************************************************
                        00058   ;     LANDING - MAKE PREPARATIONS
                        00059   ;*****************************************************
0054'  3E 03            00060           MVI     A,03
0056'  CD 0251'         00061           CALL    IN1     ;GET SINK RATE
0059'  22 3F88          00062           SHLD    3F88H   ;STORE IT
005C'  21 0915          00063           LXI     H,0915H ;MULT XMAX BY 16 TO SHIFT INTO
005F'  CD 0289'         00064           CALL    ANM     ;UPPER 12 BITS
0062'  22 3F8C          00065           SHLD    3F8CH   ;STORE IT
                        00066   ;*****************************************************
                        00067   ;    ENABLE INTEGRATOR
                        00068   ;    START ENERGY CALCULATIONS
                        00069   ;*****************************************************
0065'  3E 9E            00070           MVI     A,9EH
0067'  D3 EA            00071           OUT     0EAH    ;ENABLE INTEGRATOR
0069'  CD 0220'         00072   L8:     CALL    IN3
006C'  EB               00073           XCHG
006D'  2A 3F8C          00074           LHLD    3F8CH
0070'  EB               00075           XCHG
0071'  7B               00076           MOV     A,E
0072'  95               00077           SUB     L
0073'  6F               00078           MOV     L,A
0074'  7A               00079           MOV     A,D
0075'  9C               00080           SBB     H
0076'  67               00081           MOV     H,A
0077'  22 8004          00082           SHLD    8004H
007A'  AF               00083           XRA     A
007B'  CD 028E'         00084           CALL    MATH
007E'  2A 8000          00085           LHLD    8000H
0081'  22 3F8E          00086           SHLD    3F8EH
0084'  2A 8002          00087           LHLD    8002H
0087'  22 3F90          00088           SHLD    3F90H
008A'  2A 3F88          00089           LHLD    3F88H
008D'  EB               00090           XCHG
008E'  2A 3F84          00091           LHLD    3F84H
0091'  CD 0282'         00092           CALL    SUB2
```

MICROFILMED FROM
BEST AVAILABLE COPY

```
0094'  22 8000              00093          SHLD    8000H
0097'  22 8004              00094          SHLD    8004H
009A'  AF                   00095          XRA     A
009B'  CD 028E'             00096          CALL    MATH
                            00097  ;*****************************************************
                            00098  ;     DIVIDE KE BY 2 THEN DO A BYTE BY BYTE COMPARE
                            00099  ;     TO TEST IF PE)KE. DON'T BOTHER TO TEST LSB-IT
                            00100  ;     CONTAINS NO USEFUL DATA
                            00101  ;*****************************************************
009E'  B7                   00102          ORA     A       ;CLEAR CARRY
009F'  06 03                00103          MVI     B,3     ;SET A BYTE COUNTER
00A1'  21 8003              00104          LXI     H,8003H ;GET KINETIC ENERGY
00A4'  7E                   00105  L8A:     MOV     A,M     ;SHIFT RIGHT 3 BYTES AND
00A5'  1F                   00106          RAR             ;RE-SAVE
00A6'  77                   00107          MOV     M,A
00A7'  2B                   00108          DCX     H
00A8'  05                   00109          DCR     B
00A9'  C2 00A4'             00110          JNZ     L8A
00AC'  06 03                00111          MVI     B,03
00AE'  21 3F91              00112          LXI     H,3F91H
00B1'  11 8003              00113          LXI     D,8003H
00B4'  1A                   00114  L9:     LDAX    D
00B5'  BE                   00115          CMP     M
00B6'  C2 00C2'             00116          JNZ     L10
00B9'  1B                   00117          DCX     D
00BA'  2B                   00118          DCX     H
00BB'  05                   00119          DCR     B
00BC'  C2 00B4'             00120          JNZ     L9
00BF'  C3 00C5'             00121          JMP     L11
00C2'  D2 0069'             00122  L10:    JNC     L8
                            00123  ;*****************************************************
                            00124  ;     TIME TO INITIATE ACTIVE CONTROL
                            00125  ;*****************************************************
00C5'  2A 3F80              00126  L11:    LHLD    3F80H
00C8'  22 F70A              00127          SHLD    0F70AH
00CB'  22 3D0E              00128          SHLD    3D0EH   ;SAVE ORIGINAL "FLIM"
00CE'  EB                   00129          XCHG            ;FLIM TO DE FOR COMPARE
00CF'  CD 0220'             00130  CHACEL: CALL    IN3     ;GET W/G ACCEL.
00D2'  2A 3F80              00131          LHLD    3F80H   ;PUT NEW ACCEL INTO HL
00D5'  CD 0282'             00132          CALL    SUB2    ;DE-HL IS NEW W/G ACCEL.
                            00133                          ;GREATER THAN FLIM?
00D8'  F2 00CF'             00134          JP      CHACEL  ;NO-LOOP TILL IT IS
(00DB-00E0) = 00 (NOP)      00135          :CALL   SPTH    ;HAS GEAR STARTED STROKE?
                            00136          ;JP     CHACEL  ;LOOP TILL GEAR ) THRESHOLD
00E1'  3E 9F                00137          MVI     A,9FH
00E3'  D3 EA                00138          OUT     0EAH    ;ENABLE SERVOLOOP
```


MICROFILMED FROM
BEST AVAILABLE COPY

```
                        00139  ;*********************************************************
                        00140  ;     GEAR IS NOW UNDER ACTIVE CONTROL
                        00141  ;*********************************************************
00E5'  2A 3D0E          00142          LHLD    3D0EH   ;GET ORIGINAL FLIM TO CALCULATE
00E8'  22 8000          00143          SHLD    8000H   ;TRANSITION VELOCITY
00EB'  21 0000          00144          LXI     H,0000
00EE'  22 8002          00145          SHLD    8002H
00F1'  3E 08            00146          MVI     A,08
00F3'  CD 028E'         00147          CALL    MATH
00F6'  3E 06            00148          MVI     A,06
00F8'  CD 028E'         00149          CALL    MATH
00FB'  3E 36            00150          MVI     A,36H
00FD'  32 8004          00151          STA     8004H
0100'  3E B5            00152          MVI     A,0B5H
0102'  32 8005          00153          STA     8005H
0105'  3E CD            00154          MVI     A,0CDH
0107'  32 8006          00155          STA     8006H
010A'  3E 56            00156          MVI     A,56H
010C'  32 8007          00157          STA     8007H
010F'  3E 02            00158          MVI     A,02
0111'  CD 028E'         00159          CALL    MATH
0114'  2A 8000          00160          LHLD    8000H
0117'  22 3F92          00161          SHLD    3F92H
011A'  2A 8002          00162          LHLD    8002H
011D'  22 3F94          00163          SHLD    3F94H
                        00164  ;*********************************************************
                        00165  ;     TRANSITION VELOCITY STORED AS FLOATING PT,32 BIT
                        00166  ;     NUMBER.  START COMPARING THIS AGAINST (SINK RATE
                        00167  ;     -W/G VEL.) TO DETERMINE START OF TRANSITION
                        00168  ;*********************************************************
0120'  2A 3F88          00169  L4:     LHLD    3F88H
0123'  EB               00170          XCHG
0124'  3E 00            00171          MVI     A,00
0126'  CD 0251'         00172          CALL    IN1
0129'  CD 0282'         00173          CALL    SUB2
012C'  22 8000          00174          SHLD    8000H
012F'  21 0000          00175          LXI     H,0000
0132'  22 8002          00176          SHLD    8002H
0135'  3E 08            00177          MVI     A,08
0137'  CD 028E'         00178          CALL    MATH
013A'  2A 3F92          00179          LHLD    3F92H
013D'  22 8004          00180          SHLD    8004H
0140'  2A 3F94          00181          LHLD    3F94H
0143'  22 8006          00182          SHLD    8006H
0146'  3E 0A            00183          MVI     A,0AH
0148'  CD 028E'         00184          CALL    MATH
```

MICROFILMED FROM
BEST AVAILABLE COPY

```
01B3'  3E 9D          00231  L14:   MVI    A,9DH
01B5'  D3 EA          00232         OUT    0EAH     ;CLOSE FORCE FEEDBACK
01B7'  01 1800        00233         LXI    B,1800H  ;SET BC TO 1600 LBS
01BA'  C3 017E'       00234         JMP    L15
                      00235  ;*****************************************************
                      00236  ;     TAKEOFF MODE
                      00237  ;*****************************************************
01BD'  21 0000        00238  L12A:  LXI    H,0000
01C0'  22 F70A        00239         SHLD   0F70AH   ;SET LIMIT FORCE CMD= 0 LBS.
01C3'  3E A9          00240         MVI    A,0A9H
01C5'  D3 EA          00241         OUT    0EAH     ;ENABLE SERVOLOOP & OPEN F FDBK
01C7'  CD 020E'       00242  FLOA:  CALL   SPTH     ;CHECK STRUT POSITION
01CA'  F2 01C7'       00243         JP     FLOA
01CD'  01 1EE0        00244         LXI    B,1EE0H  ;SET BC TO 2000 LBS
01D0'  CD 0220'       00245  L15A:  CALL   IN3
01D3'  2A 8000        00246         LHLD   8000H
01D6'  22 F708        00247         SHLD   0F708H   ;OUTPUT W/G ACCEL TO DAC0
01D9'  CD 027D'       00248         CALL   FTEST
01DC'  D2 01FE'       00249         JNC    L13A
01DF'  01 1EE0        00250         LXI    B,1EE0H  ;SET BC TO 2000 LBS
01E2'  CD 0266'       00251  L16A:  CALL   IN4
01E5'  22 F708        00252         SHLD   0F708H   ;OUTPUT W/G ACCEL TO DAC0
01E8'  CD 027D'       00253         CALL   FTEST
01EB'  DA 01BD'       00254         JC     L12A
01EE'  21 1EE0        00255         LXI    H,1EE0H  ;SET HL TO 2000 LBS
01F1'  3E A5          00256         MVI    A,0A5H   ;CLOSE F FDBK & REVERSE SIGN
01F3'  D3 EA          00257         OUT    0EAH     ;OF LIMIT FORCE CMD (ANALOG)
01F5'  22 F70A        00258         SHLD   0F70AH   ;SET LIMIT FORCE CMD=2000 LBS
01F8'  01 1800        00259         LXI    B,1800H  ;SET BC TO 1600 LBS
01FB'  C3 01E2'       00260         JMP    L16A
01FE'  21 1EE0        00261  L13A:  LXI    H,1EE0H  ;SET HL TO 2000 LBS
0201'  22 F70A        00262         SHLD   0F70AH   ;SET LIMIT FORCE CMD=2000 LBS
0204'  3E AD          00263  L14A:  MVI    A,0ADH
0206'  D3 EA          00264         OUT    0EAH     ;CLOSE FORCE FEEDBACK
0208'  01 1800        00265         LXI    B,1800H  ;SET BC TO 1600 LBS
020B'  C3 01D0'       00266         JMP    L15A
                      00267  ;*****************************************************
                      00268  ;     ROUTINE TO SUBTRACT STRUT POS'N FROM THRESHOLD
                      00269  ;*****************************************************
020E'  E5             00270  SPTH:  PUSH   H        ;SPTH SETS SIGN FLAG POSITIVE
020F'  D5             00271         PUSH   D        ;UNTIL STRUT POS'N ) THRESHOLD
0210'  CD 024F'       00272         CALL   STP      ;GET STRUT POSITION
0213'  21 0B20        00273         LXI    H,0B20H  ;THRESHOLD 0160H=.05"
                      00274  ;                                 02D0H=.1"
                      00275  ;                                 0590H=.2"
                      00276  ;                                 0B20H=.4"
```


MICROFILMED FROM

```
014B'  DB A1          00185          IN      0A1H
014D'  E6 20          00186          ANI     20H
014F'  CA 0120'       00187          JZ      L4
                      00188  ;*****************************************************
                      00189  ;     TRANSITION PHASE
                      00190  ;*****************************************************
0152'  2A 3D0E        00191          LHLD    3D0EH   ;FLIM
0155'  11 FFFE        00192          LXI     D,0FFFEH
0158'  22 F70A        00193  L5:     SHLD    0F70AH
015B'  19             00194          DAD     D
015C'  CD 020E'       00195  EXST:   CALL    SPTH    ;CHECK (THRESH.-STRUT POS'N)
015F'  F2 016C'       00196          JP      L12
0162'  01 1BD0        00197          LXI     B,1BD0H
0165'  7D             00198          MOV     A,L
0166'  91             00199          SUB     C
0167'  7C             00200          MOV     A,H
0168'  98             00201          SBB     B
0169'  D2 0158'       00202          JNC     L5
                      00203  ;*****************************************************
                      00204  ;     ROLLOUT PHASE
                      00205  ;*****************************************************
016C'  21 0000        00206  L12:    LXI     H,0000
016F'  22 F70A        00207          SHLD    0F70AH  ;SET FLC=0 LBS.
0172'  3E 99          00208          MVI     A,99H
0174'  D3 EA          00209          OUT     0EAH    ;OPEN FORCE FEEDBACK
0176'  CD 020E'       00210  FLO:    CALL    SPTH    ;CHECK STRUT POS'N.
0179'  F2 0176'       00211          JP      FLO
017C'  01 1EE0        00212          LXI     B,1EE0H ;SET BC TO 2000 LBS.
017F'  CD 0220'       00213  L15:    CALL    IN3
0182'  2A 8000        00214          LHLD    8000H
0185'  22 F708        00215          SHLD    0F708H  ;OUTPUT W/G ACCEL. TO DAC0
0188'  CD 027D'       00216          CALL    FTEST
018B'  D2 01AD'       00217          JNC     L13
018E'  01 1EE0        00218          LXI     B,1EE0H ;SET BC TO 2000 LBS.
0191'  CD 0266'       00219  L16:    CALL    IN4
0194'  22 F708        00220          SHLD    0F708H  ;OUTPUT W/G ACCEL TO DAC0
0197'  CD 027D'       00221          CALL    FTEST
019A'  DA 016C'       00222          JC      L12
019D'  21 1EE0        00223          LXI     H,1EE0H ;SET HL TO 2000 LBS.
01A0'  3E 95          00224          MVI     A,95H   ;CLOSE F FDBK & REV. SIGN
01A2'  D3 EA          00225          OUT     0EAH    ;OF LIMIT FORCE CMD (ANALOG)
01A4'  22 F70A        00226          SHLD    0F70AH  ;SET LIMIT FORCE CMD=2000 LBS
01A7'  01 1800        00227          LXI     B,1800H ;SET BC TO 1600 LBS
01AA'  C3 0191'       00228          JMP     L16
01AD'  21 1EE0        00229  L13:    LXI     H,1EE0H ;SET HL TO 2000 LBS
01B0'  22 F70A        00230          SHLD    0F70AH  ;SET LIMIT FORCE CMD=2000 LBS
```

MICROFILMED FROM
BEST AVAILABLE COPY

```
0216'  EB                00277          XCHG
0217'  2A 3F86           00278          LHLD    3F86H   ;GET STRUT POSITION
021A'  CD 0282'          00279          CALL    SUB2    ;SUBTRACT STRUT FROM THRESH.
021D'  D1                00280          POP     D
021E'  E1                00281          POP     H
021F'  C9                00282          RET
                         00283  ;*****************************************************
                         00284  ;     ROUTINE TO INPUT AND STORE DATA FROM MUX0,1 & 2
                         00285  ;*****************************************************
0220'  3E 01             00286  IN3:     MVI     A,01
0222'  21 F701           00287          LXI     H,0F701H
0225'  77                00288          MOV     M,A
0226'  2B                00289          DCX     H
0227'  36 01             00290          MVI     M,01
0229'  7E                00291  M1:     MOV     A,M
022A'  07                00292          RLC
022B'  D2 0229'          00293          JNC     M1
022E'  36 00             00294          MVI     M,00
0230'  2A F704           00295          LHLD    0F704H
0233'  22 8000           00296          SHLD    8000H
0236'  22 3F80           00297          SHLD    3F80H
0239'  3E 00             00298          MVI     A,00
023B'  21 F701           00299          LXI     H,0F701H
023E'  77                00300          MOV     M,A
023F'  2B                00301          DCX     H
0240'  36 01             00302          MVI     M,01
0242'  7E                00303  M2:     MOV     A,M
0243'  07                00304          RLC
0244'  D2 0242'          00305          JNC     M2
0247'  36 00             00306          MVI     M,00
0249'  2A F704           00307          LHLD    0F704H
024C'  22 3F84           00308          SHLD    3F84H
024F'  3E 02             00309  STP:    MVI     A,02
0251'  21 F701           00310  IN1:    LXI     H,0F701H
0254'  77                00311          MOV     M,A
0255'  2B                00312          DCX     H
0256'  36 01             00313          MVI     M,01
0258'  7E                00314  M3:     MOV     A,M
0259'  07                00315          RLC
025A'  D2 0258'          00316          JNC     M3
025D'  36 00             00317          MVI     M,00
025F'  2A F704           00318          LHLD    0F704H
0262'  22 3F86           00319          SHLD    3F86H
0265'  C9                00320          RET
                         00321  ;*****************************************************
                         00322  ;     ROUTINE TO INPUT AND STORE DATA FROM MUX4
```


REPRODUCED FROM
BEST AVAILABLE COPY

```
                        00323   ;*******************************************************
0266'  3E 04            00324   IN4:    MVI     A,04
0268'  21 F701          00325           LXI     H,0F701H
026B'  77               00326           MOV     M,A
026C'  2B               00327           DCX     H
026D'  36 01            00328           MVI     M,01
026F'  7E               00329   M4:     MOV     A,M
0270'  07               00330           RLC
0271'  D2 026F'         00331           JNC     M4
0274'  36 00            00332           MVI     M,00
0276'  2A F704          00333           LHLD    0F704H
0279'  22 3F96          00334           SHLD    3F96H
027C'  C9               00335           RET
                        00336   ;*******************************************************
                        00337   ;       ROUTINE TO SUBTRACT BC FROM HL
                        00338   ;*******************************************************
027D'  7D               00339   FTEST:  MOV     A,L
027E'  91               00340           SUB     C
027F'  7C               00341           MOV     A,H
0280'  98               00342           SBB     B
0281'  C9               00343           RET
                        00344   ;*******************************************************
                        00345   ;       ROUTINE FOR DOUBLE PRECISION SUBTRACT
                        00346   ;       HL=DE-HL
                        00347   ;*******************************************************
0282'  7B               00348   SUB2:   MOV     A,E
0283'  95               00349           SUB     L
0284'  6F               00350           MOV     L,A
0285'  7A               00351           MOV     A,D
0286'  9C               00352           SBB     H
0287'  67               00353           MOV     H,A
0288'  C9               00354           RET
                        00355   ;*******************************************************
                        00356   ;       ROUTINE TO SHIFT VALUE IN HL LEFT 4 PLACES
                        00357   ;*******************************************************
0289'  29               00358   ANM:    DAD     H
028A'  29               00359           DAD     H
028B'  29               00360           DAD     H
028C'  29               00361           DAD     H
028D'  C9               00362           RET
                        00363   ;*******************************************************
                        00364   ;       ROUTINE TO ACTIVATE MATH BOARD & WAIT FOR RESULT
                        00365   ;       ACCUMULATOR HAS OPCODE
                        00366   ;*******************************************************
028E'  D3 A0            00367   MATH:   OUT     0A0H
0290'  DB A7            00368   WAIT:   IN      0A7H
```

MICROFILMED FROM
BEST AVAILABLE COPY

```
0292'  E6 01          00369          ANI     01
0294'  C2 0290'       00370          JNZ     WAIT
0297'  C9             00371          RET
                      00372  ;*****************************************************
                      00373  ;*****************************************************
                      00374  ;     THE FOLLOWING ARE SPECIAL CHECK-OUT ROUTINES
                      00375  ;     AND NOT PART OF THE MAIN PROGRAM
                      00376  ;*****************************************************
                      00377  ;*****************************************************
                      00378  ;
                      00379  ;
                      00380  ;*****************************************************
                      00381  ;     ROUTINE TO INPUT A VALUE FROM A/D & STORE IN RAM
                      00382  ;*****************************************************
0298'  F3             00383          DI
0299'  3E 00          00384          MVI     A,00
029B'  CD 0251'       00385          CALL    IN1
029E'  CF             00386          RST     01H
029F'  00             00387          NOP
02A0'  00             00388          NOP
                      00389  ;*****************************************************
                      00390  ;     ROUTINE TO DO PGA TEST ON A/D
                      00391  ;*****************************************************
02A1'  F3             00392          DI
02A2'  21 F701        00393          LXI     H,0F701H
02A5'  36 00          00394  PGA:    MVI     M,00
02A7'  36 C0          00395          MVI     M,0C0H
02A9'  C3 02A5'       00396          JMP     PGA
02AC'  00             00397          NOP
                      00398  ;*****************************************************
                      00399  ;     ROUTINE TO OUTPUT A VALUE TO DAC0 & DAC1
                      00400  ;*****************************************************
02AD'  F3             00401          DI
02AE'  00             00402          NOP
02AF'  21 0000        00403  R2:     LXI     H,0000
02B2'  22 F708        00404          SHLD    0F708H
02B5'  22 F70A        00405          SHLD    0F70AH
02B8'  00             00406          NOP
02B9'  00             00407          NOP
02BA'  00             00408          NOP
02BB'  C3 02AF'       00409          JMP     R2
                      00410          END
```


MACROS:

SYMBOLS:

ANM	0289'	CHACEL	00CF'	EXST	015C'	FLO	0176'
FLOA	01C7'	FTEST	027D'	IN1	0251'	IN3	0220'
IN4	0266'	L1	0042'	L10	00C2'	L11	00C5'
L12	016C'	L12A	01BD'	L13	01AD'	L13A	01FE'
L14	01B3'	L14A	0204'	L15	017F'	L15A	01D0'
L16	0191'	L16A	01E2'	L4	0120'	L5	0158'
L8	0069'	L8A	00A4'	L9	00B4'	M1	0229'
M2	0242'	M3	0258'	M4	026F'	MATH	028E'
PGA	02A5'	R2	02AF'	SPTH	020E'	START	0000'
STP	024F'	SUB2	0282'	TL1	001E'	TL2	0020'
TL3	0024'	WAIT	0290'				

NO FATAL ERROR(S)

MICROFILMED FROM
BEST AVAILABLE COPY

ASSEMBLED AT 3D10

MACRO-80 3.34 04-NOV-79 PAGE 1

```
                                00001  ;*****************************************************
                                00002  ;     PROGRAM FOR AN ELECTROHYDRAULIC ACTIVE
                                00003  ;     CONTROL AIRCRAFT LANDING GEAR
                                00004  ;*****************************************************
                                00005  ;  NOTES:
                                00006  ;  RAM LOCATION 3D0EH ADDED AS A TEMP LOC
                                00007  ;  FOR FLIM 2/13/80
                                00008  ;*****************************************************
                                00009  ;  REVISED FOR F4 GEAR 6/28/81
                                00010          ORG     3D10H
3D10'  F3                       00011  START:  DI              ;DISABLE INTERRUPTS
3D11'  21 3FFF                  00012          LXI     H,3FFFH ;INIT. STACK
3D14'  F9                       00013          SPHL
3D15'  3E 82                    00014          MVI     A,82H   ;INIT. MATH BOARD
3D17'  D3 EB                    00015          OUT     0EBH
3D19'  3E 00                    00016          MVI     A,00    ;SET MEM. BASE ADD.
3D1B'  D3 A1                    00017          OUT     0A1H
3D1D'  3E 80                    00018          MVI     A,80H
3D1F'  D3 A2                    00019          OUT     0A2H
3D21'  21 0092                  00020          LXI     H,0092H ;STRUT THRESH.=1 IN.
                                00021                          ;MULT THRESH BY 16
3D24'  CD 3F99'                 00022          CALL    ANM     ;FOR LATER USE
3D27'  22 3F8A                  00023          SHLD    3F8AH   ;LABLE BXTHR
3D2A'  3E 4C                    00024          MVI     A,4CH   ;SET LIGHTS,SWITCHES
3D2C'  D3 EA                    00025          OUT     0EAH
                                00026  ;*****************************************************
                                00027  ;     OUTPUT MUX0-MUX4 FOR A/D BOARD CHECK
                                00028  ;     ALSO LOOK FOR CONTROLLER ENABLED
                                00029  ;*****************************************************
3D2E'  16 03                    00030  TL1:    MVI     D,3
3D30'  06 FF                    00031  TL2:    MVI     B,0FFH
3D32'  0E 05                    00032          MVI     C,5
3D34'  7A                       00033  TL3:    MOV     A,D
3D35'  CD 3F61'                 00034          CALL    IN1
3D38'  22 F708                  00035          SHLD    0F708H  ;OUTPUT TO DACO
3D3B'  DB E9                    00036          IN      0E9H    ;CONTROLLER ENABLED?
3D3D'  1F                       00037          RAR
3D3E'  DA 3D52'                 00038          JC      L1      ;YES,JUMP TO L1
3D41'  05                       00039          DCR     B
3D42'  C2 3D34'                 00040          JNZ     TL3
3D45'  06 FF                    00041          MVI     B,0FFH
3D47'  0D                       00042          DCR     C
3D48'  C2 3D34'                 00043          JNZ     TL3
3D4B'  15                       00044          DCR     D
3D4C'  FA 3D2E'                 00045          JM      TL1
3D4F'  C3 3D30'                 00046          JMP     TL2
```

MICROFILMED FROM
BEST AVAILABLE COPY

```
                        00047   ;*********************************************************
                        00048   ;     CONTROLLER HAS BEEN ENABLED
                        00049   ;*********************************************************
3D52'   3F 02           00050   L1:     MVI     A,02
3D54'   CD 3F61'        00051           CALL    IN1     ;GET STRUT POS FOR LAND/TO. DEC.
3D57'   2A 3F8A         00052           LHLD    3F8AH   ;GET STRUT THRESHOLD
3D5A'   EB              00053           XCHG            ;PUT IN DE
3D5B'   2A 3F86         00054           LHLD    3F86H   ;LOAD HL WITH STRUT POSITION
3D5E'   CD 3F92'        00055           CALL    SUB2    ;CALC. THRESHOLD-STRUT
3D61'   DA 3ECD'        00056           JC      L12A    ;YES, JUMP TO 12A
                        00057   ;*********************************************************
                        00058   ;     LANDING - MAKE PREPARATIONS
                        00059   ;*********************************************************
3D64'   3E 03           00060           MVI     A,03
3D66'   CD 3F61'        00061           CALL    IN1     ;GET SINK RATE
3D69'   22 3F88         00062           SHLD    3F88H   ;STORE IT
3D6C'   21 0915         00063           LXI     H,0915H ;MULT XMAX BY 16 TO SHIFT INTO
3D6F'   CD 3F99'        00064           CALL    ANM     ;UPPER 12 BITS
3D72'   22 3F8C         00065           SHLD    3F8CH   ;STORE IT
                        00066   ;*********************************************************
                        00067   ;    ENABLE INTEGRATOR
                        00068   ;    START ENERGY CALCULATIONS
                        00069   ;*********************************************************
3D75'   3E 9E           00070           MVI     A,9EH
3D77'   D3 EA           00071           OUT     0EAH    ;ENABLE INTEGRATOR
3D79'   CD 3F30'        00072   L8:     CALL    IN3
3D7C'   EB              00073           XCHG
3D7D'   2A 3F8C         00074           LHLD    3F8CH
3D80'   EB              00075           XCHG
3D81'   7B              00076           MOV     A,E
3D82'   95              00077           SUB     L
3D83'   6F              00078           MOV     L,A
3D84'   7A              00079           MOV     A,D
3D85'   9C              00080           SBB     H
3D86'   67              00081           MOV     H,A
3D87'   22 8004         00082           SHLD    8004H
3D8A'   AF              00083           XRA     A
3D8B'   CD 3F9E'        00084           CALL    MATH
3D8E'   2A 8000         00085           LHLD    8000H
3D91'   22 3F8E         00086           SHLD    3F8EH
3D94'   2A 8002         00087           LHLD    8002H
3D97'   22 3F90         00088           SHLD    3F90H
3D9A'   2A 3F88         00089           LHLD    3F88H
3D9D'   EB              00090           XCHG
3D9E'   2A 3F84         00091           LHLD    3F84H
3DA1'   CD 3F92'        00092           CALL    SUB2
```


MICROFILMED FROM
BEST AVAILABLE COPY

```
3DA4'  22 8000          00093          SHLD    8000H
3DA7'  22 8004          00094          SHLD    8004H
3DAA'  AF               00095          XRA     A
3DAB'  CD 3F9E'         00096          CALL    MATH
                        00097  ;*****************************************************
                        00098  ;     DIVIDE KE BY 2 THEN DO A BYTE BY BYTE COMPARE
                        00099  ;     TO TEST IF PE)KE. DON'T BOTHER TO TEST LSB-IT
                        00100  ;     CONTAINS NO USEFUL DATA
                        00101  ;*****************************************************
3DAE'  B7               00102          ORA     A       ;CLEAR CARRY
3DAF'  06 03            00103          MVI     B,3     ;SET A BYTE COUNTER
3DB1'  21 8003          00104          LXI     H,8003H ;GET KINETIC ENERGY
3DB4'  7E               00105  L8A:    MOV     A,M     ;SHIFT RIGHT 3 BYTES AND
3DB5'  1F               00106          RAR             ;RE-SAVE
3DB6'  77               00107          MOV     M,A
3DB7'  2B               00108          DCX     H
3DB8'  05               00109          DCR     B
3DB9'  C2 3DB4'         00110          JNZ     L8A
3DBC'  06 03            00111          MVI     B,03
3DBE'  21 3F91          00112          LXI     H,3F91H
3DC1'  11 8003          00113          LXI     D,8003H
3DC4'  1A               00114  L9:     LDAX    D
3DC5'  BE               00115          CMP     M
3DC6'  C2 3DD2'         00116          JNZ     L10
3DC9'  1B               00117          DCX     D
3DCA'  2B               00118          DCX     H
3DCB'  05               00119          DCR     B
3DCC'  C2 3DC4'         00120          JNZ     L9
3DCF'  C3 3DD5'         00121          JMP     L11
3DD2'  D2 3D79'         00122  L10:    JNC     L8
                        00123  ;*****************************************************
                        00124  ;     TIME TO INITIATE ACTIVE CONTROL
                        00125  ;*****************************************************
3DD5'  2A 3F80          00126  L11:    LHLD    3F80H
3DD8'  22 F70A          00127          SHLD    0F70AH
3DDB'  22 3D0E          00128          SHLD    3D0EH   ;SAVE ORIGINAL "FLIM"
3DDE'  EB               00129          XCHG            ;FLIM TO DE FOR COMPARE
3DDF'  CD 3F30'         00130  CHACEL: CALL    IN3     ;GET W/G ACCEL.
3DE2'  2A 3F80          00131          LHLD    3F80H   ;PUT NEW ACCEL INTO HL
3DE5'  CD 3F92'         00132          CALL    SUB2    ;DE-HL IS NEW W/G ACCEL.
                        00133                          ;GREATER THAN FLIM?
3DE8'  F2 3DDF'         00134          JP      CHACEL  ;NO-LOOP TILL IT IS
(3DEB-3DF0) = 00 (NOP)  00135          ;CALL   SPTH    ;HAS GEAR STARTED STROKE?
                        00136          ;JP     CHACEL  ;LOOP TILL GEAR ) THRESHOLD
3DF1'  3E 9F            00137          MVI     A,9FH
3DF3'  D3 EA            00138          OUT     0EAH    ;ENABLE SERVOLOOP
```

MICROFILMED FROM
BEST AVAILABLE COPY

```
                        00139   ;*****************************************************
                        00140   ;     GEAR IS NOW UNDER ACTIVE CONTROL
                        00141   ;*****************************************************
3DF5'   2A 3D0E         00142           LHLD    3D0EH   ;GET ORIGINAL FLIM TO CALCULATE
3DF8'   22 8000         00143           SHLD    8000H   ;TRANSITION VELOCITY
3DFB'   21 0000         00144           LXI     H,0000
3DFE'   22 8002         00145           SHLD    8002H
3E01'   3E 08           00146           MVI     A,08
3E03'   CD 3F9E'        00147           CALL    MATH
3E06'   3E 06           00148           MVI     A,06
3E08'   CD 3F9E'        00149           CALL    MATH
3E0B'   3E 36           00150           MVI     A,36H
3E0D'   32 8004         00151           STA     8004H
3E10'   3E B5           00152           MVI     A,0B5H
3E12'   32 8005         00153           STA     8005H
3E15'   3E CD           00154           MVI     A,0CDH
3E17'   32 8006-        00155           STA     8006H
3E1A'   3E 56           00156           MVI     A,56H
3E1C'   32 8007         00157           STA     8007H
3E1F'   3E 02           00158           MVI     A,02
3E21'   CD 3F9E'        00159           CALL    MATH
3E24'   2A 8000         00160           LHLD    8000H
3E27'   22 3F92         00161           SHLD    3F92H
3E2A'   2A 8002         00162           LHLD    8002H
3E2D'   22 3F94         00163           SHLD    3F94H
                        00164   ;*****************************************************
                        00165   ;     TRANSITION VELOCITY STORED AS FLOATING PT,32 BIT
                        00166   ;     NUMBER.  START COMPARING THIS AGAINST (SINK RATE
                        00167   ;     -W/G VEL.) TO DETERMINE START OF TRANSITION
                        00168   ;*****************************************************
3E30'   2A 3F88         00169   L4:     LHLD    3F88H
3E33'   EB              00170           XCHG
3E34'   3E 00           00171           MVI     A,00
3E36'   CD 3F61'        00172           CALL    IN1
3E39'   CD 3F92'        00173           CALL    SUB2
3E3C'   22 8000         00174           SHLD    8000H
3E3F'   21 0000         00175           LXI     H,0000
3E42'   22 8002         00176           SHLD    8002H
3E45'   3E 08           00177           MVI     A,08
3E47'   CD 3F9E'        00178           CALL    MATH
3E4A'   2A 3F92         00179           LHLD    3F92H
3E4D'   22 8004         00180           SHLD    8004H
3E50'   2A 3F94         00181           LHLD    3F94H
3E53'   22 8006         00182           SHLD    8006H
3E56'   3E 0A           00183           MVI     A,0AH
3E58'   CD 3F9E'        00184           CALL    MATH
```


MICROFILMED FROM
BEST AVAILABLE COPY

```
3E5B'  DB A1          00185          IN      0A1H
3E5D'  E6 20          00186          ANI     20H
3E5F'  CA 3E30'       00187          JZ      L4
                      00188  ;*****************************************************
                      00189  ;     TRANSITION PHASE
                      00190  ;*****************************************************
3E62'  2A 3D0E        00191          LHLD    3D0EH   ;FLIH
3E65'  11 FFFE        00192          LXI     D,0FFFEH
3E68'  22 F70A        00193  L5:     SHLD    0F70AH
3E6B'  19             00194          DAD     D
3E6C'  CD 3F1E'       00195  EXST:   CALL    SPTH    ;CHECK (THRESH.-STRUT POS'N)
3E6F'  F2 3E7C'       00196          JP      L12
3E72'  01 1BD0        00197          LXI     B,1BD0H
3E75'  7D             00198          MOV     A,L
3E76'  91             00199          SUB     C
3E77'  7C             00200          MOV     A,H
3E78'  98             00201          SBB     B
3E79'  D2 3E68'       00202          JNC     L5
                      00203  ;*****************************************************
                      00204  ;     ROLLOUT PHASE
                      00205  ;*****************************************************
3E7C'  21 0000        00206  L12:    LXI     H,0000
3E7F'  22 F70A        00207          SHLD    0F70AH  ;SET FLC=0 LBS.
3E82'  3E 99          00208          MVI     A,99H
3E84'  D3 EA          00209          OUT     0EAH    ;OPEN FORCE FEEDBACK
3E86'  CD 3F1E'       00210  FLO:    CALL    SPTH    ;CHECK STRUT POS'N.
3E89'  F2 3E86'       00211          JP      FLO
3E8C'  01 1EE0        00212          LXI     B,1EE0H ;SET BC TO 2000 LBS.
3E8F'  CD 3F30'       00213  L15:    CALL    IN3
3E92'  2A 8000        00214          LHLD    8000H
3E95'  22 F708        00215          SHLD    0F708H  ;OUTPUT W/G ACCEL. TO DAC0
3E98'  CD 3F8D'       00216          CALL    FTEST
3E9B'  D2 3EBD'       00217          JNC     L13
3E9E'  01 1EE0        00218          LXI     B,1EE0H ;SET BC TO 2000 LBS.
3EA1'  CD 3F76'       00219  L16:    CALL    IN4
3EA4'  22 F708        00220          SHLD    0F708H  ;OUTPUT W/G ACCEL TO DAC0
3EA7'  CD 3F8D'       00221          CALL    FTEST
3EAA'  DA 3E7C'       00222          JC      L12
3EAD'  21 1EE0        00223          LXI     H,1EE0H ;SET HL TO 2000 LBS.
3EB0'  3E 95          00224          MVI     A,95H   ;CLOSE F FDBK & REV. SIGN
3EB2'  D3 EA          00225          OUT     0EAH    ;OF LIMIT FORCE CMD (ANALOG)
3EB4'  22 F70A        00226          SHLD    0F70AH  ;SET LIMIT FORCE CMD=2000 LBS
3EB7'  01 1800        00227          LXI     B,1800H ;SET BC TO 1600 LBS
3EBA'  C3 3EA1'       00228          JMP     L16
3EBD'  21 1EE0        00229  L13:    LXI     H,1EE0H ;SET HL TO 2000 LBS
3EC0'  22 F70A        00230          SHLD    0F70AH  ;SET LIMIT FORCE CMD=2000 LBS
```

MICROFILMED FROM
BEST AVAILABLE COPY

```
3EC3'  3E 9D          00231  L14:   MVI    A,9DH
3EC5'  D3 EA          00232         OUT    0EAH     ;CLOSE FORCE FEEDBACK
3EC7'  01 1800        00233         LXI    B,1800H  ;SET BC TO 1600 LBS
3ECA'  C3 3E8F'       00234         JMP    L15
                      00235  ;*****************************************************
                      00236  ;     TAKEOFF MODE
                      00237  ;*****************************************************
3ECD'  21 0000        00238  L12A:  LXI    H,0000
3ED0'  22 F70A        00239         SHLD   0F70AH   ;SET LIMIT FORCE CMD= 0 LBS.
3ED3'  3E A9          00240         MVI    A,0A9H
3ED5'  D3 EA          00241         OUT    0EAH     ;ENABLE SERVOLOOP & OPEN F FDBK
3ED7'  CD 3F1E'       00242  FLOA:  CALL   SPTH     ;CHECK STRUT POSITION
3EDA'  F2 3ED7'       00243         JP     FLOA
3EDD'  01 1EE0        00244         LXI    B,1EE0H  ;SET BC TO 2000 LBS
3EE0'  CD 3F30'       00245  L15A:  CALL   IN3
3EE3'  2A 8000        00246         LHLD   8000H
3EE6'  22 F708        00247         SHLD   0F708H   ;OUTPUT W/G ACCEL TO DAC0
3EE9'  CD 3F8D'       00248         CALL   FTEST
3EEC'  D2 3F0E'       00249         JNC    L13A
3EEF'  01 1EE0        00250         LXI    B,1EE0H  ;SET BC TO 2000 LBS
3EF2'  CD 3F76'       00251  L16A:  CALL   IN4
3EF5'  22 F708        00252         SHLD   0F708H   ;OUTPUT W/G ACCEL TO DAC0
3EF8'  CD 3F8D'       00253         CALL   FTEST
3EFB'  DA 3ECD'       00254         JC     L12A
3EFE'  21 1EE0        00255         LXI    H,1EE0H  ;SET HL TO 2000 LBS
3F01'  3E A5          00256         MVI    A,0A5H   ;CLOSE F FDBK & REVERSE SIGN
3F03'  D3 EA          00257         OUT    0EAH     ;OF LIMIT FORCE CMD (ANALOG)
3F05'  22 F70A        00258         SHLD   0F70AH   ;SET LIMIT FORCE CMD=2000 LBS
3F08'  01 1800        00259         LXI    B,1800H  ;SET BC TO 1600 LBS
3F0B'  C3 3EF2'       00260         JMP    L16A
3F0E'  21 1EE0        00261  L13A:  LXI    H,1EE0H  ;SET HL TO 2000 LBS
3F11'  22 F70A        00262         SHLD   0F70AH   ;SET LIMIT FORCE CMD=2000 LBS
3F14'  3E AD          00263  L14A:  MVI    A,0ADH
3F16'  D3 EA          00264         OUT    0EAH     ;CLOSE FORCE FEEDBACK
3F18'  01 1800        00265         LXI    B,1800H  ;SET BC TO 1600 LBS
3F1B'  C3 3EE0'       00266         JMP    L15A
                      00267  ;*****************************************************
                      00268  ;     ROUTINE TO SUBTRACT STRUT POS'N FROM THRESHOLD
                      00269  ;*****************************************************
3F1E'  E5             00270  SPTH:  PUSH   H        ;SPTH SETS SIGN FLAG POSITIVE
3F1F'  D5             00271         PUSH   D        ;UNTIL STRUT POS'N ) THRESHOLD
3F20'  CD 3F5F'       00272         CALL   STP      ;GET STRUT POSITION
3F23'  21 0B20        00273         LXI    H,0B20H  ;THRESHOLD 0160H=.05"
                      00274  ;                                 02D0H=.1"
                      00275  ;                                 0590H=.2"
                      00276  ;                                 0B20H=.4"
```


MICROFILMED FROM
BEST AVAILABLE COPY

```
3F26'  EB                00277          XCHG
3F27'  2A 3F86           00278          LHLD    3F86H   ;GET STRUT POSITION
3F2A'  CD 3F92'          00279          CALL    SUB2    ;SUBTRACT STRUT FROM THRESH.
3F2D'  D1                00280          POP     D
3F2E'  E1                00281          POP     H
3F2F'  C9                00282          RET
                         00283  ;*****************************************************
                         00284  ;     ROUTINE TO INPUT AND STORE DATA FROM MUXO,1 & 2
                         00285  ;*****************************************************
3F30'  3E 01             00286  IN3:     MVI     A,01
3F32'  21 F701           00287          LXI     H,0F701H
3F35'  77                00288          MOV     M,A
3F36'  2B                00289          DCX     H
3F37'  36 01             00290          MVI     M,01
3F39'  7E                00291  M1:     MOV     A,M
3F3A'  07                00292          RLC
3F3B'  D2 3F39'          00293          JNC     M1
3F3E'  36 00             00294          MVI     M,00
3F40'  2A F704           00295          LHLD    0F704H
3F43'  22 8000           00296          SHLD    8000H
3F46'  22 3F80           00297          SHLD    3F80H
3F49'  3E 00             00298          MVI     A,00
3F4B'  21 F701           00299          LXI     H,0F701H
3F4E'  77                00300          MOV     M,A
3F4F'  2B                00301          DCX     H
3F50'  36 01             00302          MVI     M,01
3F52'  7E                00303  M2:     MOV     A,M
3F53'  07                00304          RLC
3F54'  D2 3F52'          00305          JNC     M2
3F57'  36 00             00306          MVI     M,00
3F59'  2A F704           00307          LHLD    0F704H
3F5C'  22 3F84           00308          SHLD    3F84H
3F5F'  3E 02             00309  STP:    MVI     A,02
3F61'  21 F701           00310  IN1:    LXI     H,0F701H
3F64'  77                00311          MOV     M,A
3F65'  2B                00312          DCX     H
3F66'  36 01             00313          MVI     M,01
3F68'  7E                00314  M3:     MOV     A,M
3F69'  07                00315          RLC
3F6A'  D2 3F68'          00316          JNC     M3
3F6D'  36 00             00317          MVI     M,00
3F6F'  2A F704           00318          LHLD    0F704H
3F72'  22 3F86           00319          SHLD    3F86H
3F75'  C9                00320          RET
                         00321  ;*****************************************************
                         00322  ;     ROUTINE TO INPUT AND STORE DATA FROM MUX4
```

MICROFILMED FROM
BEST AVAILABLE COPY

```
                        00323   ;*******************************************************
3F76'  3E 04            00324   IN4:    MVI     A,04
3F78'  21 F701          00325           LXI     H,0F701H
3F7B'  77               00326           MOV     M,A
3F7C'  2B               00327           DCX     H
3F7D'  36 01            00328           MVI     M,01
3F7F'  7E               00329   M4:     MOV     A,M
3F80'  07               00330           RLC
3F81'  D2 3F7F'         00331           JNC     M4
3F84'  36 00            00332           MVI     M,00
3F86'  2A F704          00333           LHLD    0F704H
3F89'  22 3F96          00334           SHLD    3F96H
3F8C'  C9               00335           RET
                        00336   ;*******************************************************
                        00337   ;       ROUTINE TO SUBTRACT BC FROM HL
                        00338   ;*******************************************************
3F8D'  7D               00339   FTEST:  MOV     A,L
3F8E'  91               00340           SUB     C
3F8F'  7C               00341           MOV     A,H
3F90'  98               00342           SBB     B
3F91'  C9               00343           RET
                        00344   ;*******************************************************
                        00345   ;       ROUTINE FOR DOUBLE PRECISION SUBTRACT
                        00346   ;       HL=DE-HL
                        00347   ;*******************************************************
3F92'  7B               00348   SUB2:   MOV     A,E
3F93'  95               00349           SUB     L
3F94'  6F               00350           MOV     L,A
3F95'  7A               00351           MOV     A,D
3F96'  9C               00352           SBB     H
3F97'  67               00353           MOV     H,A
3F98'  C9               00354           RET
                        00355   ;*******************************************************
                        00356   ;       ROUTINE TO SHIFT VALUE IN HL LEFT 4 PLACES
                        00357   ;*******************************************************
3F99'  29               00358   ANM:    DAD     H
3F9A'  29               00359           DAD     H
3F9B'  29               00360           DAD     H
3F9C'  29               00361           DAD     H
3F9D'  C9               00362           RET
                        00363   ;*******************************************************
                        00364   ;       ROUTINE TO ACTIVATE MATH BOARD & WAIT FOR RESULT
                        00365   ;       ACCUMULATOR HAS OPCODE
                        00366   ;*******************************************************
3F9E'  D3 A0            00367   MATH:   OUT     0A0H
3FA0'  DB A7            00368   WAIT:   IN      0A7H
```


MICROFILMED FROM
BEST AVAILABLE COPY

```
3FA2'  E6 01              00369          ANI     01
3FA4'  C2 3FA0'           00370          JNZ     WAIT
3FA7'  C9                 00371          RET
                          00372  ;*****************************************************
                          00373  ;*****************************************************
                          00374  ;     THE FOLLOWING ARE SPECIAL CHECK-OUT ROUTINES
                          00375  ;     AND NOT PART OF THE MAIN PROGRAM
                          00376  ;*****************************************************
                          00377  ;*****************************************************
                          00378  ;
                          00379  ;
                          00380  ;*****************************************************
                          00381  ;     ROUTINE TO INPUT A VALUE FROM A/D & STORE IN RAM
                          00382  ;*****************************************************
3FA8'  F3                 00383          DI
3FA9'  3E 00              00384          MVI     A,00
3FAB'  CD 3F61'           00385          CALL    IN1
3FAE'  CF                 00386          RST     01H
3FAF'  00                 00387          NOP
3FB0'  00                 00388          NOP
                          00389  ;*****************************************************
                          00390  ;     ROUTINE TO DO PGA TEST ON A/D
                          00391  ;*****************************************************
3FB1'  F3                 00392          DI
3FB2'  21 F701            00393          LXI     H,0F701H
3FB5'  36 00              00394  PGA:    MVI     M,00
3FB7'  36 C0              00395          MVI     M,0C0H
3FB9'  C3 3FB5'           00396          JMP     PGA
3FBC'  00                 00397          NOP
                          00398  ;*****************************************************
                          00399  ;     ROUTINE TO OUTPUT A VALUE TO DAC0 & DAC1
                          00400  ;*****************************************************
3FBD'  F3                 00401          DI
3FBE'  00                 00402          NOP
3FBF'  21 0000            00403  R2:     LXI     H,0000
3FC2'  22 F708            00404          SHLD    0F708H
3FC5'  22 F70A            00405          SHLD    0F70AH
3FC8'  00                 00406          NOP
3FC9'  00                 00407          NOP
3FCA'  00                 00408          NOP
3FCB'  C3 3FBF'           00409          JMP     R2
                          00410          END
```


MACROS:

SYMBOLS:

ANM	3F99'	CHACEL	3DDF'	EXST	3E6C'	FLO	3E86'
FLOA	3ED7'	FTEST	3F8D'	IN1	3F61'	IN3	3F30'
IN4	3F76'	L1	3D52'	L10	3DD2'	L11	3DD5'
L12	3E7C'	L12A	3ECD'	L13	3EBD'	L13A	3F0E'
L14	3EC3'	L14A	3F14'	L15	3E8F'	L15A	3EE0'
L16	3EA1'	L16A	3EF2'	L4	3E30'	L5	3E68'
L8	3D79'	L8A	3DB4'	L9	3DC4'	M1	3F39'
M2	3F52'	M3	3F68'	M4	3F7F'	MATH	3F9E'
PGA	3FB5'	R2	3FBF'	SPTH	3F1E'	START	3D10'
STP	3F5F'	SUB2	3F92'	TL1	3D2E'	TL2	3D30'
TL3	3D34'	WAIT	3FA0'				

NO FATAL ERROR(S)

MICROFILMED FROM
BEST AVAILABLE COPY

8.0 REFERENCE

1. Ross, Irving and Edson, Ralph: An Electronic Control for an Electrohydraulic Active Control Aircraft Landing Gear. NASA Contractor Report 3113, April, 1979.

MICROFILMED FROM
BEST AVAILABLE COPY

1. Report No.	2. Government Accession No.	3. Recipient's Catalog No.
NASA CR-3552		

4. Title and Subtitle	5. Report Date
An Electronic Control for an Electrohydraulic Active Control Landing Gear for the F-4 Aircraft	April 1982
	6. Performing Organization Code
7. Author(s)	8. Performing Organization Report No.
Irving Ross and Ralph Edson	HR 74600000
	10. Work Unit No.
9. Performing Organization Name and Address	11. Contract or Grant No.
Hydraulic Research Textron, Inc. Valencia, CA 91355	NAS1-16420
	13. Type of Report and Period Covered
12. Sponsoring Agency Name and Address	Contractor Report
National Aeronautics and Space Administration Washington, DC 20546	14. Sponsoring Agency Code

15. Supplementary Notes

Langley Technical Monitor: John K. McGehee Final Report
Final Report

16. Abstract

HR Textron Inc., under NASA Contract NAS1-14459, has developed and designed a controller for an electro-hydraulic active control landing gear for the F-4 aircraft. A controller, developed under NASA Contract NAS1-14459, was modified for this application. Simulation results indicate that during landing and rollout over repaired bomb craters the active gear effects a force reduction, relative to the passive gear, of approximately 70%.

17. Key Words (Suggested by Author(s))	18. Distribution Statement
Aircraft Landing Gear Electronic Controls Active Controls Landing Loads	Unclassified - Unlimited Subject Category 05

19. Security Classif. (of this report)	20. Security Classif. (of this page)	21. No. of Pages	22. Price
Unclassified	Unclassified	92	A05

For sale by the National Technical Information Service, Springfield, Virginia 22161 NASA-Langley, 1982